

Overview

The JetNet 5728G Series is a 19-inch Gigabit Layer 2+ Industrial PoE Plus Managed Ethernet Switch equipped 20 100Base-TX and 4 100/1000Base-TX with 24/16 PoE Plus ports, 4 1000 SFP ports.

Model Name	Description
JetNet 5728G-24P-AC-2DC	20 100Base-TX and 4 100/1000Base-TX with 24 PoE Plus ports, 4 1000 SFP ports. Industrial Gigabit Managed PoE Plus Ethernet Switch, -40~75° C, AC and dual DC power
JetNet 5728G-24P-AC	20 100Base-TX and 4 100/1000Base-TX with 24 PoE Plus ports, 4 1000 SFP ports. Industrial Gigabit Managed PoE Plus Ethernet Switch, -40~75° C, AC power
JetNet 5728G-16P-AC-2DC	20 100Base-TX and 4 100/1000Base-TX with 16 PoE Plus ports, 4 1000 SFP ports. Industrial Gigabit Managed PoE Plus Ethernet Switch, -40~75° C, AC and dual DC power
JetNet 5728G-16P-AC	20 100Base-TX and 4 100/1000Base-TX with 16 PoE Plus ports, 4 1000 SFP ports. Industrial Gigabit Managed PoE Plus Ethernet Switch, -40~75° C, AC power


Package Check List

- ▶ The Rack Mount Managed Ethernet Switch
- ▶ Console cable
- ▶ Rack Mount kit
- ▶ Power Cord (Depend on Country)
- ▶ QIG

Interface Introduction


Dimension

JetNet 5728G Industrial 20FE+8G Gigabit Managed PoE Plus Ethernet Switch dimension is 44mm(H) x 431mm (W) x 375mm (D).

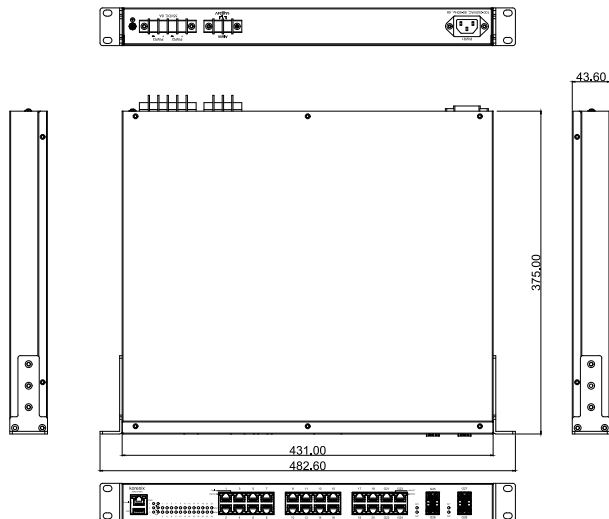

Front-Panel Components

The front panel includes RJ-45 based RS-232 console port, USB port, System & port LEDs, Fast Ethernet port interfaces and Gigabit port Interfaces.

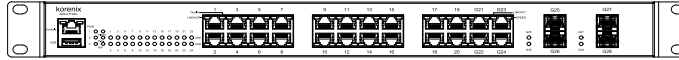

Back-Panel Components

The back panel of the JetNet 5728G Industrial 20FE+8G Managed PoE Plus Ethernet Switch consists of AC power input, DC power input and relay output depend on different Model.

JetNet 5728G-24P-AC-2DC/5728G-16P-AC-2DC:




JetNet 5728G-24P-AC/ 5728G-16P-AC:



Model Name	Back-Panel Components
JetNet 5728G-24P-AC-2DC	1 AC power input, 2 DC power inputs and 1 relay output.
JetNet 5728G-24P-AC	1 AC power input and 1 relay output.
JetNet 5728G-16P-AC-2DC	1 AC power input, 2 DC power inputs and 1 relay output.
JetNet 5728G-16P-AC	1 AC power input and 1 relay output.

LED Indicators

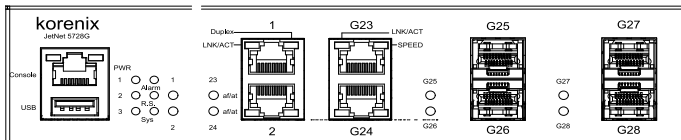

LED	Color	Function
PWR	Green	Power (1, 2, 3) on
Alarm	Red	Power failure, port failure, ping failure, login failure, RSR topology change
R.S.	Lit Green	MSR in normal state
	Lit Yellow	MSR in abnormal state
	Not Lit	MSR function not active
	Flashes Green	Incorrect configuration of MSR, ex. ring not connected to ring port
Flashes Yellow	The break has been detected to be local to one of the ports	
Sys	Green	System on
1-20, G21-G24 Copper LNK/ACT	Lit Green	Link
	Flashes Green	Activity
1-20, G21-G24 Copper af/at	Green	802.3af PoE Powering
	Blue	802.3at PoE Powering
G25-G28 Giga SFP LNK/ACT	Lit Green	Link
	Flashes Green	Activity

Installation

Mount the Switch to 19' rack

1. Attach the brackets to the device by using the screws provided in the Rack Mount kit.
2. Mount the device in the 19" rack by using four rack-mounting screws provided by the rack manufacturer.
3. When installing multiple switches, mount them in the rack one below the other.



Note: Check if the rack environment temperature conforms to the specified operating temperature range. Do not place any equipment on top of the switch and please properly grounded.



Power the unit and connect to network Cable

AC Power Input: connect the attached power cord to the AC power input connector, the available AC power input is range from 90-264VAC.

DC Power Input: the suggested power input is 44-57VDC(IEEE 802.3af), 50-57VDC(IEEE 802.3at).

Follow below steps to wire JetNet 5728G redundant DC power inputs.

1. Insert positive and negative wires into V+ and V- contacts respectively of the terminal block connector.
2. Tighten the wire-clamp screws to prevent DC wires from being loosened.
3. DC1 and DC2 support polarity reverse protection functions.

Wiring Digital Output

JetNet 5728G series provides 1 digital output, also known as relay output. The relay contacts are energized (open) for normal operation and will close for fault conditions. The fault conditions include power failure, Ethernet port link break or other pre-defined events which can be configured in JetNet 5728G UI.

Wiring Earth Ground

To ensure the system will not be damaged by noise or any electrical shock, we suggest you to make exact connection with JetNet 5728G with earth ground.

For AC input, the 3 pin include V+, V- and GND. The GND pin must be connected to the earth ground.

For DC input, loosen the earth ground screw by screw drive; then tighten the screw after earth ground wire is connected.

Wiring Gigabit Ethernet Ports

The Gigabit Ethernet ports support 100Base-TX and 1000Base-TX, full or half duplex modes. All the Gigabit Ethernet ports will auto-detect the signal from connected devices to negotiate the link speed and duplex mode. Auto MDI/MDIX allows users to connect another switch, hub or workstation without changing straight through or crossover cables.

Note that crossover cables simply cross-connect the transmit lines at each end to the received lines at the opposite end.

Wiring Fiber Ports

The SFP ports accept standard Gigabit MINI GBIC SFP transceiver. But, to ensure system reliability, Korenix recommends using the Korenix certificated Gigabit SFP Transceiver. The web UI will show Unknown vendor type when choosing the SFP which is not certificated by Korenix. The certificated SFP transceiver includes BIDI/WDM, 1000Base-SX/LX single/multi mode. The way to connect the SFP transceiver is to Plug in SFP fiber transceiver fist. Cross-connect the transmit channel at each end to the receive channel at the opposite end. The SPF cage is 2x1 design, check the direction/angle of the fiber transceiver and fiber cable when inserted.

Wiring RS-232 Console Cable

JetNet 5728G attaches one RS-232 cable in the box. Connect the DB-9 connector to the COM port of your PC, open terminal tool and set up serial settings to 115200, N, 8, 1. (Baud Rate: 115200 / Parity: None / Data Bit: 8 / Stop Bit: 1) Then you can access CLI interface by console cable.

Note: If you lost the cable, please contact with your sales or follow the pin assignment to buy a new one.

Device Management

Preparation for Web management

Before you attempt to use the embedded web interface to manage switch operation, verify that your JetNet 5728G is properly installed on your network and that every PC on this network can access the switch via the web browser.

1. Launch the web browser (Internet Explorer or Mozilla Firefox) on the PC.
2. Type `http://JetNet 5728G_IP_Address` (The default IP address is 192.168.10.1.) then press Enter.
3. The login screen will appear next. Key in the user name and the password. The default user name and password is admin/admin.
4. Click OK, and then the Home page of the web-based management interface will appear.
5. At the left column of the web management interface is the software function. The right column lists the available settings. The top column indicates the front panel and shows the link status of each interface.

Preparation for Telnet management

Go to Start ▶ Program ▶ Accessories ▶ DOS Prompt, Type Telnet 192.168.10.1 (Default IP Address) then press Enter.

Device Management

JetNet 5728G Rack Mount Managed Ethernet Switch provides both in-band and out-band configuration methods. You can configure the switch via the RS232 console with the attached console cable. Or you can remotely manage the switch via network. You can choose Telnet/SSH, Web/HTTPS management.

Preparation for console management

Attach the RS-232 DB9 connector to your PC's COM port. Connect the RJ-45 based RS-232 connector to the console port of the JetNet 5728G.

1. Go to Start ▶ Program ▶ Accessories ▶ Communication ▶ Hyper Terminal
2. Give a name to the new console connection.
3. Choose the COM name, and select the correct serial settings. The serial settings of the JetNet 5728G are as below:
Baud Rate: 115200 / Parity: None / Data Bit: 8 / Stop Bit: 1
4. After connected, you can see Switch login request. Type the username and password then you can login. The default username is "admin", password is "admin".
5. Follow the manual to configure the software features.

Support

5 Years Warranty

Each of Korenix's product is designed, produced, and tested with high industrial standard. Korenix warrants that the product(s) shall be free from defects in materials and workmanship for a period of five (5) years from the date of delivery provided that the product was properly installed and used.

This warranty is voided if defects, malfunctions or failures of the warranted product are caused by damage resulting from force measure (such as floods, fire, etc.), other external forces such as power disturbances, over spec power input, or incorrect cabling; or the warranted product is misused, abused, or operated, altered and repaired in an unauthorized or improper way.

Attention! To avoid system damage caused by sparks, please DO NOT plug in power connector when power is on.

The product is in compliance with Directive 2002/95/EC and 2011/65/EU of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances in electrical and electronics equipment (RoHS Directives & RoHS 2.0)

Korenix Customer Service

KoreCARE is Korenix Technology's global service center, where our professional staffs are ready to solve your problems at any time.

Korenix global service center: KoreCARE@korenix.com.

Korenix Technology Co., Ltd. (A Beijer Electronics Group Company)

Tel: +886-2-89111000

Fax: +886-2-29123328

Business service: sales@korenix.com

Customer service: koreCARE@korenix.com

www.korenix.com

CPQ000N5728002

Patent No. (Taiwan):
Granted Invention: I 313547
Granted Invention: I 321415
Granted Invention: I 344766
Granted Invention: I 346480
Granted Invention: I 356616
Granted Invention: I 376118
Granted Invention: I 393317
Granted Invention: I 398066
Granted Invention: I 398125
Granted Invention: I 459757
Utility Model: M 339841
Utility Model: M 339840