



JetNet 6710G/ JetNet 6810G User Manual

**Korenix JetNet 6710G /JetNet 6810G Series
Industrial 8-Port PoE + 2 Gigabit TX
Managed Ethernet Switch**

User Manual

Ver. 1.1, 17-Feb-2014

Firmware v1.1/v1.1b (HVDC)



www.korenix.com



JetNet 6710G/ JetNet 6810G User Manual

**Korenix JetNet 6710G / JetNet 6810G Series
Industrial 8 Port PoE + 2 Gigabit TX Managed
Ethernet Switch
User's Manual**

Copyright Notice

Copyright © 2012 Korenix Technology Co., Ltd.

All rights reserved.

Reproduction in any form or by any means without permission is prohibited.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his expense.

The user is cautioned that changes and modifications made to the equipment without approval of the manufacturer could void the user's authority to operate this equipment.

Index

1	Introduction.....	3
1.1	Overview.....	3
1.2	Major Features	7
1.3	Package List.....	8
2	Hardware Installation.....	10
2.1	Hardware Introduction	11
2.2	Wiring Power Inputs.....	16
2.3	Wiring RS-232 console and Relay Output	17
2.4	Wiring Earth Ground & Lighting /Surge Ground.....	19
2.5	Wiring Fast Ethernet Ports.....	20
2.6	Wall-Mounting Installation.....	25
3	Preparation for Management.....	26
3.1	Preparation for Serial Console.....	26
3.2	Preparation for Web Interface.....	27
3.3	Preparation for Telnet Console	30
4	Feature Configuration.....	33
4.1	Command Line Interface Introduction.....	34
4.2	Basic Setting.....	41
4.3	Port Configuration.....	61
4.4	Power over Ethernet.....	69
4.5	Network Redundancy	78
4.6	VLAN	98
4.7	Private VLAN	107
4.8	Traffic Prioritization	113
4.9	Multicast Filtering.....	119
4.10	SNMP	124
4.11	Security.....	128
4.12	Warning	135
4.13	Monitor and Diag	146
4.14	Device Front Panel	154
4.15	Save to Flash.....	155
4.16	Logout.....	156
5	Appendix.....	157
5.1	JetNet 6710G Product Specifications	157
5.2	JetNet 6810G Product Specifications	162
5.3	Korenix Private MIB for JetNet 6710G and JetNet 6810G.....	166
5.4	Revision History.....	169
5.5	About Korenix	170



1 Introduction

Welcome to Korenix *JetNet 6810G* Series Industrial 8-Port PoE + 2G Managed Ethernet Switch User Manual. Following topics are covered in this chapter:

1.1 Overview

1.2 Major Features

1.3 Package Checklist

1.1 Overview

The eight 10/100 TX PoE injector ports can deliver up to 200W (JetNet 6710G) and 120W (JetNet 6810G) power per unit and 15.4W /30W per port by IEEE 802.3af / IEEE 802.3at standards to fulfill local increasing PoE demands. The two Gigabit Ethernet ports provide high speed uplink to connect with higher level backbone switches with Korenix MSR™ network redundancy technology. Korenix MSR™ can recover the network failure in less than 5ms. To work under vibration and shock environments, the industrial M12 connectors provide exceptional solid Ethernet and PoE connections. Korenix JetNet 6710G-M12 /JetNet 6810G-M12 / JetNet 6710G-RJ/ JetNet 6810G-RJ series, the revolutionary Gigabit Managed Industrial Power over Ethernet Switches with patented 24V to 57V Power booster technology embedded in JetNet 6810G series , are specifically designed for making the deployment of standard PoE IP cameras feasible on buses, railcars, ships, harbors, etc. With the smart thermal detection function, the JetNet 6810G isolated power booster becomes an intelligent and reliable power control device for PoE vehicle applications in harsh environments with high temperature variations.

.Driving the IP Surveillance Market

Since the ratification of the Power over Ethernet standard in 2003, the Power over Ethernet technology becomes a trend; more devices adopt PD technology to obtain power through Ethernet cable eliminating the need of running separate power wirings to a remote device. The JetNet 6710G-M12/JetNet 6810G-M12 /JetNet 6710G-RJ/JetNet 6810G-RJ are equipped with the new PSE solution, compliant with IEEE 802.3af/at standard and forced powering mode. It supports 8 PoE ports in End-span wiring

architecture with 120W or 200W per unit at 60°C operating temperature, to drive the IP cameras for cross-street monitoring or WiMAX systems for internet access at train stations, airports or Hot-spots.

Power Budget Limitation with Port plug-in priority Control

The JetNet 6710G/JetNet 6810G series provides system power budget and port budget control to ensure that the total power consumption will not exceed the power limit installed by user. It also provides budget control function to limit the output power in case if the PD device is not claimed right consumption numbers. This feature allows user to protect high priority PD devices from shut down caused by overloading of the power supply.

Isolated 24V DC PoE Booster for Vehicle Deployment

JetNet 6810G-M12 series is designed with the Korenix patented DC 24V to 57V boost technology for vehicle PoE applications where DC 57V power supply is not available. The DC booster supports High-pot isolation feature to protect the device from the lightning and surge of the Ethernet cable and meets IEEE mandate safety requirement of Power over Ethernet and UL safety requirement of TNV-1 circuit. The isolated system design allows JetNet 6810G series efficiently powering outdoor PD equipments, such as Wireless AP, WiMax systems, Outdoor IP cameras and other PoE-enabled devices. With the booster technology it provides fast, easy and cost-effective solution for configuring PoE networks on transportation and automation applications.

Smart Thermal & Power Booster Protection

As states the rule of "The Principle of Conservation of Energy", the energy remains constant and cannot disappear in any isolated system, but can be converted to another form. This rule is the same in electrical circuit, where it can generate heat and become higher when the loading is more and therefore, can cause a system shut-down. To avoid this situation, JetNet 6810G series adopts thermal detector to check the temperature of DC booster and adjust the available PoE output to ensure the DC booster is working under safety temperature. This behavior refers to the output curve of power booster; Once the temperature exceeds the limit, system will turn off the PSE port. This feature makes JetNet 6810G -RJ PoE switch an intelligent power control device that helps you to maintain the PD devices under specific temperatures.

Rugged RJ45 /m12 Connectors Against Vibration and Shock

In most occasions, PD devices installed in industrial environments are being subjected to vibration, shock, dust and other environmental threats. Korenix has designed JetNet 6710G / JetNet 6810G series with 8 rugged RJ45 or m12

Ethernet connectors resistant to vibration and shock and ideal solutions for outdoor networking applications, such as telecom, outdoor surveillance, wireless AP connections etc.

Rapid Super ring (RSR™) Technology

Rapid Super Ring is the 2nd generation of Korenix Ring Redundancy technology. The recovery time is greatly improved from 30ms to few ms for both copper and fiber ring. The Ring master can be auto-selected by RSR engine. The 1st ring port of the R.M. is the primary path while the 2nd ring port of the R.M. is the block path. Once the primary path fails, the 2nd path will be recovered within few ms. Besides, the restore time is also shortened to zero in the R.M. auto-selection mode.

Comprehensive Redundant Solutions – Multiple Super Ring (MSR™)

The JetNet managed PoE Switch supports new generation ring technology - MSR™ (Multiple Super Ring) which includes various new technologies for different network redundancy applications and structures. The JetNet 6710G/ JetNet 6810G allows aggregating up to 5 Rapid Super Rings, including 4 Fast Ethernet plus 1 Gigabit Ethernet Rings. With the MSR™ technology, a node can be configured to multiple rings with the failover time in as little as 5ms and zero-second of restoration time. In addition, users can extend the ring topology by adding hundreds of JetNet series to meet the large-scale network needs without compromising the network speed. The MSR™ also allows the JetNet series to easily connect with core management switches via standard Rapid Spanning Tree protocol or through multiple paths or nodes to increase the reliability by RDH™ (Rapid Dual Homing) technology. By integrating MSR™ and Link Aggregation Control Protocol (LACP) the JetNet series can enhance the link availability and increase the overall link capacity. Two or more Fast Ethernet connections are combined in order to increase the bandwidth and to create a resilient and redundant link.

Seamless Ring Port Restoration™

Seamless restoration is a new Korenix patented technology which can restore a failed ring without causing any loop problem, topology change and packet loss. With a 0 second restoration time, this mechanism eliminates any unstable status and guarantees the applications running non-stop.

Rapid Dual Homing (RDH™) Technology

Rapid Dual Homing is also the important feature of Korenix new generation Ring technology. It supports ring coupling with other vendors and with easy configuration and multiple redundancies, the failover time is much faster and the restore time is zero ms. Uplinks can be auto detected and gathered into

groups. In each group, uplinks are sorted into primary, secondary and standbys by their link speed. The uplink with the highest speed is more likely to be active path for data transmission. Link aggregation is also integrated into RDH™. An uplink connection can be a single link or several links aggregated as a trunk, which provides better redundancy and link capacity.

TrunkRing™

TrunkRing is a new feature in MSR which merges the two technologies of RSR and link aggregation. It takes advantages of aggregation to enhance the link redundancy, while increase the link speed. The ring will open only if all the aggregated links are broken. Link aggregation can be achieved by either, static trunk or LACP. Not all the link sections in a TrunkRing need to be the same. Ring links can be either symmetric or asymmetric. Some are a single path, and the others are aggregated by links where the number of links in a trunk group can be different. Users can enhance the link redundancy at different locations in accordance to the need. And the link with less speed is more likely to be used as the backup path for restoring the network to full play capacity.

Link Aggregation Control Protocol

Link Aggregation Control Protocol allows you grouping multiple Ethernet ports in parallel to increase the link bandwidth. The aggregated ports can be viewed as one physical port, so that the bandwidth is higher than just one single Ethernet port. The member ports of the same trunk group can balance the loading and backup with each other. The LACP feature is usually used when you need higher bandwidth for the backbone network. This is a cost-effective way for you to transfer much more data.

Multi Powering Mechanism- User Manual, Forced and IEEE 802.3at LLDP Power over Ethernet

Some of Legacy PD devices also feature user defined manual mode and forced powering mode to support non-standard PD devices without the PoE signature resistor for some WiMax systems, which are non-compliant with IEEE 802.3at LLDP Power over Ethernet.

For the new PoE standard – IEEE 802.3at, JetNet 6810G implements Link Layer Discovery Protocol (LLDP) into the system for allowing power budget negotiation between PD devices while providing smart power budget control behavior.

Auto Topology Discovery & Efficient Management through LLDP and JetView Pro i2NMS

Korenix 's Managed Ethernet Switches support topology discovery or LLDP (IEEE 802.1AB Link layer Discovery Protocol) function that can help users to discover multi-vendor's network devices on the same segment by an NMS system, which support LLDP function. With LLDP function, NMS can easily maintain the topology map, display port ID, port description, system description, VLAN ID, etc. Once a link failure happens, the topology changed events are updated to the NMS to help users easily maintain the network system. Besides the SNMP and LLDP protocols, JetNet 6810G series efficiently works with the Korenix patented JetView Pro i2NMS, which in addition to the auto-topology discovery, also delivers MSR™ group management, group IP assignment, firmware upgrade, configuration file backup/ restore ,SNMP MIB Browser /compile, etc. Furthermore, users can export the topology map to diverse formats, such as JPG, BMP, PNG and PDF, for easily managing and trouble-shooting the network. The user-friendly software allows administrators to discover devices automatically and efficiently manage the performance of the industrial network.

Outstanding Management and Enhanced Security

The JetNet 6710G/JetNet 6810G series provides various network control and security features to ensure the reliable and secure network connection. To optimize the industrial network environment, JetNet 6710G/ JetNet 6810G series supports advanced network features, such as Tag VLAN, Private VLAN, QinQ, IGMP Snooping, Quality of Service (QoS), Link Aggregation Control protocol (LACP), Rate Control, etc. To avoid hacker's attack and ensure the secure data transmission, JetNet 6710G/JetNet 6810G series features DHCP client/Server/option 82 (DHCP relay) with IP MAC binding, IEEE 802.1x Access control, SSH for telnet security, IP access table, port security and many other advanced features for your industrial network communication.

1.2 Major Features

Korenix JetNet 6810G/ JetNet 6710G Series products have the following features:

- 8 10/100 Base TX PoE and 2 Gigabit uplink ports
- Rugged RJ45 Ethernet connectors to protect from vibration and shock applications such as PoE in Tram, Rail or Highway
- 8 PoE ports support IEEE 802.3af/IEEE 802.3at standard with 120W total power budget (JetNet 6810G series)
- 8 PoE ports support IEEE 802.3af/IEEE 802.3at standard with 200W total power budget (JetNet 6710G series)
- 8 PoE ports support IEEE 802.3f/ IEEE802.3at standard with 120W

total power budget (JetNet 6710G-HVDC series), 100W Power at 70° C.

- Built-in Isolated 24V to 57V DC PoE Booster for vehicle use (JetNet 6810G series)
- Built-in 77V ~137.5Vdc input isolated power buckler with DC 48V output for vehicle IP surveillance use (JetNet 6710G-HVDC series)
- 32Gbps switch Fabric, 8K MAC address
- All ports support Korenix patented RSR with 5ms recovery time, and MSR for up to 4 x 100M Rings plus 1 Gigabit Ring
- IEEE 802.1AB LLDP and optional JetView Pro i2NMS software for auto-topology and group management
- Tag VLAN for multiple VLAN traffic isolation and QinQ for private VLAN
- LACP port trunk for bandwidth aggregation in video surveillance
- Auto Power Budget Control with Thermal Detection
- Alarm Relay output for port event
- AC 1.5KV Hi-Pot Isolation Protection for ports and power
- EN 50121-4 EMC certification for railway installations
- IEC 61373 Vibration and Shock certificate for railway indtallation
- -40~70°C wide operating temperature

Note: The detail spec is listed in Appendix 5.1 and 5.2

1.3 Package List

Korenix JetNet 6710G/ 6810G Series products are shipped with following items that indicated in the table:

	JetNet 6710G-M12	JetNet 6710G-RJ	JetNet 6810G-M12	JetNet 6810G-RJ	JetNet 6710G-m12 HVDC	JetNet 6710G-RJ HVDC
JetNet 6710G Managed High Power IEEE 802.3at PoE Switch (M12 / Rugged RJ)	1	1				
JetNet 6710G-HVDC Managed High Power IEEE802.3at PoE Switch (M12/Rugged RJ)					1	1
JetNet 6810 Managed Booster PoE Switch (M12 / Rugged RJ)			1	1		
M12 on DB9 Shielded Console Cable	1	1	1	1	1	1

Rugged M12 D-coded 4-pole Field Assemble able Connector	8		8		8	
Rugged M12 A-coded 8-pole Field Assemble able Connector	2		2		2	
Rugged RJ45 Field Assemble able Connector		10		10		10
Rugged IP 67 DC power connector (4-pin)	1	1	1	1		
Rugged M12 A-coded 4-pin Field Assembly able Power Connector					1	1
2 Wall-Mount kits & 8 Screws	1	1	1	1	1	1
Quick Installation Guide	1	1	1	1	1	1
Documentation and Software CD-ROM	1	1	1	1	1	1

If any of the above items is missing or defect, please contact your local sales representative.

2 Hardware Installation

This chapter includes hardware introduction, installation and configuration information.

Following topics are covered in this chapter:

2.1 Hardware Introduction

Dimension

Panel Layout

Bottom View

2.2 Wiring Power Inputs


2.3 RS-232 console and relay output

2.4 Wiring Earth ground


2.5 Wiring Ethernet Ports


2.6 Wall-mounting Installation

JetNet 6710G-m12 HVDC

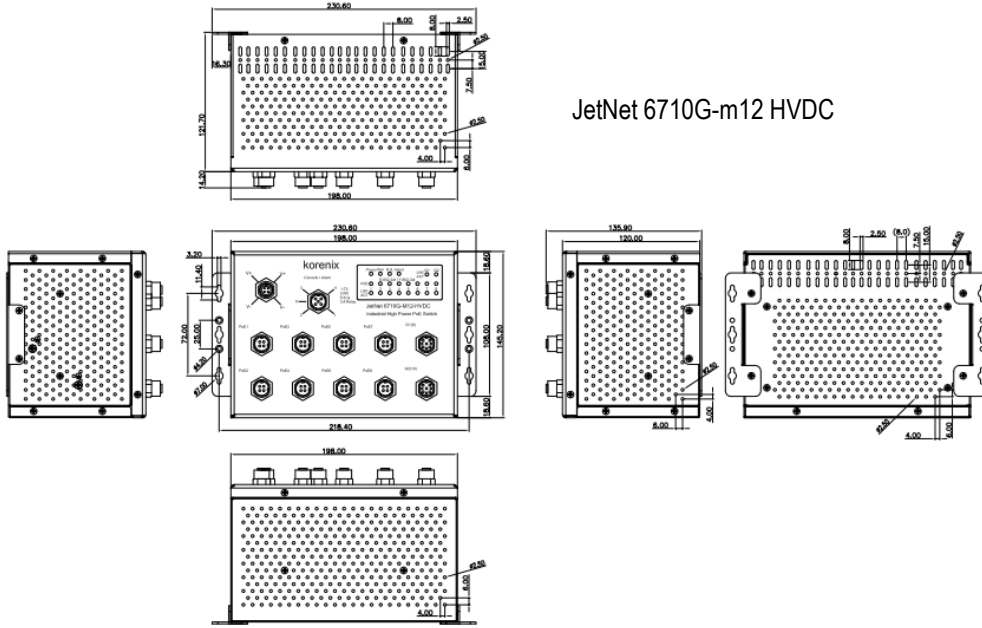


JetNet 6710G-RJ HVDC

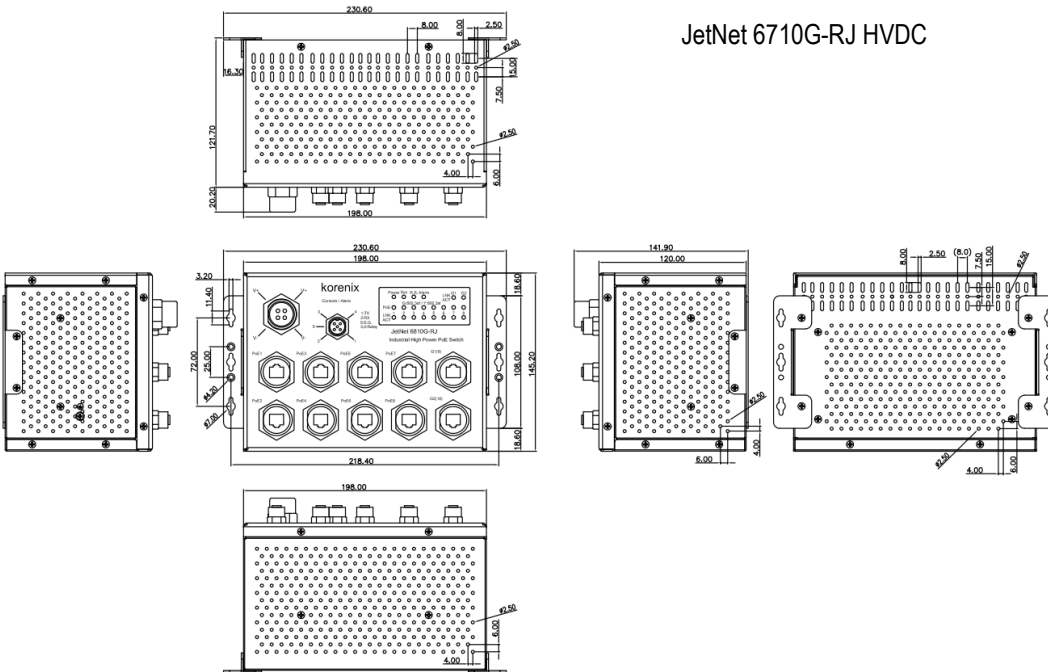

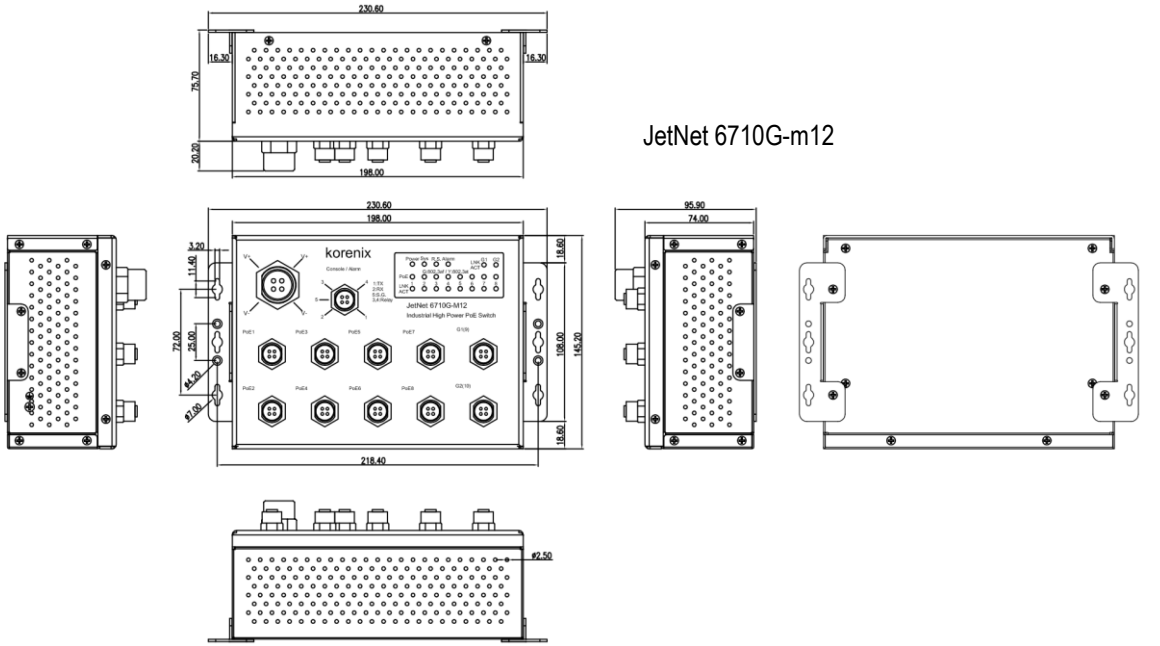


JetNet 6710G-m12

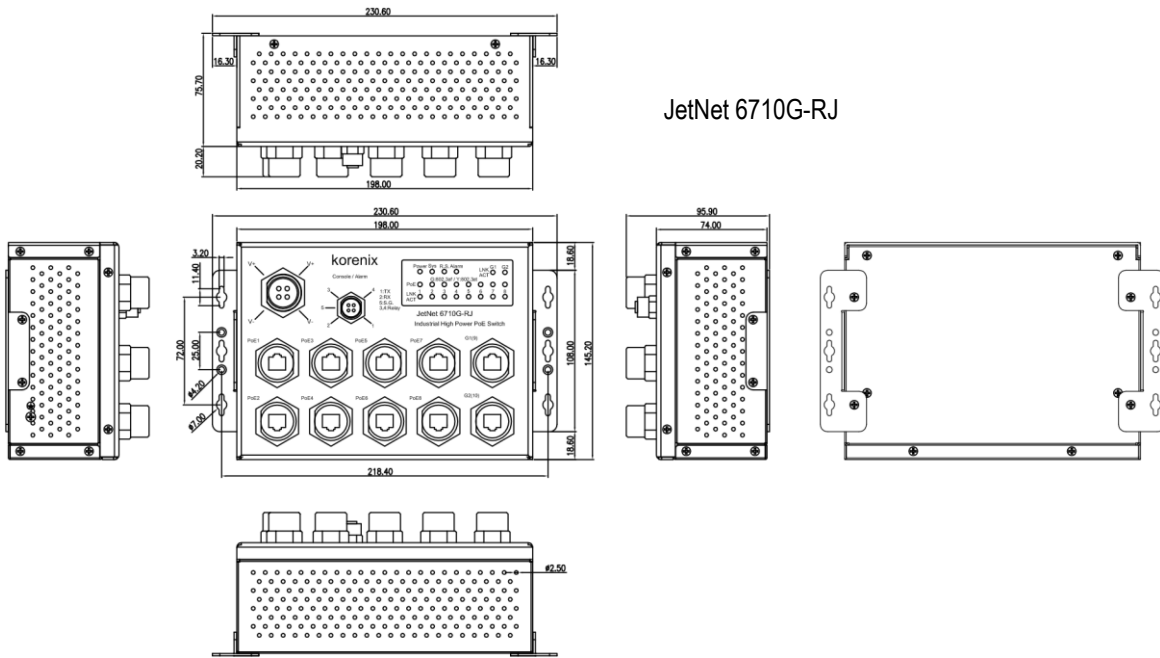


JetNet 6710G-RJ


Panel Layout

The front panel includes 10/100Mbps PoE ports, Gigabit Ethernet ports, RS232 console with DO port, System / Port LED and Power input.

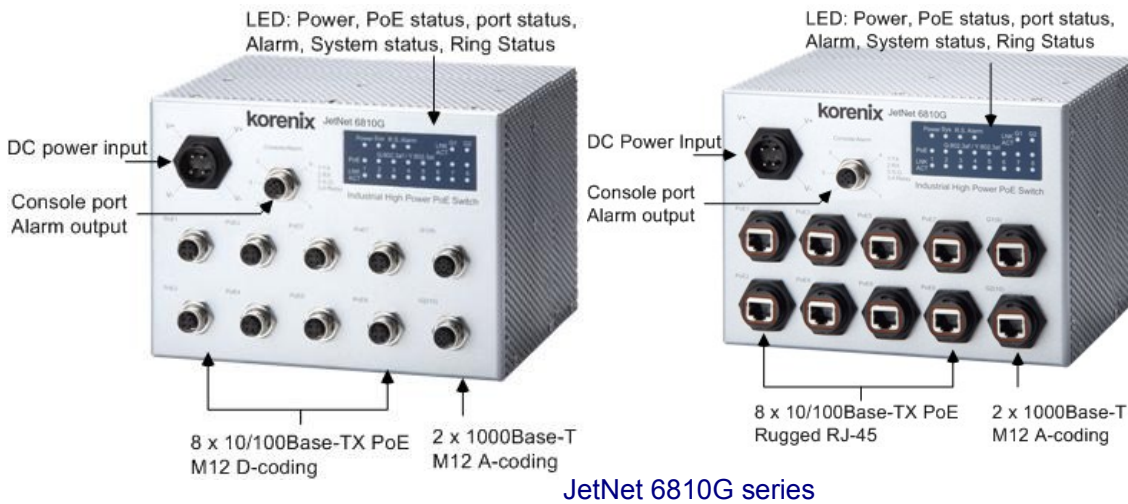

Note: the Jetnet 6810G's power input conductor does not support redundant power input function and must aggregate two V+ conductors as one input circuit to get high current carry ability; as well as the V- conductors.

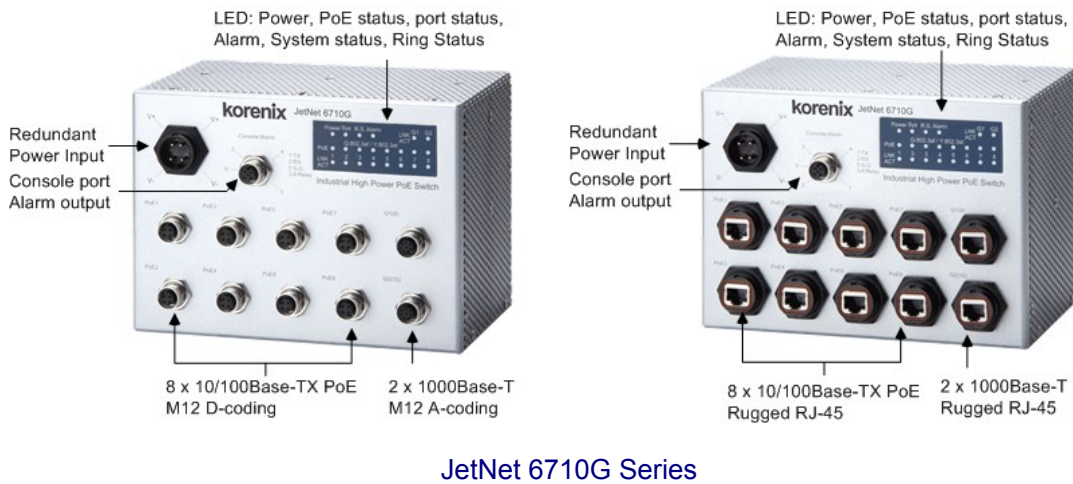

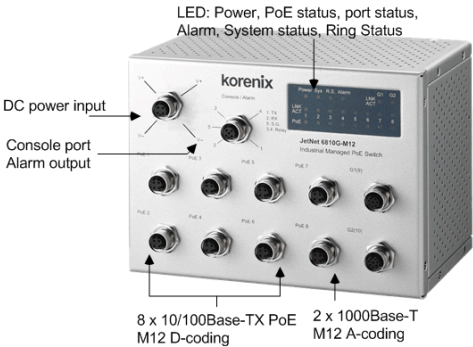

JetNet 6710G-m12 HVDC

2.2 Wiring Power Inputs

The Power input port is located at the top of the front panel and supports redundant input function via a proprietary assembly capable IP-67 connector (CDG-L207SA) included in the shipment. If you cannot find this power connector, please contact your local distributor. For the available input power range and recommended cable size, please refer to the below table.

	Power Input (DC Voltage)			Input Conductor	Cable Size
	Minimum	Maximum	Recommended		
JetNet 6710G-M12	48	60	48	V1, V2	AWG 14 / 2.0
JetNet 6710G-RJ	48	60	48	V1, V2	AWG 14 / 2.0
JetNet 6710G-HVDC	77	137.5	100	V1,V2	AWG 14/ 2.0
JetNet 6810G-M12	22	27	24	V1, V2 bind together	AWG 14 / 2.0
JetNet 6810G-RJ	22	27	24	V1, V2 bind together	AWG 14 / 2.0

Table 2 Power Input Voltage

The JetNet 6810G only supports single power input that binds V1 and V2 together to obtain higher current for the booster. Use the UL listed LPS Switching power supply to powering the JetNet Switch. For the power wiring method, please refer to the figures 2.2-1 and 2.2-2. For system safety and the anti-immunity ability, the chassis ground screw should be well grounded to the earth ground.

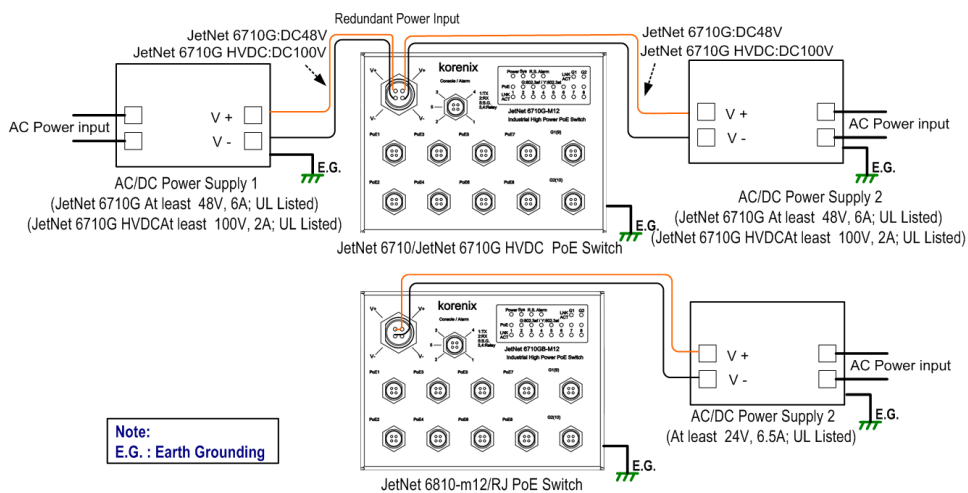


Figure 2.2-1 Power Wiring Diagram

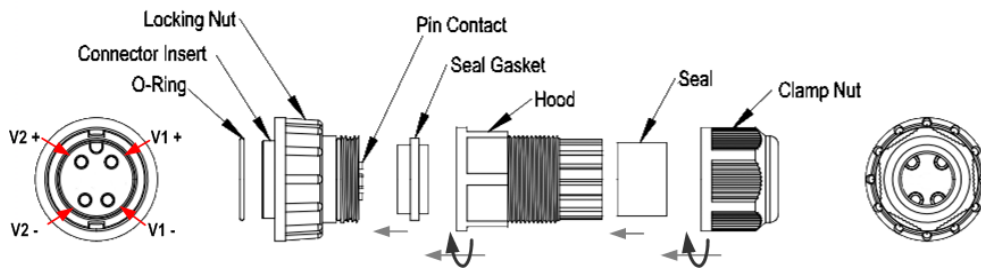


Figure 2.2-2 Power connector assembly diagram

2.3 Wiring RS-232 console and Relay Output

The RS-232 console and the alarm relay are connected via the assembly type of 5-pole M12 A-coding connector included in the supplied package of JetNet switch. The following figure 3-2-1 is the disassembly diagram of M12 A-coding connector.

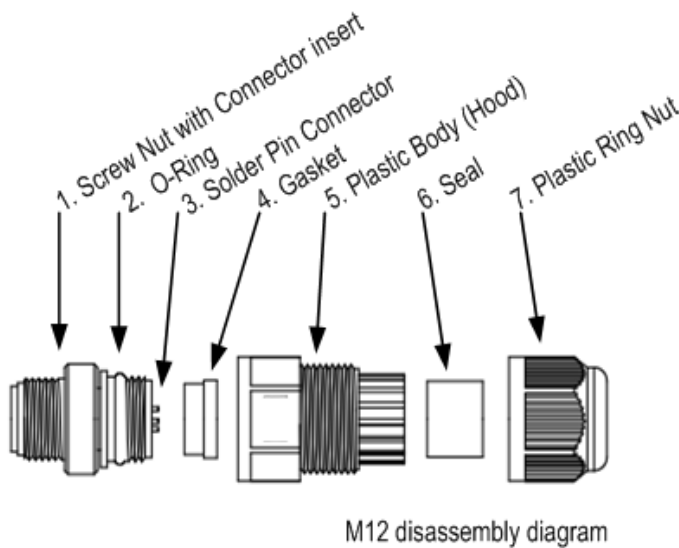


Figure 2.3-1 Field Assemble M12 disassembly

In the M12 connector packing, the parts 1, 2, 3 are already assembled. Follow the steps for soldering and assembling the cable and connector together:


Step -1: Slide component 4, 5, 6 and then 7 over the console cable. Keep them loose. Do not tighten them yet. 2 cable glands are provided for cable diameter from



3.5 to 5.8 mm. Choose the one that best fits the cable.

Picture 8

Step-2: Solder the conductors with the copper wires according to the pin assignment. The soldering side view of the pin is shown as below:

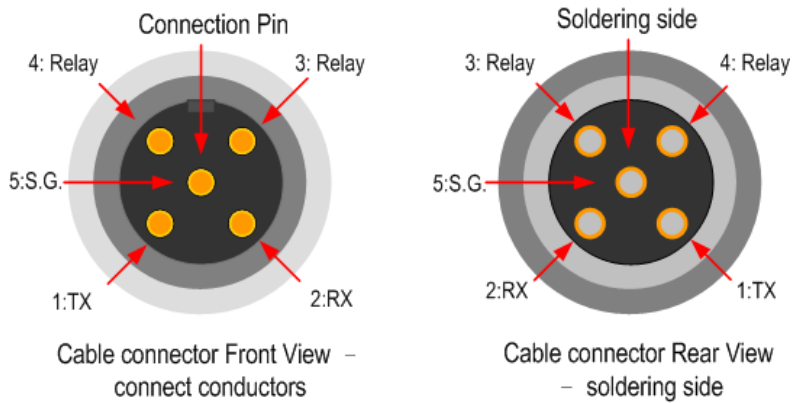

Picture 9 - Console port pin assignment

Step-3: Fasten the components 4, 5, 6 and 7 in sequence. Be sure the gasket is on the right position. See the below M12 assembly diagram:



1. assembly part 1 and 4, ensure the solder pins are protected by part 4 - gasket, then locking part 1 and 5.



2. insert part 6- seal into part 5



3. Locking part 5 and 7.



4. Finalized

Picture 10 – M12 Assembly

2.4 Wiring Earth Ground & Lighting /Surge Ground


To ensure the system will not be damaged by noise or any electrical shock, we suggest you to make exact connection with JetNet 6710G /JetNet 6810G with Earth Ground.

On the left side of JetNet 6710G/6810G, there is one earth ground screw. Loosen the earth ground screw by screw driver; then tighten the screw after earth ground wire is connected. To resistance the electromagnetic interfere, the chassis ground must well connection with earth ground.

The Lighting /Surge Grounding also present on the left side, and nearby wall mounting screw holes. It is designed to provide a surge noise leaking grounding loop for inner surge protection-circuit.

Remove the surge screw before perform insulation testing, in case if not remove will damage the protect function.

It is recommended direct connects to surge grounding system.

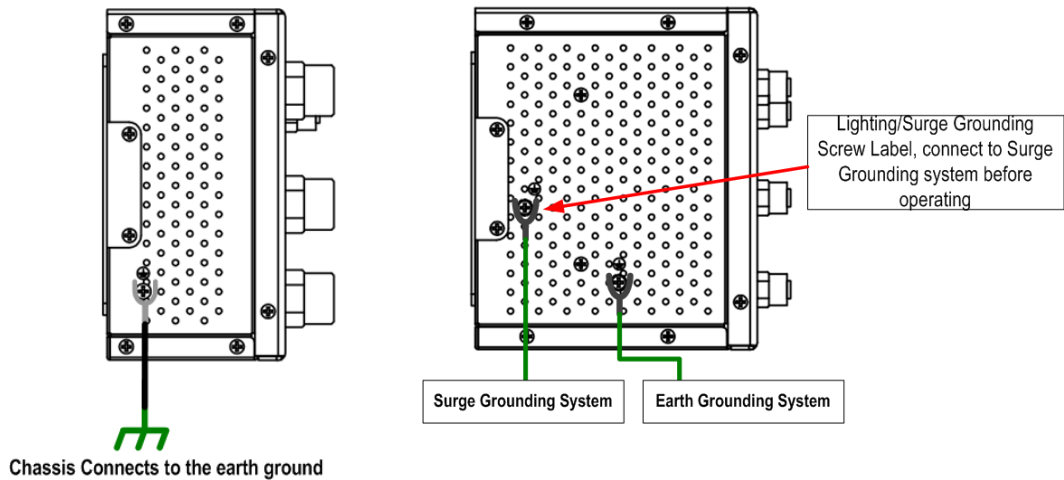

2.5 Wiring Fast Ethernet Ports


You can connect terminal devices and other segments via twisted pair cables. Ports which are not assigned should be closed with the covering caps contained in the package list of delivery to guarantee the connector is clear without rust.



Never install or work on/with the equipment or the cabling during the period of its lightning activity.


Assembly of M12 Ethernet Connector

For Fast Ethernet M12 D-Code to M12 D-Code connection, you can use either version below:

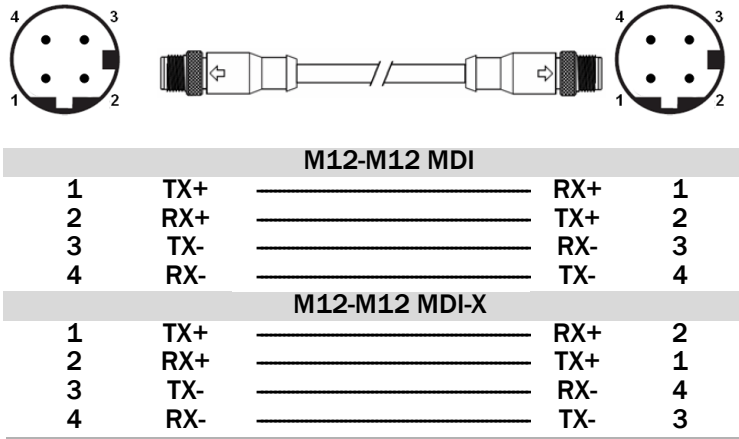


Picture 14 M12-to-M12 Ethernet Cable Wiring

For Fast Ethernet M12 D-Code to RJ45 connection, the pin assignment of the patch cable is shown below:

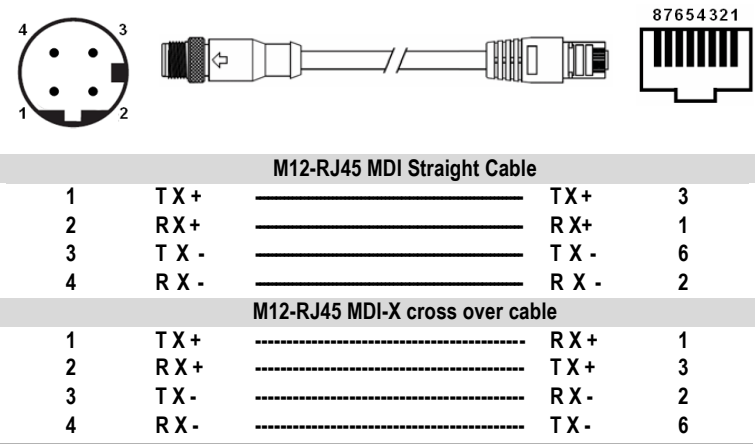


Picture 15 M12-to-RJ45 Ethernet Cable Wiring (May,2012 updated)

For Gigabit Ethernet M12 A-Code to RJ45 connection, the pin assignment of the patch cable is shown below,

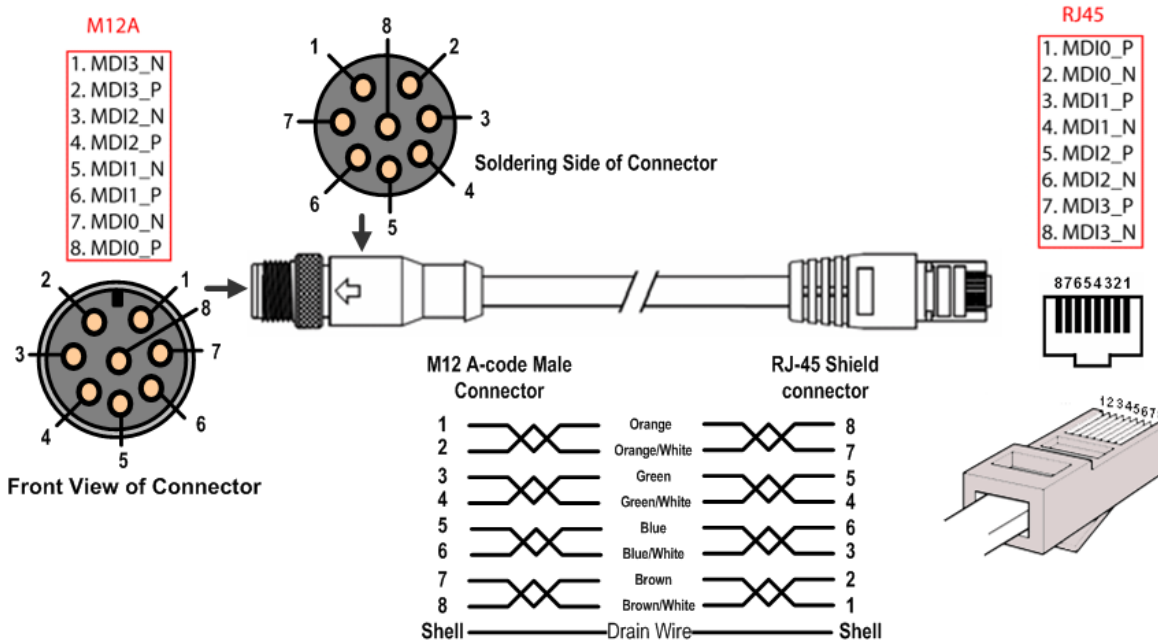

Picture 16 Gigabit M12-to-RJ45 Ethernet Cable Wiring


For Gigabit Ethernet M12 A-Code to M12 A-Code connection, the pin assignment of the patch cable is shown below.

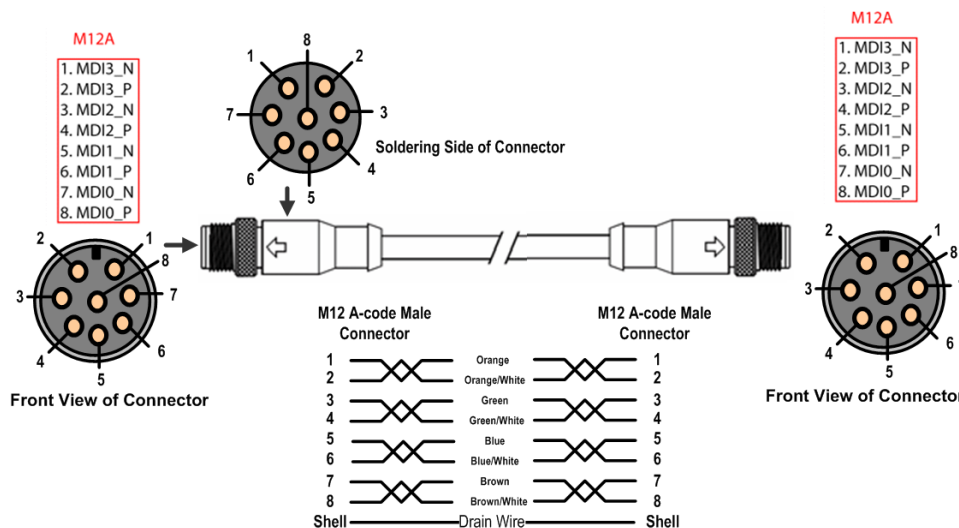

Picture 16-1 Gigabit M12-to-M12 Ethernet Cable Wiring


Assembly of Rugged RJ45 Connector (JetNet 6710G-RJ/JetNet 6810G-RJ)

The RJ version provides robust connection by the field assembly capable rugged RJ45 connector. Each component of the connector is shown below:

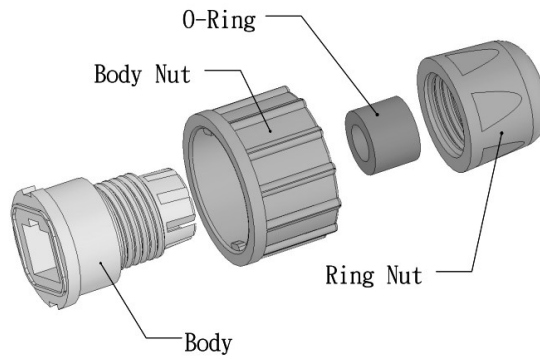

Picture 17 Rugged RJ45 Connector Components

Follow the steps to assemble the rugged RJ45 connector: (Picture 18)

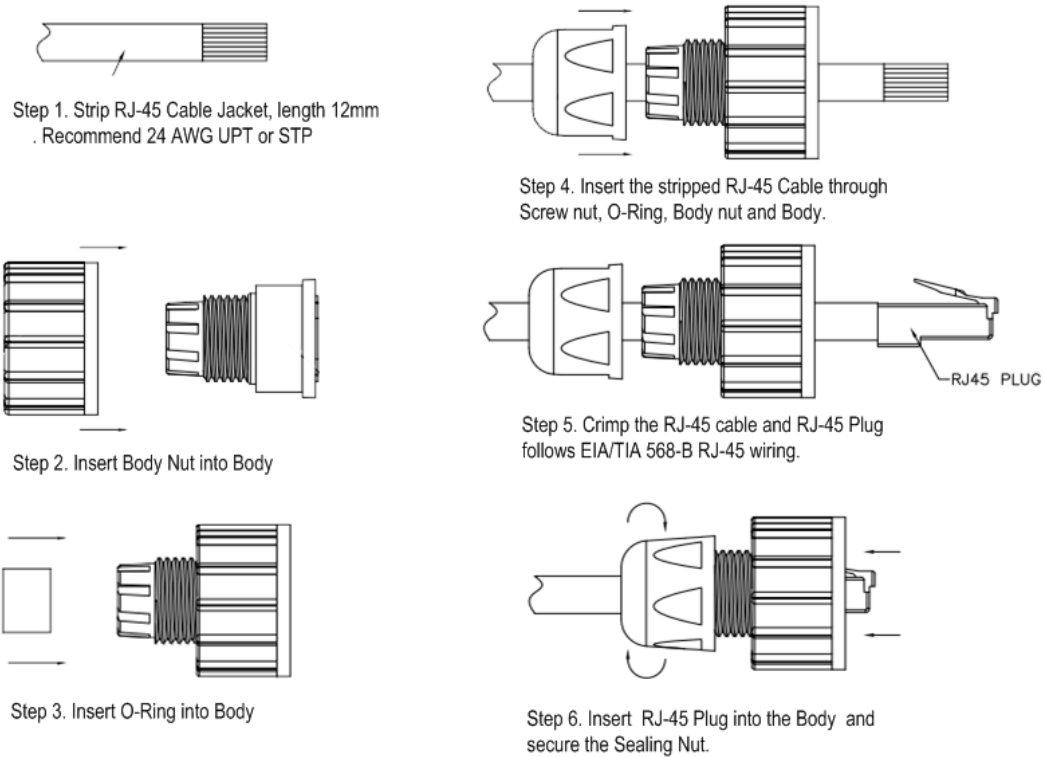


Following picture-19 shows the color code of Cat.-5E STP /FTP cable based on the two standards released by TIA/EIA – 568A and 568B. The 568B wiring is by far, the most common wiring method. You can choose the method that suits your application; but ensure that both ends of the cable use the same standard. **Only Uses STP/FTP cable and connector can obtain electromagnetic resistance and match vertical market EMC certification like as railway EMC standard – EN50121-4.**



Picture 19 RJ45 Cable color code

2.6 Wall-Mounting Installation

JetNet 6710G and JetNet 6810G series support wall-mounting only and there are 6 screw holes on the rear side of JetNet 6710G/JetNet 6810G for the mounting plate fixate; Use the screws included in the shipment to locking the plates as the figure-A and figure-B below.

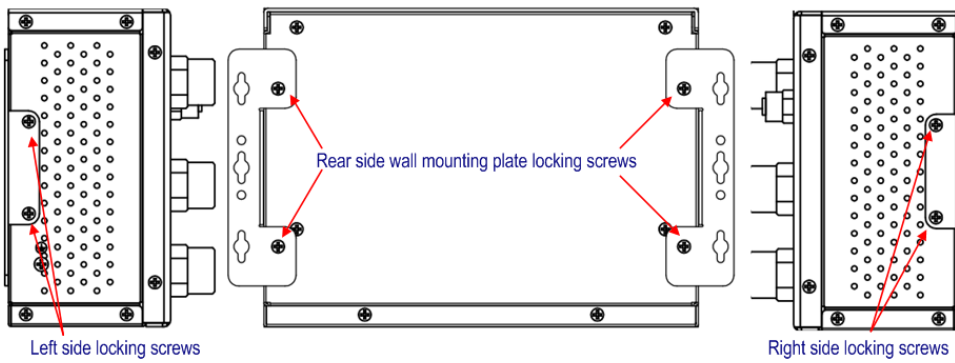

Note: To avoid damage the internal circuit, be sure use the screw included in the package to screw and tight the wall-mount kit onto the rear side of the JetNet switch. The specification of screw is M3 in 6 mm length.

3 Preparation for Management

JetNet 6710G / JetNet 6810G series Industrial Managed Switch provides both in-band and out-band configuration methods. You can configure the switch via RS232 console cable if you don't attach your admin PC to your network, or if you lose network connection to your JetNet 6710G /JetNet 6810G. This is so-called out-band management. It wouldn't be affected by network performance.

The in-band management means you can remotely manage the switch via the network. You can choose Telnet or Web-based management. You just need to know the device's IP address and you can remotely connect to its embedded HTTP web pages or Telnet console.

Following topics are covered in this chapter:

3.1 Preparation for Serial Console

3.2 Preparation for Web Interface

3.3 Preparation for Telnet console

3.1 Preparation for Serial Console

In JetNet 6710G /JetNet 6810G package, Korenix attached one M12 to RS-232 DB-9 console cable. Please attach RS-232 DB-9 connector to your PC's COM port, connects M12 to the Console port of the JetNet 6710G. If the serial cable lost, please follow the serial console cable PIN assignment to find one. (Refer to the appendix).

1. Go to Start -> Program -> Accessories -> Communication -> Hyper Terminal
2. Give a name to the new console connection.
3. Choose the COM name
4. Select correct serial settings. The serial settings of JetNet 6710G /JetNet 6810G are as below:
Baud Rate: 9600 / Parity: None / Data Bit: 8 / Stop Bit: 1
5. After connected, you can see Switch login request.
6. Login the switch. The default username is "admin", password, "admin".

```
Booting...
      Sun Jan  1 00:00:00 UTC 2006
Switch login: admin
Password:

JetNet 6710G (version 1.1.5-20100414-11:04:13).
Copyright 2006-2008 Korenix Technology Co., Ltd.
Switch>
```

3.2 Preparation for Web Interface

JetNet 6710G /JetNet 6810G provides HTTP Web Interface and Secured HTTPS Web Interface for web management.

3.2.1 Web Interface


Korenix web management page is developed by JAVA. It allows you to use a standard web-browser such as Microsoft Internet Explorer, or Mozilla, to configure and interrogate the switch from anywhere on the network.

Before you attempt to use the embedded web interface to manage switch operation, verify that your JetNet 6710G Series Industrial Ethernet Switch is properly installed on your network and that every PC on this network can access the switch via the web browser.


1. Verify that your network interface card (NIC) is operational, and that your operating system supports TCP/IP protocol.
2. Wire DC power to the switch and connect your switch to your computer.
3. Make sure that the switch default IP address is 192.168.10.1.
4. Change your computer IP address to 192.168.10.2 or other IP address which is located in the 192.168.10.x (Network Mask: 255.255.255.0) subnet.
5. Switch to DOS command mode and ping 192.168.10.1 to verify a normal response time.

Launch the web browser and Login.

6. Launch the web browser (Internet Explorer or Mozilla Firefox) on the PC.
7. Type **http://192.168.10.1** (or the IP address of the switch). And then press **Enter**.
8. The login screen will appear next.
9. Key in user name and the password. Default user name and password are both **admin**.

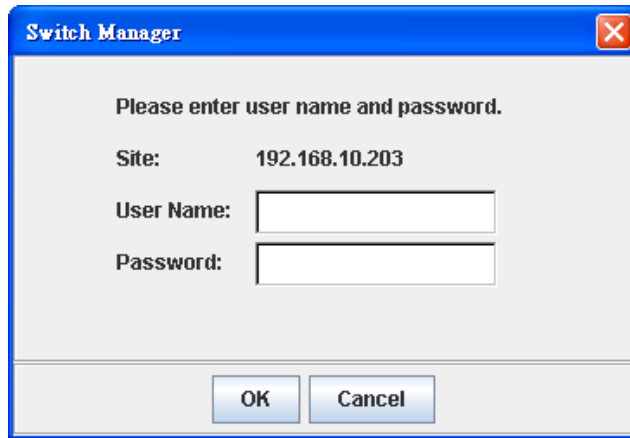

Click on **Enter** or **OK**. Welcome page of the web-based management interface will then appear.

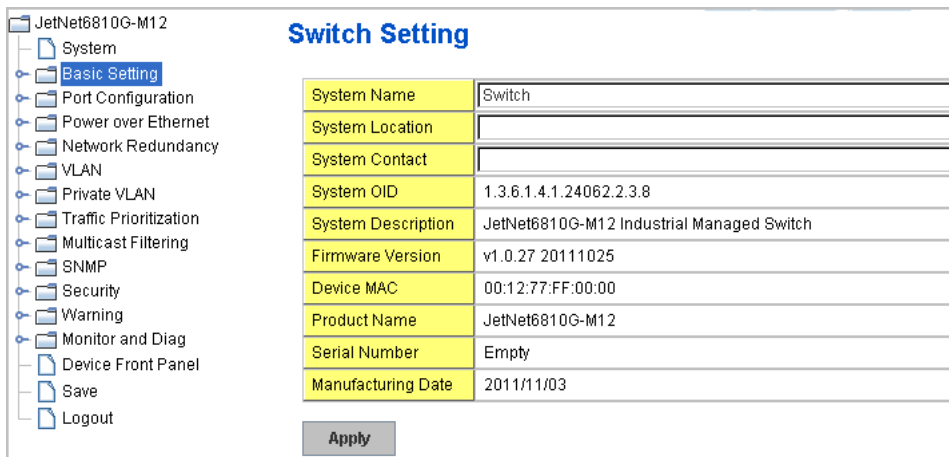

Once you enter the web-based management interface, you can freely change the JetNet’s IP address to fit your network environment.

Note 1: IE 5.0 or later versions do not allow Java applets to open sockets by default. Users have to directly modify the browser settings to selectively enable Java applets to use network ports.

Note 2: The Web UI connection session of JetNet 6710G/JetNet 6810G will be logged out automatically if you don’t give any input after 30 seconds. After logged out, you should re-login and key in correct user name and password again.

3.2.2 Secured Web Interface

Korenix web management page also provides secured management

HTTPS login. All the configuration commands will be secured and will be hard for the hackers to sniff the login password and configuration commands.

Launch the web browser and Login.

1. Launch the web browser (Internet Explorer or Mozilla Firefox) on the PC.
2. Type **https://192.168.10.1** (or the IP address of the switch). And then press **Enter**.
3. The popup screen will appear and request you to trust the secured HTTPS connection distributed by JetNet 6710G first. Press **Yes** to trust it.



4. The login screen will appear next.



5. Key in the user name and the password. The default user name and password is **admin**.
6. Click on **Enter** or **OK**. Welcome page of the web-based management interface will then appear.
7. Once you enter the web-based management interface, all the commands you see are the same as what you see by HTTP login.

3.3 Preparation for Telnet Console

3.3.1 Telnet

Korenix JetNet managed Switch supports Telnet console. You can connect to the switch by Telnet and the command lines are the same as what you see by RS232 console port. Below are the steps to open Telnet connection to the switch.

1. Go to Start -> Run -> cmd. And then press **Enter**
2. Type the **Telnet 192.168.10.1** (or the IP address of the switch). And then press **Enter**

3.3.2 SSH (Secure Shell)

Korenix JetNet managed Switch also support SSH console. You can remotely connect to the switch by command line interface. The SSH connection can secure all the configuration commands you sent to the switch.

SSH is a client/server architecture while the Switch is the SSH server. When you want to make SSH connection with the switch, you should download the SSH client tool first.


SSH Client

There are many free, sharewares, trials or charged SSH clients you can find on the internet. For example, PuTTY is a free and popular Telnet/SSH client. We'll use this tool to demonstrate how to login JetNet by SSH. Note: *PuTTY is copyright 1997-2006 Simon Tatham.*

Download PuTTY:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/download.html>


The copyright of **PuTTY**

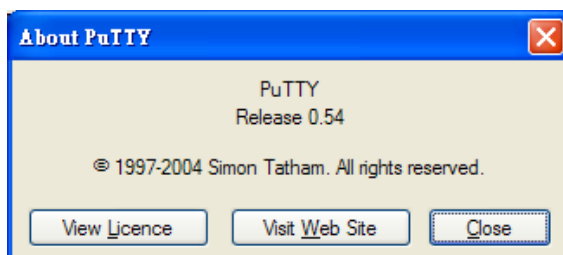


1. Open SSH Client/PuTTY

In the **Session** configuration, enter the **Host Name** (IP Address of your


JetNet switch) and **Port number** (default = 22). Choose the “**SSH**” protocol. Then click on “**Open**” to start the SSH session console.

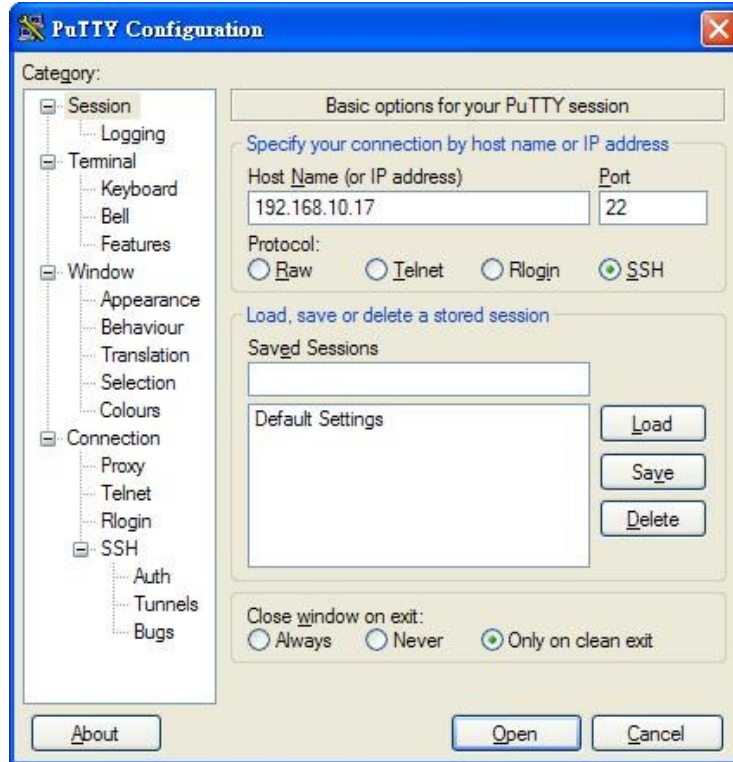

2. After click on **Open**, then you can see the cipher information in the pop up screen. Press **Yes** to accept the Security Alert.

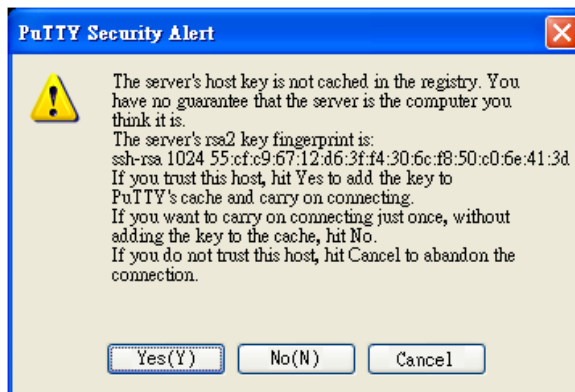

3. After few seconds, the SSH connection to JetNet Switch is opened. You can see the login screen as the below figure- sample of JetNet 5010G for reference.

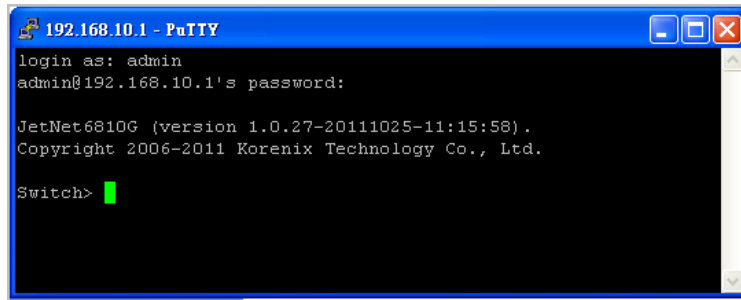

```
192.168.10.1 - PuTTY
login as: admin
admin@192.168.10.1's password:
JetNet6810G (version 1.0.27-20111025-11:15:58).
Copyright 2006-2011 Korenix Technology Co., Ltd.
Switch>
```

4. Type the Login Name and its Password. The default Login Name and Password are **admin / admin**.
5. All the commands you see in SSH are the same as the CLI commands you see via RS232 console. The next chapter will introduce in detail how to use command line to configure the switch.

4 Feature Configuration

This chapter explains how to configure JetNet Managed software features. There are four ways to access the switch: Serial console, Telnet, Web browser and SNMP.

JetNet Managed Switch provides both in-band and out-band configuration methods. You can configure the switch via RS232 console cable if you don't attach your admin PC to your network, or if you lose the network connection to your JetNet 6710G/6810G. This is so-called out-band management. It wouldn't be affected by the network performance.

The in-band management means you can remotely manage the switch via the network. You can choose Telnet or Web-based management. You just need to know the device's IP address. Then you can remotely connect to its embedded HTML web pages or Telnet console.

Korenix web management page is developed by JAVA. It allows you to use a standard web-browser such as Microsoft Internet Explorer, or Mozilla, to configure and interrogate the switch from anywhere on the network.

Note: IE 5.0 or later versions do not allow Java applets to open sockets by default. Users have to directly modify the browser settings to selectively enable Java applets to use network ports.

Following topics are covered in this chapter:

- 4.1 Command Line Interface (CLI) Introduction
- 4.2 Basic Setting
- 4.3 Port Configuration
- 4.4 Power over Ethernet
- 4.5 Network Redundancy
- 4.6 VLAN
- 4.7 Private VLAN
- 4.8 Traffic Prioritization
- 4.9 Multicast Filtering
- 4.10 SNMP
- 4.11 Security
- 4.12 Warning
- 4.13 Monitor and Diag
- 4.14 Device Front Panel
- 4.15 Save
- 4.16 Logout

4.1 Command Line Interface Introduction

The Command Line Interface (CLI) is the user interface to the switch's embedded software system. You can view the system information, show the status, configure the switch and receive a response back from the system by keying in a command.

There are some different command modes. Each command mode has its own access ability, available command lines and uses different command lines to enter and exit. These modes are User EXEC, Privileged EXEC, Global Configuration, (Port/VLAN) Interface Configuration modes.

User EXEC mode: As long as you login the switch by CLI. You are in the User EXEC mode. You can ping, telnet remote device, and show some basic information.

Type **enable** to enter next mode, **exit** to logout. **?** to see the command list

```
JN6810G>
enable      Turn on privileged mode command
exit        Exit current mode and down to previous mode
list        Print command list
ping        Send echo messages
quit        Exit current mode and down to previous mode
show        Show running system information
telnet      Open a telnet connection
traceroute  Trace route to destination
```

Privileged EXEC mode: Press enable in the User EXEC mode, then you can enter the Privileged EXEC mode. In this mode, the system allows you to view current configuration, reset default, reload switch, show system information, save configuration...and enter the global configuration mode.

Type **configure terminal** to enter next mode, **exit** to leave. **?** to see the command list

Switch#	
archive	Manage archive files
clear	Reset functions
clock	Configure time-of-day clock
configure	Configuration from vty interface
copy	Copy from one file to another
debug	Debugging functions (see also 'undebug')
disable	Turn off privileged mode command
dot1x	IEEE 802.1x standard access security control
end	End current mode and change to enable mode
exit	Exit current mode and down to previous mode
hardware	hardware function
list	Print command list
no	Negate a command or set its defaults
pager	Terminal pager
ping	Send echo messages
quit	Exit current mode and down to previous mode
reboot	Reboot system
reload	copy a default-config file to replace the current one
show	Show running system information
telnet	Open a telnet connection
terminal	Set terminal line parameters
traceroute	Trace route to destination
write	Write running configuration to memory, network, or terminal

Global Configuration Mode: Press **configure terminal** in privileged EXEC mode. You can then enter global configuration mode. In global configuration mode, you can configure all the features that the system provides you.

Type **interface IFNAME/VLAN** to enter interface configuration mode, **exit** to leave. **?** to see the command list.

Available command lists of global configuration mode.

Switch# configure terminal	
Switch(config)#	
administrator	Administrator account setting
arp	Set a static ARP entry
clock	Configure time-of-day clock
default	Set a command to its defaults
dot1x	IEEE 802.1x standard access security control
end	End current mode and change to enable mode
exit	Exit current mode and down to previous mode
gmrp	GMRP protocol
gvrp	GARP VLAN Registration Protocol
hostname	Set system's network name
interface	Select an interface to configure
ip	IP information
lacp	Link Aggregation Control Protocol
list	Print command list
lldp	Link Layer Discovery Protocol
log	Logging control
mac-address-table	mac address table
mirror	Port mirroring
multiple-super-ring	Configure Multiple Super Ring
nameserver	DNS Server
no	Negate a command or set its defaults
ntp	Configure NTP
poe	Configure power over ethernet
ptpd	IEEE1588 Precision Time Protocol
qos	Quality of Service (QoS)
relay	relay output type information
router	Enable a routing process
smtp-server	SMTP server configuration
snmp-server	the SNMP server
spanning-tree	the spanning tree algorithm
trunk	Trunk group configuration
vlan	Virtual LAN
warning-event	Warning event selection
write-config	Specify config files to write to

(Port) Interface Configuration: Press **interface IFNAME** in global configuration mode. You can then enter interface configuration mode. In this mode, you can configure port settings.

The port interface name for fast Ethernet port 1 is fa1,... fast Ethernet 7 is fa7, fast Ethernet port 8 is fa8.. Gigabit Ethernet port 9 is gi9. Type interface name accordingly when you want to enter certain interface configuration mode.

Type “**exit**” to leave current level.

Type “?” to see the command list

Available command lists of the global configuration mode.

Switch(config)# interface fa1	
Switch(config-if)#	
acceptable	Configures the 802.1Q acceptable frame types of a port.
auto-negotiation	Enables auto-negotiation state of a given port
description	Interface specific description
dot1x	IEEE 802.1x standard access security control
duplex	Specifies the duplex mode of operation for a port
end	End current mode and change to enable mode
exit	Exit current mode and down to previous mode
flowcontrol	Sets the flow-control value for an interface
garp	General Attribute Registration Protocol
ingress	802.1Q ingress filtering features
lacp	Link Aggregation Control Protocol
list	Print command list
loopback	Specifies the loopback mode of operation for a port
mdix	Configure mdix state of a given port
mtu	Specifies the MTU on a port.
no	Negate a command or set its defaults
poe	Configure power over ethernet
qos	Quality of Service (QoS)
quit	Exit current mode and down to previous mode
rate-limit	Rate limit configuration
shutdown	Shutdown the selected interface
spanning-tree	the spanning-tree protocol
speed	Specifies the speed of a Fast Ethernet port or a Gigabit Ethernet port.
switchport	Set switching mode characteristics

(VLAN) Interface Configuration: Press **interface VLAN VLAN-ID** in global configuration mode. You can then enter VLAN interface configuration mode. In this mode, you can configure the settings for the specific VLAN.

The VLAN interface name of VLAN 1 is VLAN 1, VLAN 2 is VLAN 2...

Type **exit** to leave the mode. Type ? to see the available command list.

The command lists of the VLAN interface configuration mode.


```

Switch(config)# interface vlan 1
Switch(config-if)#
  description  Interface specific description
  end          End current mode and change to enable mode
  exit        Exit current mode and down to previous mode
  ip          Interface Internet Protocol config commands
  list        Print command list
  no          Negate a command or set its defaults
  quit        Exit current mode and down to previous mode
  shutdown    Shutdown the selected interface
    
```

Summary of the 5 command modes.

Command Mode	Main Function	Enter and Exit Method	Prompt
User EXEC	This is the first level of access. User can ping, telnet remote device, and show some basic information	Enter: Login successfully Exit: exit to logout. Next mode: Type enable to enter privileged EXEC mode.	Switch>
Privileged EXEC	In this mode, the system allows you to view current configuration, reset default, reload switch, show system information, save configuration...and enter global configuration mode.	Enter: Type enable in User EXEC mode. Exec: Type disable to exit to user EXEC mode. Type exit to logout Next Mode: Type configure terminal to enter global configuration command.	Switch#
Global configuration	In global configuration mode, you can configure all the features that the system provides you	Enter: Type configure terminal in privileged EXEC mode Exit: Type exit or end or press Ctrl-Z to exit. Next mode: Type interface IFNAME/ VLAN VID to enter interface configuration mode	Switch(config)#
Port Interface configuration	In this mode, you can configure port related settings.	Enter: Type interface IFNAME in global configuration mode. Exit: Type exit or Ctrl+Z to global configuration mode.	Switch(config-if)#

		Type end to privileged EXEC mode.	
VLAN Interface Configuration	In this mode, you can configure settings for specific VLAN.	Enter: Type interface VLAN VID in global configuration mode. Exit: Type exit or Ctrl+Z to global configuration mode. Type end to privileged EXEC mode.	Switch(config-vlan)#

Here are some useful commands for you to see these available commands. Save your time in typing and avoid typing error.

? To see all the available commands in this mode. It helps you to see the next command you can/should type as well.

```
Switch(config)# interface (?)
IFNAME Interface's name
vlan Select a vlan to configure
```

(Character)? To see all the available commands starts from this character.

```
Switch(config)# a?
access-list Add an access list entry
administrator Administrator account setting
arp Set a static ARP entry
```

The tab key helps you to input the command quicker. If there is only one available command in the next, clicking on tab key can help to finish typing soon.

```
Switch# co (tab) (tab)
Switch# configure terminal

Switch(config)# ac (tab)
Switch(config)# access-list
```


Ctrl+C To stop executing the unfinished command.

Ctrl+S To lock the screen of the terminal. You can't input any command.

Ctrl+Q To unlock the screen which is locked by Ctrl+S.

Ctrl+Z To exit configuration mode.

Alert message when multiple users want to configure the switch. If the administrator is in configuration mode, then the Web users can't change the settings. JetNet Managed Switch allows only one administrator to configure the switch at a time.

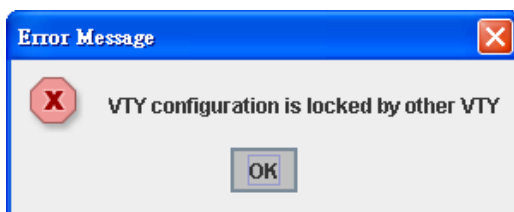

4.2 Basic Setting

The Basic Setting group provides you to configure switch information, IP address and user name/Password of the system. It also allows you to do firmware upgrade, backup and restore configuration, reload factory default, and reboot the system.

Following commands are included in this group:

- 4.2.1 Switch Setting
- 4.2.2 Admin Password
- 4.2.3 IP Configuration
- 4.2.4 Time Setting
- 4.2.5 DHCP Server
- 4.2.6 Backup and Restore
- 4.2.7 Firmware Upgrade
- 4.2.8 Factory Default
- 4.2.9 System Reboot
- 4.2.10 CLI Commands for Basic Setting

4.2.1 Switch Basic Setting

You can assign System name, Location, Contact and view system information.

Below Figure 4.2.1.1 – Web UI of the Switch Basic Setting

Welcome to the JetNet6810G-M12 Industrial Managed Switch	
System Name	Switch
System Location	
System Contact	
System OID	1.3.6.1.4.1.24062.2.3.8
System Description	JetNet6810G-M12 Industrial Managed Switch
Firmware Version	v1.0.27 20111025
Device MAC	00:12:77:FF:00:00
Product Name	JetNet6810G-M12
Serial Number	Empty
Manufacturing Date	2011/11/03

Copyright (c) 2006-2011 Korenix Technology Co., Ltd.. All Rights Reserved.

System Name: You can assign a name to the device. The available characters you can input is 64. After you configure the name, CLI system will select the first 12 characters as the name in CLI system.

System Location: You can specify the switch’s physical location here. The available characters you can input are 64.

System Contact: You can specify contact people here. You can type the name, mail address or other information of the administrator. The available characters you can input are 64.

System OID: The SNMP object ID of the switch. You can follow the path to find its private MIB in MIB browser. (**Note:** When you attempt to view private MIB, you should compile private MIB files into your MIB browser first.)

System Description: JetNet 6710G /JetNet 6810G Industrial Management Ethernet Switch is the name of this product.

Firmware Version: Display the firmware version installed in this device.

MAC Address: Display unique hardware address (MAC address) assigned by the manufacturer.

Once you finish the configuration, click on **Apply** to apply your settings.

Note: Always remember to select **Save** to save your settings. Otherwise, the settings you made will be lost when the switch is powered off.

4.2.2 Admin Password

You can change the user name and the password here to enhance security

Figure 4.2.2.1 Web UI sample of the Admin Password

User name: You can key in new user name here. The default setting is

Your Industrial Computing

Admin Password

Name	admin
Password	*****
Confirm Password	*****

Apply


admin.

Password: You can key in new password here. The default setting is **admin.**

Confirm Password: You need to type the new password again to confirm it.

Once you finish configuring the settings, click on **Apply** to apply your configuration.

Figure 4.2.2.2 Popup alert window for Incorrect Username.

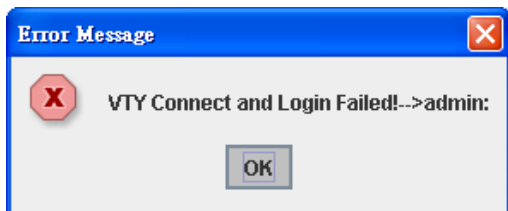

4.2.3 IP Configuration

This function allows users to configure the switch’s IP address settings. Below figure is the UI of IP configuration.



DHCP Client: You can select to **Enable** or **Disable** DHCP Client function. When DHCP Client function is enabled, an IP address will be assigned to the switch from the network’s DHCP server. In this mode, the default IP address will therefore be replaced by the one assigned by DHCP server. If DHCP Client is disabled, then the IP address that you specified will be used instead.

IP Address: You can assign the IP address reserved by your network for your JetNet. If DHCP Client function is enabled, you don’t need to assign an IP address to the JetNet, as it will be overwritten by DHCP server and shown here. The default IP is 192.168.10.1.

Subnet Mask: You can assign the subnet mask for the IP address here. If DHCP Client function is enabled, you don’t need to assign the subnet mask. The default Subnet Mask is 255.255.255.0.

Note: In the CLI, we use the enabled bit of the subnet mask to represent the number displayed in web UI. For example, 8 stands for 255.0.0.0; 16 stands for 255.255.0.0; 24 stands for 255.255.255.0.

Default Gateway: You can assign the gateway for the switch here. The default gateway is 192.168.10.254.

Note: In CLI, we use 0.0.0.0/0 to represent for the default gateway.

Once you finish configuring the settings, click on **Apply** to apply your configuration.

4.2.4 Time Setting

Time Setting source allow user to set the time manually or through NTP server. Network Time Protocol (NTP) is used to synchronize computer clocks on the internet. You can configure NTP settings here to synchronize the clocks of several switches on the network. Below figure is similar as JetNet 6710G and JetNet 6810G.

Time Setting

System Time: Thu Jan 1 08:13:33 2009

Time Setting Source		Manual Setting
Manual Setting		Get Time From PC
Jan	01	, 2009 08 : 13 : 33

IEEE 1588	
PTP State	Disable
Mode	Auto

Timezone Setting	
Timezone	(GMT-01:00) Cape Verde Is.

<input type="checkbox"/> Daylight Saving Time	
Daylight Saving Start	Jan 01 , 00 : 00
Daylight Saving End	Jan 01 , 00 : 00

Apply

Manual Setting: User can select Manual setting to change time as user wants. User also can click the button “Get Time from PC” to get PC’s time setting for switch.

NTP client: Select the Time Setting Source to NTP client can let device enable the NTP client service. NTP client will be automatically enabled if

you change Time source to NTP Client. The system will send request packet to acquire current time from the NTP server you assigned.

Time Setting Source	NTP Client
NTP Client	Manual Setting
Primary Server Address	NTP Client
	192.168.10.120
Secondary Server Address	192.168.10.121

IEEE 1588: With the **Precision Time Protocol IEEE 1588** there is now, for the first time, a standard available which makes it possible to synchronize the clocks of different end devices over a network at speeds faster than one Micro-second.

IEEE 1588	
PTP State	Enable
Mode	Auto
Timezone Setting	
Timezone	(GMT-01:00) Ca

To enable IEEE 1588, select Enable in PTP Status and choose Auto, Master or Slave Mode. After time synchronized, the system time will display the correct time of the PTP server.

Time-zone: Select the time zone where the switch is located. Following table lists the time zones for different locations for your reference. The default time zone is GMT Greenwich Mean Time.

- ```
Switch(config)# clock timezone
01 (GMT-12:00) Eniwetok, Kwajalein
02 (GMT-11:00) Midway Island, Samoa
03 (GMT-10:00) Hawaii
04 (GMT-09:00) Alaska
05 (GMT-08:00) Pacific Time (US & Canada) , Tijuana
06 (GMT-07:00) Arizona
07 (GMT-07:00) Mountain Time (US & Canada)
08 (GMT-06:00) Central America
09 (GMT-06:00) Central Time (US & Canada)
10 (GMT-06:00) Mexico City
11 (GMT-06:00) Saskatchewan
12 (GMT-05:00) Bogota, Lima, Quito
13 (GMT-05:00) Eastern Time (US & Canada)
```



- 14 (GMT-05:00) Indiana (East)
- 15 (GMT-04:00) Atlantic Time (Canada)
- 16 (GMT-04:00) Caracas, La Paz
- 17 (GMT-04:00) Santiago
- 18 (GMT-03:00) Newfoundland
- 19 (GMT-03:00) Brasilia
- 20 (GMT-03:00) Buenos Aires, Georgetown
- 21 (GMT-03:00) Greenland
- 22 (GMT-02:00) Mid-Atlantic
- 23 (GMT-01:00) Azores
- 24 (GMT-01:00) Cape Verde Is.
- 25 (GMT) Casablanca, Monrovia
- 26 (GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
- 27 (GMT+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
- 28 (GMT+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague
- 29 (GMT+01:00) Brussels, Copenhagen, Madrid, Paris
- 30 (GMT+01:00) Sarajevo, Skopje, Sofija, Vilnius, Warsaw, Zagreb
- 31 (GMT+01:00) West Central Africa
- 32 (GMT+02:00) Athens, Istanbul, Minsk
- 33 (GMT+02:00) Bucharest
- 34 (GMT+02:00) Cairo
- 35 (GMT+02:00) Harare, Pretoria
- 36 (GMT+02:00) Helsinki, Riga, Tallinn
- 37 (GMT+02:00) Jerusalem
- 38 (GMT+03:00) Baghdad
- 39 (GMT+03:00) Kuwait, Riyadh
- 40 (GMT+03:00) Moscow, St. Petersburg, Volgograd
- 41 (GMT+03:00) Nairobi
- 42 (GMT+03:30) Tehran
- 43 (GMT+04:00) Abu Dhabi, Muscat
- 44 (GMT+04:00) Baku, Tbilisi, Yerevan
- 45 (GMT+04:30) Kabul
- 46 (GMT+05:00) Ekaterinburg
- 47 (GMT+05:00) Islamabad, Karachi, Tashkent
- 48 (GMT+05:30) Calcutta, Chennai, Mumbai, New Delhi
- 49 (GMT+05:45) Kathmandu
- 50 (GMT+06:00) Almaty, Novosibirsk
- 51 (GMT+06:00) Astana, Dhaka
- 52 (GMT+06:00) Sri Jayawardenepura
- 53 (GMT+06:30) Rangoon
- 54 (GMT+07:00) Bangkok, Hanoi, Jakarta
- 55 (GMT+07:00) Krasnoyarsk
- 56 (GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi
- 57 (GMT+08:00) Irkutsk, Ulaan Bataar
- 58 (GMT+08:00) Kuala Lumpur, Singapore
- 59 (GMT+08:00) Perth
- 60 (GMT+08:00) Taipei
- 61 (GMT+09:00) Osaka, Sapporo, Tokyo
- 62 (GMT+09:00) Seoul

- 63 (GMT+09:00) Yakutsk
- 64 (GMT+09:30) Adelaide
- 65 (GMT+09:30) Darwin
- 66 (GMT+10:00) Brisbane
- 67 (GMT+10:00) Canberra, Melbourne, Sydney
- 68 (GMT+10:00) Guam, Port Moresby
- 69 (GMT+10:00) Hobart
- 70 (GMT+10:00) Vladivostok
- 71 (GMT+11:00) Magadan, Solomon Is., New Caledonia
- 72 (GMT+12:00) Auckland, Wellington
- 73 (GMT+12:00) Fiji, Kamchatka, Marshall Is.
- 74 (GMT+13:00) Nuku'alofa

**Daylight Saving Time:** Set the daylight saving time (summer time) start and end time.

The daylight saving configuration is based on the week and monthly with hour and minute setting.

| <input type="checkbox"/> Daylight Saving Time |     |     |    |     |    |    |   |    |  |
|-----------------------------------------------|-----|-----|----|-----|----|----|---|----|--|
| Daylight Saving Start                         | 3rd | Mon | in | Jan | at | 00 | : | 00 |  |
| Daylight Saving End                           | 1st | Sun | in | Jan | at | 00 | : | 00 |  |

|      |
|------|
| 1st  |
| 2nd  |
| 3rd  |
| 4th  |
| last |

Once you finish your configuration, click on **Apply** to activate your configuration.

#### 4.2.5 DHCP Server

You can select to **Enable** or **Disable** DHCP Server function. *JetNet switch* will assign a new IP address to link partners.

##### DHCP Server configuration

After selecting to enable DHCP Server function, type in the Network IP address for the DHCP server IP pool, Subnet Mask, Default Gateway address and Lease Time for client.

DHCP Server

**DHCP Server Configuration**

|                 |               |
|-----------------|---------------|
| Network         | 192.168.10.0  |
| Subnet Mask     | 255.255.255.0 |
| Default Gateway | 192.168.10.1  |
| Lease Time(s)   | 604800        |

**Apply**

Once you have finished the configuration, click **Apply** to activate the new configuration.

**Excluded Address:**

You can type a specific address into the **IP Address field** for the DHCP server reserved IP address.

The IP address that is listed in the **Excluded Address List Table** will not be assigned to the network device. Add or remove an IP address from the **Excluded Address List** by clicking **Add** or **Remove**.

**Excluded Address**

IP Address

**Add**

**Excluded Address List**

| Index | IP Address     |
|-------|----------------|
| 1     | 192.168.10.200 |
|       |                |
|       |                |

**Remove**

**Manual Binding:** *JetNet 6710G /JetNet 6810G* provides a MAC address and IP address binding and removing function. You can type in the specified IP and MAC address, and then click **Add** to add a new MAC&IP address binding rule for a specified link partner, like PLC or any device without **DHCP client** function. To remove from the binding list, just select the rule to remove and click **Remove**.

### Manual Binding

|                                    |                                          |
|------------------------------------|------------------------------------------|
| IP Address                         | <input style="width: 95%;" type="text"/> |
| MAC Address                        | <input style="width: 95%;" type="text"/> |
| <input type="button" value="Add"/> |                                          |

### Manual Binding List

| Index | IP Address | MAC Address |
|-------|------------|-------------|
|       |            |             |

**Option 82 IP Address Configuration:** the DHCP server with option 82 function presented in firmware V1.1 after. This feature support fully DHCP relay function, and allows user to configrue relay circuit ID, Remote ID to compliant fully DHCP option 82 function.

**Port and IP Address:** after firmware version v1.1b, the JetNet managed PoE Switch support port-based DHCP server function. It allows user assign specified IP address to specified port that DHCP client presented; and the DHCP server only reply and offer the specified IP address to the DHCP client if it request IP address.

| Option82 IP Address Configuration                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Port and IP Address                      |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|------------------------------------------|------------|------------------------------------------|-----------|------------------------------------------|------------------------------------|--|------------|------------|------|-----------|--|--|--|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------------------------------------------|------------|------------------------------------------|------------------------------------|--|------|------------|--|--|
| <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="width: 30%; padding: 2px;">IP Address</td><td><input style="width: 95%;" type="text"/></td></tr> <tr><td style="padding: 2px;">Circuit ID</td><td><input style="width: 95%;" type="text"/></td></tr> <tr><td style="padding: 2px;">Remote ID</td><td><input style="width: 95%;" type="text"/></td></tr> <tr><td colspan="2" style="text-align: center; padding: 5px;"><input type="button" value="Add"/></td></tr> </table> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <thead> <tr> <th style="width: 30%; padding: 2px;">IP Address</th> <th style="width: 20%; padding: 2px;">Circuit ID</th> <th style="width: 10%; padding: 2px;">Type</th> <th style="width: 40%; padding: 2px;">Remote ID</th> </tr> </thead> <tbody> <tr> <td style="height: 20px;"></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 5px;"><input type="button" value="Remove"/> <input type="button" value="Reload"/></p> | IP Address                               | <input style="width: 95%;" type="text"/> | Circuit ID | <input style="width: 95%;" type="text"/> | Remote ID | <input style="width: 95%;" type="text"/> | <input type="button" value="Add"/> |  | IP Address | Circuit ID | Type | Remote ID |  |  |  |  | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="width: 30%; padding: 2px;">Port</td><td><input style="width: 95%;" type="text"/></td></tr> <tr><td style="padding: 2px;">IP Address</td><td><input style="width: 95%;" type="text"/></td></tr> <tr><td colspan="2" style="text-align: center; padding: 5px;"><input type="button" value="Add"/></td></tr> </table> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <thead> <tr> <th style="width: 50%; padding: 2px;">Port</th> <th style="width: 50%; padding: 2px;">IP Address</th> </tr> </thead> <tbody> <tr> <td style="height: 20px;"></td> <td></td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 5px;"><input type="button" value="Remove"/> <input type="button" value="Reload"/></p> | Port | <input style="width: 95%;" type="text"/> | IP Address | <input style="width: 95%;" type="text"/> | <input type="button" value="Add"/> |  | Port | IP Address |  |  |
| IP Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <input style="width: 95%;" type="text"/> |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| Circuit ID                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <input style="width: 95%;" type="text"/> |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| Remote ID                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <input style="width: 95%;" type="text"/> |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| <input type="button" value="Add"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                          |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| IP Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Circuit ID                               | Type                                     | Remote ID  |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                          |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| Port                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <input style="width: 95%;" type="text"/> |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| IP Address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <input style="width: 95%;" type="text"/> |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| <input type="button" value="Add"/>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                          |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
| Port                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | IP Address                               |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                          |                                          |            |                                          |           |                                          |                                    |  |            |            |      |           |  |  |  |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |      |                                          |            |                                          |                                    |  |      |            |  |  |

**DHCP Leased Entries:** *JetNet 6710G /JetNet 6810G* provides an assigned IP address list for user check. It will show the MAC and IP address that was assigned by *JetNet 6710G/JetNet 6810G*. Click the **Reload** button to refresh the listing.

DHCP Leased Entries

| Index | Binding | IP Address  | MAC Address    | Lease Time(s) |
|-------|---------|-------------|----------------|---------------|
| 1     | Auto    | 192.168.0.3 | 0012.77ff.0530 | 604785        |

Reload

DHCP Relay Agent

You can select to **Enable** or **Disable** DHCP relay agent function, and then select the modification type of option 82 field, circuit ID, remote ID.

**Relay Agent** Disable ▼

Relay policy drop  
 Relay policy keep  
 Relay policy replace

Helper Address 1   
 Helper Address 2   
 Helper Address 3   
 Helper Address 4

Apply

**DHCP Option82 Relay Agent**

Circuit ID   
 Remote ID

Apply

| Circuit ID | Display | Remote ID | Display |
|------------|---------|-----------|---------|
|            |         |           |         |

Reload

**Relay policy drop:** Drops the option 82 field and do not add any option 82 field.

**Relay policy keep:** Keeps the original option 82 field and forwards to server.

**Relay policy replace:** Replaces the existing option 82 field and adds new option 82 field. (This is the default setting)

**Helper Address:** there are 4 fields for the DHCP server’s IP address. You can fill the field with preferred IP address of DHCP Server, and then click “Apply” to activate the DHCP relay agent function. All the DHCP packets from client will be modified by the policy and forwarded to DHCP server through the gateway port.

4.2.6 Backup and Restore

With Backup command, you can save current configuration file saved in the switch’s flash to admin PC or TFTP server. This will allow you to go to

**Restore** command later to restore the configuration file back to the switch. Before you restore the configuration file, you must place the backup configuration file in the PC or TFTP server. The switch will then download this file back to the flash.

There are 2 modes for users to backup/restore the configuration file, Local File mode and TFTP Server mode.

**Local File** mode: In this mode, the switch acts as the file server. Users can browse the target folder and then type the file name to backup the configuration. Users can also browse the target folder and select existed configuration file to restore the configuration back to the switch. This mode is only provided by Web UI while CLI is not supported.

**TFTP Server** mode: In this mode, the switch acts as TFTP client. Before you do so, make sure that your TFTP server is ready. Then please type the IP address of TFTP Server and Backup configuration file name. This mode can be used in both CLI and Web UI.

**TFTP Server IP Address:** You need to key in the IP address of your TFTP Server here.

**Backup/Restore File Name:** Please type the correct file name of the configuration file.

**Configuration File:** The configuration file of the switch is a pure text file. You can open it by word/txt read file. You can also modify the file, add/remove the configuration settings, and then restore back to the switch.

**Startup Configuration File:** After you saved the running-config to flash, the new settings will be kept and work after power cycle. You can use *show startup-config* to view it in CLI. The Backup command can only backup such configuration file to your PC or TFTP server.

**Technical Tip:**


**Default Configuration File:** The switch provides the default configuration file in the system. You can use *Reset* button, *Reload* command to reset the system.

**Running Configuration File:** The switch's CLI allows you to view the latest settings running by the system. The information shown here is the settings you set up but haven't saved to flash. The settings not yet saved to flash will not work after power recycle. You can use *show running-config* to view it in CLI.

Figure 4.2.6.1 Main UI of Backup & Restore

### Backup & Restore

**Backup Configuration** Local File ▼

Backup File Name D:\TFTP\backup.conf 

**Backup**

**Restore Configuration** TFTP Server ▼


TFTP Server IP 192.168.0.100

Restore File Name backup.conf


**Restore**

Figure 4.2.6.2 Bacup/Restore Configuration - Local File mode.

**Backup Configuration** Local File ▼

Backup File Name 0.30w0.30\Quagga1.conf 

**Backup** **Help**

 Click on Folder icon to select the target file you want to backup/restore.

**Note** that the folders of the path to the target file do not allow you to input space key.

Figure 4.2.6.3 Backup/Restore Configuration - TFTP Server mode

**Backup Configuration** TFTP Server ▼

TFTP Server IP 192.168.0.100

Backup File Name Backup1.conf

**Backup**

Type the IP address of TFTP Server IP. Then click on **Backup/Restore**.  
**Note:** point to the wrong file will cause the entire configuration missed

#### 4.2.7 Firmware Upgrade

In this section, you can update the latest firmware for your switch. Korenix provides the latest firmware in Korenix Web site. The new firmware may include new features, bug fixes or other software changes. We'll also provide the release notes for the update as well. For technical viewpoint, we suggest you use the latest firmware before installing the switch to the customer site.

**Note that the system will be automatically rebooted after you finished upgrading new firmware. Please remind the attached network users before you perform this function.**

The similar Figure 4.2.7.1 Main UI of Firmware Upgrade for the JetNet Switch

**Your Industrial Computing & Networking Partner**

### Firmware Upgrade

System Firmware Version: v1.2  
System Firmware Date: 20070620

**Firmware Upgrade**

Firmware File Name

Note: When firmware upgrade is finished, the switch will restart automatically.

There are 2 modes for users to backup/restore the configuration file, Local File mode and TFTP Server mode.

**Local File** mode: In this mode, the switch acts as the file server. Users can browse the target folder and then type the file name to backup the configuration. Users also can browse the target folder and select the existed configuration file to restore the configuration back to the switch. This mode is only provided by Web UI while CLI is not supported.

**TFTP Server** mode: In this mode, the switch acts as the TFTP client. Before you do so, make sure that your TFTP server is ready. And then please type the IP address of TFTP Server IP address. This mode can be used in both CLI and Web UI.

**TFTP Server IP Address:** You need to key in the IP address of your TFTP Server here.

**Firmware File Name:** The file name of the new firmware.

The UI also shows you the current firmware version and built date of current firmware. Please check the version number after the switch is



rebooted.

Figure 4.2.7.2 Firmware Upgrade - Local File mode. (refer to JetNet 5010G)

### Firmware Upgrade

System Firmware Version: v1.2  
System Firmware Date: 20070620

**Firmware Upgrade** Local File ▼

|                    |                         |                                                                                   |
|--------------------|-------------------------|-----------------------------------------------------------------------------------|
| Firmware File Name | TP\JetNet5010G-v1.2.bin |  |
|--------------------|-------------------------|-----------------------------------------------------------------------------------|

Note: When firmware upgrade is finished, the switch will restart automatically.

**Upgrade**



Click on Folder icon to select the target firmware file you want to upgrade.

Figure 4.2.7.3 Firmware Upgrade – TFTP Server mode.

### Firmware Upgrade

System Firmware Version: v1.2  
System Firmware Date: 20070620

**Firmware Upgrade** TFTP Server ▼

|                    |                      |
|--------------------|----------------------|
| TFTP Server IP     | 192.168.0.100        |
| Firmware File Name | JetNet5010G-v1.2.bin |

Note: When firmware upgrade is finished, the switch will restart automatically.

**Upgrade**

Type the IP address of TFTP Server and Firmware File Name. Then click on **Upgrade** to start the process.

After finishing transmitting the firmware, the system will copy the firmware file and replace the firmware in the flash. The CLI show ..... until the process is finished.

#### 4.2.8 Factory Default

In this section, you can reset all the configurations of the switch to default setting. Click on **Reset** the system will then reset all configurations to default setting. The system will show you popup message window after finishing this command. Default setting will work after rebooting the switch.

Figure- 4.2.8.1 The main screen of the Factory Default

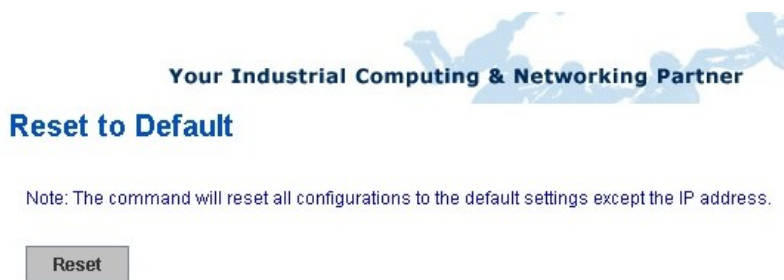


Figure 4.2.8.2 Popup alert screen to confirm the command. Click on **Yes** to start it.


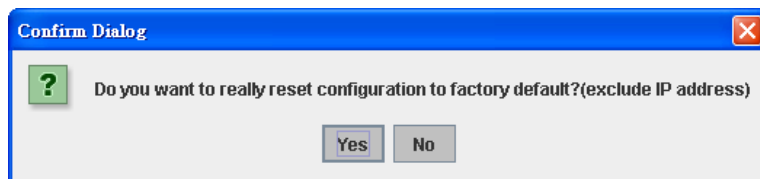


Figure 4.2.8.3 Popup message screen to show you that have done the command. Click on **OK** to close the screen. Then please go to **Reboot** page to reboot the switch.

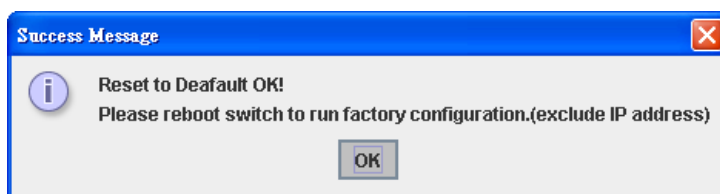

Click on **OK**. The system will then auto reboot the device.

Note: If you already configured the IP of your device to other IP address, when you use this command by CLI and Web UI, our software will not reset the IP address to default IP. The system will remain the IP address so that you can still connect the switch via the network.

### 4.2.9 System Reboot

System Reboot allows you to reboot the device. Some of the feature changes require you to reboot the system. Click on **Reboot** to reboot your device.

**Note:** Remember to click on **Save** button to save your settings. Otherwise, the settings you made will be gone when the switch is powered off.

Figure 4.2.9.1 Main screen for Rebooting



Figure 4.2.9.2 Pop-up alert screen to request confirmation. Click on **Yes**. Then the switch will be rebooted immediately.


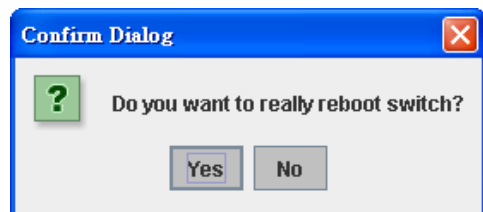


Figure 4.2.9.3 Pop-up message screen appears when rebooting the switch..

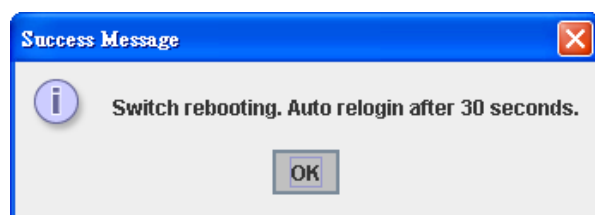

### 4.2.10 CLI Commands for Basic Setting

| Feature               | Command Line                                                 |
|-----------------------|--------------------------------------------------------------|
| <b>Switch Setting</b> |                                                              |
| System Name           | Switch(config)# hostname<br>WORD Network name of this system |

|                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                    | Switch(config)# hostname JN6810G<br>SWITCH(config)#                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| System Location                                    | SWITCH(config)# snmp-server location Taipei                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| System Contact                                     | SWITCH(config)# snmp-server contact korecare@korenix.com                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Display                                            | SWITCH# show snmp-server name<br>SWITCH<br><br>SWITCH# show snmp-server location<br>Taipei<br><br>SWITCH# show snmp-server contact<br><a href="mailto:korecare@korenix.com">korecare@korenix.com</a><br><br>SWITCH# show version<br>Hardware Information :<br>Product Name : JetNet6710G<br>Serial Number : SN15330528<br>MAC Address : 001277FF1533<br>Manufacturing Date : 2010/05/28<br>Software Information :<br>Loader Version : 1.0.0.4<br>Firmware Version : 0.1.32-20100830-16:10:40<br>Copyright 2006-2009 Korenix Technology Co., Ltd.Switch#<br><br>Switch# show hardware mac<br>MAC Address : 00:12:77:FF:01:B0 |
| <b>Admin Password</b>                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| User Name and Password                             | SWITCH(config)# administrator<br>NAME Administrator account name<br>SWITCH(config)# administrator orwell<br>PASSWORD Administrator account_name<br>account_password<br>SWITCH(config)# administrator orwell orwell<br>Change administrator account orwell and password orwell<br>success.                                                                                                                                                                                                                                                                                                                                   |
| Display                                            | SWITCH# show administrator<br>Administrator account information<br>name: orwell&richard<br>password: orwell&richard                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>IP Configuration</b>                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| IP Address/Mask<br>(192.168.10.8,<br>255.255.255.0 | SWITCH(config)# int vlan 1<br>SWITCH(config-if)# ip<br>address<br>dhcp<br>SWITCH(config-if)# ip address 192.168.10.8/24<br>SWITCH(config-if)# ip dhcp client<br>SWITCH(config-if)# ip dhcp client renew                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Gateway                                            | SWITCH(config)# ip route 0.0.0.0/0 192.168.10.254/24                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Remove Gateway                                     | SWITCH(config)# no ip route 0.0.0.0/0 192.168.10.254/24                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Display                                            | SWITCH# show running-config<br>.....<br>!<br>interface vlan1<br>ip address 192.168.10.8/24<br>no shutdown                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

|                           |                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                           | !<br>ip route 0.0.0.0/0 192.168.10.254/24<br>!                                                                                                                                                                                                                                                                                                                     |
| <b>Time Setting</b>       |                                                                                                                                                                                                                                                                                                                                                                    |
| NTP Server                | SWITCH(config)# ntp peer<br>enable<br>disable<br>primary<br>secondary<br>SWITCH(config)# ntp peer primary<br>IPADDR<br>SWITCH(config)# ntp peer primary 192.168.10.120                                                                                                                                                                                             |
| Time Zone                 | SWITCH(config)# clock timezone 26<br>Sun Jan 1 04:13:24 2006 (GMT) Greenwich Mean Time:<br>Dublin, Edinburgh, Lisbon, London<br><b>Note:</b> By typing clock timezone ?, you can see the timezone list. Then choose the number of the timezone you want to select.                                                                                                 |
| IEEE 1588                 | Switch(config)# ptpd run<br><br><cr><br>preferred-clock Preferred Clock<br>slave Run as slave                                                                                                                                                                                                                                                                      |
| Display                   | SWITCH# sh ntp associations<br>Network time protocol<br>Status : Disabled<br>Primary peer : N/A<br>Secondary peer : N/A<br>SWITCH# show clock<br>Sun Jan 1 04:14:19 2006 (GMT) Greenwich Mean Time:<br>Dublin, Edinburgh, Lisbon, London<br><br>SWITCH# show clock timezone<br>clock timezone (26) (GMT) Greenwich Mean Time: Dublin,<br>Edinburgh, Lisbon, London |
| <b>DHCP Server</b>        |                                                                                                                                                                                                                                                                                                                                                                    |
| DHCP Server configuration | Enable DHCP Server on JetNet Switch<br>Switch#<br>Switch# configure terminal<br>Switch(config)# router dhcp<br>Switch(config-dhcp)# service dhcp<br><br>Configure DHCP network address pool<br>Switch(config-dhcp)#network 50.50.50.0/4 -( network/mask)<br>Switch(config-dhcp)#default-router 50.50.50.1                                                          |
| Lease time configure      | Switch(config-dhcp)#lease 300 (300 sec)                                                                                                                                                                                                                                                                                                                            |
| DHCP Relay Agent          | Enable DHCP Relay Agent<br>Switch#<br>Switch# configure terminal<br>Switch(config)# router dhcp<br>Switch(config-dhcp)# service dhcp<br>Switch(config-dhcp)# ip dhcp relay information option                                                                                                                                                                      |

|                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                   | <pre>Enable DHCP Relay policy Switch(config-dhcp)# ip dhcp relay information policy <u>replace</u> drop      Relay Policy keep      Drop/Keep/Replace option82 field replace</pre>                                                                                                                                                                                                                                                                                                                                                                 |
| Show DHCP server information      | <pre>Switch# show ip dhcp server statistics Switch# show ip dhcp server statistics DHCP Server ON Address Pool 1   network:192.168.17.0/24   default-router:192.168.17.254   lease time:300 Excluded Address List   IP Address ----- (list excluded address) Manual Binding List   IP Address      MAC Address ----- (list IP &amp; MAC binding entry) Leased Address List   IP Address      MAC Address      Leased Time Remains ----- (list leased Time remain information for each entry)</pre>                                                 |
| <b>Backup and Restore</b>         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Backup Startup Configuration file | <pre>Switch# copy startup-config tftp: 192.168.10.33/default.conf Writing Configuration [OK]</pre> <p><b>Note 1:</b> To backup the latest startup configuration file, you should save current settings to flash first. You can refer to 4.12 to see how to save settings to the flash.</p> <p><b>Note 2:</b> 192.168.10.33 is the TFTP server's IP and default.conf is name of the configuration file. Your environment may use different IP addresses or different file name. Please type target TFTP server IP or file name in this command.</p> |
| Restore Configuration             | <pre>Switch# copy tftp: 192.168.10.33/default.conf startup-config</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Show Startup Configuration        | <pre>Switch# show startup-config</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Show Running Configuration        | <pre>Switch# show running-config</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Firmware Upgrade</b>           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Firmware Upgrade                  | <pre>Switch# archive download-sw /overwrite tftp 192.168.10.33 JN5010G.bin → <b>binary code file name</b> Firmware upgrading, don't turn off the switch! Tftping file JN5010G.bin → <b>binary code file name</b> Firmware upgrading ..... ..... ..... Firmware upgrade success!! Rebooting.....</pre>                                                                                                                                                                                                                                              |
| <b>Factory Default</b>            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Factory Default                   | <pre>Switch# reload default-config file Reload OK! Switch# reboot</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

| System Reboot |                |
|---------------|----------------|
| Reboot        | Switch# reboot |

### 4.3 Port Configuration

Port Configuration group enables you to enable/disable port state, or configure port auto-negotiation, speed, and duplex, flow control, rate limit control and port aggregation settings. It also allows you to view port status and aggregation information.

Following commands are included in this group:

- 4.3.1 Port Control
- 4.3.2 Port Status
- 4.3.3 Rate Control
- 4.3.4 Port Trunking
- 4.3.5 Command Lines for Port Configuration

#### 4.3.1 Port Control

Port Control commands allow you to enable/disable port state, or configure the port auto-negotiation, speed, duplex and flow control.

#### Port Configuration

| Port | State  | Speed/Duplex     | Flow Control | Description |
|------|--------|------------------|--------------|-------------|
| 1    | Enable | Auto Negotiation | Disable      |             |
| 2    | Enable | Auto Negotiation | Disable      |             |
| 3    | Enable | Auto Negotiation | Disable      |             |
| 4    | Enable | Auto Negotiation | Disable      |             |
| 5    | Enable | Auto Negotiation | Disable      |             |
| 6    | Enable | Auto Negotiation | Disable      |             |
| 7    | Enable | Auto Negotiation | Disable      |             |
| 8    | Enable | Auto Negotiation | Disable      |             |
| 9    | Enable | Auto Negotiation | Disable      |             |
| 10   | Enable | Auto Negotiation | Disable      |             |

Apply

Select the port you want to configure and make changes to the port.

In **State** column, you can enable or disable the state of this port. Once you disable, the port stop to link to the other end and stop to forward any traffic. The default setting is Enable which means all the ports are workable when you receive the device.

In **Speed/Duplex** column, you can configure port speed and duplex mode of this port. Below are the selections you can choose:



Fast Ethernet Port 1~8 (fa1~fa8) : AutoNegotiation, 10M Full Duplex(10 Full), 10M Half Duplex(10 Half), 100M Full Duplex(100 Full) and 100M Half Duplex(100 Half).

Gigabit Ethernet Port 9~10: (gi9~gi10) : AutoNegotiation, 10M Full Duplex(10 Full), 10M Half Duplex(10 Half), 100M Full Duplex(100 Full), 100M Half Duplex(100 Half), 1000M Full Duplex(1000 Full), 1000M Half Duplex(1000 Half).

The default mode is Auto Negotiation mode.

In **Flow Control** column, “Symmetric” means that you need to activate the flow control function of the remote network device in order to let the flow control of that corresponding port on the switch to work. “Disable” means that you don’t need to activate the flow control function of the remote network device, as the flow control of that corresponding port on the switch will work anyway.

Once you finish configuring the settings, click on **Apply** to save the configuration.

**Technical Tips:** *If both ends are not at the same speed, they can't link with each other. If both ends are not in the same duplex mode, they will be connected by half mode.*

### 4.3.2 Port Status

Port Status shows you current port status.

#### Port Status

| Port | Type       | Link | State  | Speed/Duplex | Flow Control |
|------|------------|------|--------|--------------|--------------|
| 1    | 100BASE-TX | Up   | Enable | 100 Full     | Disable      |
| 2    | 100BASE    | Down | Enable | --           | Disable      |
| 3    | 100BASE    | Down | Enable | --           | Disable      |
| 4    | 100BASE    | Down | Enable | --           | Disable      |
| 5    | 100BASE    | Down | Enable | --           | Disable      |
| 6    | 100BASE    | Down | Enable | --           | Disable      |
| 7    | 100BASE    | Down | Enable | --           | Disable      |
| 8    | 100BASE    | Down | Enable | --           | Disable      |
| 9    | 1000BASE   | Down | Enable | --           | Disable      |
| 10   | 1000BASE   | Down | Enable | --           | Disable      |

Reload

The description of the columns is as below:

**Port:** Port interface number.

**Type:** 100TX -> Fast Ethernet port. 1000TX -> Gigabit Ethernet port.

**Link:** Link status. Up -> Link UP. Down -> Link Down.

**State:** Enable -> State is enabled. Disable -> The port is disable/shutdown.

**Speed/Duplex:** Current working status of the port.  
**Flow Control:** The state of the flow control.

### 4.3.3 Rate Control

Your Industrial Computing & Networking Partner

#### Rate Control

##### Limit Packet Type and Rate

| Port | Ingress Rule   |            | Egress Rule |            |
|------|----------------|------------|-------------|------------|
|      | Packet Type    | Rate(Mbps) | Packet Type | Rate(Mbps) |
| 1    | Broadcast Only | 8          | All         | 0          |
| 2    | Broadcast Only | 8          | All         | 0          |
| 3    | Broadcast Only | 8          | All         | 0          |
| 4    | Broadcast Only | 8          | All         | 0          |
| 5    | Broadcast Only | 8          | All         | 0          |
| 6    | Broadcast Only | 8          | All         | 0          |
| 7    | Broadcast Only | 8          | All         | 0          |
| 8    | Broadcast Only | 8          | All         | 0          |
| 9    | Broadcast Only | 8          | All         | 0          |
| 10   | Broadcast Only | 8          | All         | 0          |

Apply

Rate limiting is a form of flow control used to enforce a strict bandwidth limit at a port. You can program separate transmit (Egress Rule) and receive (Ingress Rule) rate limits at each port, and even apply the limit to certain packet types as described below.

**Packet type:** You can select the packet type that you want to filter. The packet types of the Ingress Rule listed here include **Broadcast Only / Broadcast and multicast / Broadcast, Multicast and Unknown Unicast** or **All**. The packet types of the Egress Rule (outgoing) only support **all** packet types.

**Rate:** This column allows you to manually assign the limit rate of the port. Valid values are from 1Mbps-100Mbps for fast Ethernet ports and gigabit Ethernet ports. The step of the rate is 1 Mbps. Default value of Ingress Rule is “8” Mbps; default value of Egress Rule is 0 Mbps. 0 stands for disabling the rate control for the port.

Click on **Apply** to apply the configuration.

**4.3.4 Port Trunking**

Port Trunking configuration allows you to group multiple Ethernet ports in parallel to increase link bandwidth. The aggregated ports can be viewed as one physical port so that the bandwidth is higher than merely one single Ethernet port. The member ports of the same trunk group can balance the loading and backup for each other. Port Trunking feature is usually used when you need higher bandwidth for backbone network. This is an inexpensive way for you to transfer more data.

There are some different descriptions for the port trunking. Different manufacturers may use different descriptions for their products, like Link Aggregation Group (LAG), Link Aggregation Control Protocol, Ethernet Trunk, Ether Channel...etc. Most of the implementations now conform to IEEE standard, 802.3ad.

The aggregated ports can interconnect to the other switch which also supports Port Trunking. Korenix Supports 2 types of port trunking. One is Static Trunk, the other is 802.3ad. When the other end uses 802.3ad LACP, you **should** assign 802.3ad LACP to the trunk. When the other end uses non-802.3ad, you can then use Static Trunk.

There are 2 configuration pages, Aggregation Setting and Aggregation Status.

**Aggregation Setting**

Your Industrial Computing & Network

**Port Trunk - Aggregation Setting**

| Port | Group ID | Type         |
|------|----------|--------------|
| 1    | Trunk 1  | Static       |
| 2    | Trunk 1  | Static       |
| 3    | Trunk 2  | 802.3ad LACP |
| 4    | Trunk 2  | 802.3ad LACP |
| 5    | None     | Static       |
| 6    | None     | Static       |
| 7    | None     | Static       |
| 8    | None     | Static       |
| 9    | None     | Static       |
| 10   | None     | Static       |

Note: The port parameters of the trunk members should be the same.

Apply

**Trunk Size:** The switch can support up to 8 trunk groups with 2 trunk

members. Since the member ports should use same speed/duplex, max trunk members for 100Mbps would be 8, and 2 for gigabit.

**Group ID:** Group ID is the ID for the port trunking group. Ports with same group ID are in the same group.

**Type: Static and 802.3ad LACP.** Each Trunk Group can only support Static or 802.3ad LACP. Choose the type you need here.

**Aggregation Status**

This page shows the status of port aggregation. Once the aggregation ports are negotiated well, you will see following status.

**Port Trunk - Aggregation Information**

| Group ID | Type   | Aggregated Ports | Individual Ports | Link Down Ports |
|----------|--------|------------------|------------------|-----------------|
| Trunk 1  | Static |                  |                  | 6,7             |
| Trunk 2  |        |                  |                  |                 |
| Trunk 3  |        |                  |                  |                 |
| Trunk 4  |        |                  |                  |                 |
| Trunk 5  |        |                  |                  |                 |
| Trunk 6  |        |                  |                  |                 |
| Trunk 7  | LACP   |                  |                  | 9,10            |
| Trunk 8  |        |                  |                  |                 |

Reload

**Group ID:** Display Trunk 1 to Trunk 5 set up in Aggregation Setting.

Type: Static or LACP set up in Aggregation Setting.

**Aggregated:** When LACP links well, you can see the member ports in aggregated column.

**Individual:** When LACP is enabled, member ports of LACP group which are not connected to correct LACP member ports will be displayed in the Individual column.

**Link Down:** When LACP is enabled, member ports of LACP group which are not linked up will be displayed in the Link Down column.

### 4.3.5 Command Lines for Port Configuration

| Feature                           | Command Line                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Port Control</b>               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Port Control – State              | <p>Switch(config-if)# shutdown -&gt; Disable port state<br/>Port1 Link Change to DOWN<br/>interface fastethernet1 is shutdown now.</p> <p>Switch(config-if)# no shutdown -&gt; Enable port state<br/>Port1 Link Change to DOWN<br/>Port1 Link Change to UP<br/>interface fastethernet1 is up now.<br/>Switch(config-if)# Port1 Link Change to UP</p>                                                                                                                                                         |
| Port Control – Auto Negotiation   | <p>Switch(config)# interface fa1<br/>Switch(config-if)# auto-negotiation<br/>Auto-negotiation of port 1 is enabled!</p>                                                                                                                                                                                                                                                                                                                                                                                      |
| Port Control – Force Speed/Duplex | <p>Switch(config-if)# speed 100<br/>Port1 Link Change to DOWN<br/>set the speed mode ok!<br/>Switch(config-if)# Port1 Link Change to UP</p> <p>Switch(config-if)# duplex full<br/>Port1 Link Change to DOWN<br/>set the duplex mode ok!<br/>Switch(config-if)# Port1 Link Change to UP</p>                                                                                                                                                                                                                   |
| Port Control – Flow Control       | <p>Switch(config-if)# flowcontrol on<br/>Flowcontrol on for port 1 set ok!</p> <p>Switch(config-if)# flowcontrol off<br/>Flowcontrol off for port 1 set ok!</p>                                                                                                                                                                                                                                                                                                                                              |
| <b>Port Status</b>                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Port Status                       | <p>Switch# show interface fa1<br/>Interface fastethernet1<br/>Administrative Status : Enable<br/>Operating Status : Connected<br/>Duplex : Full<br/>Speed : 100<br/>Flow Control :off<br/>Default Port VLAN ID: 1<br/>Ingress Filtering : Disabled<br/>Acceptable Frame Type : All<br/>Port Security : Disabled<br/>Auto Negotiation : Disable<br/>Loopback Mode : None<br/>STP Status: forwarding<br/>Default CoS Value for untagged packets is 0.<br/>Mdix mode is Disable.<br/>Medium mode is Copper.</p> |

|                                      |                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                      | <p><i>Note: Administrative Status -&gt; Port state of the port. Operating status -&gt; Current status of the port. Duplex -&gt; Duplex mode of the port. Speed -&gt; Speed mode of the port. Flow control -&gt; Flow Control status of the port.</i></p>                                                                                                                      |
| <b>Rate Control</b>                  |                                                                                                                                                                                                                                                                                                                                                                               |
| Rate Control –<br>Ingress or Egress  | <pre>Switch(config-if)# rate-limit egress   Outgoing packets ingress  Incoming packets</pre> <p><b>Note: To enable rate control, you should select the Ingress or Egress rule first; then assign the packet type and bandwidth.</b></p>                                                                                                                                       |
| Rate Control – Filter<br>Packet Type | <pre>Switch(config-if)# rate-limit ingress mode all          Limit all frames broadcast   Limit Broadcast frames flooded-unicast Limit Broadcast, Multicast and flooded unicast frames multicast   Limit Broadcast and Multicast frames</pre> <pre>Switch(config-if)# rate-limit ingress mode broadcast Set the ingress limit mode broadcast ok.</pre>                        |
| Rate Control -<br>Bandwidth          | <pre>Switch(config-if)# rate-limit ingress bandwidth &lt;0-100&gt;    Limit in magabits per second (0 is no limit) Switch(config-if)# rate-limit ingress bandwidth 8 Set the ingress rate limit 8Mbps for Port 1.</pre>                                                                                                                                                       |
| <b>Port Trunking</b>                 |                                                                                                                                                                                                                                                                                                                                                                               |
| LACP                                 | <pre>Switch(config)# lacp group 1 gi8-10 Group 1 based on LACP(802.3ad) is enabled!</pre> <p><i>Note: The interface list is fa1,fa3-5,gi8-10</i><br/> <i>Note: different speed port can't be aggregated together.</i></p>                                                                                                                                                     |
| Static Trunk                         | <pre>Switch(config)# trunk group 2 fa6-7 Trunk group 2 enable ok!</pre>                                                                                                                                                                                                                                                                                                       |
| Display - LACP                       | <pre>JetNet 6810G# show lacp internal LACP group 1 internal information:       LACP Port  Admin  Oper    Port Port  Priority  Key    Key    State -----       8         1     8     8     0x45       9         1     9     9     0x45      10         1    10    10    0x45</pre> <p>LACP group 2 is inactive<br/> LACP group 3 is inactive<br/> LACP group 4 is inactive</p> |
| Display - Trunk                      | <pre>Switch# show trunk group 1 FLAGS:    I -&gt; Individual      P -&gt; In channel           D -&gt; Port Down  Trunk Group GroupID  Protocol  Ports -----+-----       1      LACP    8(D) 9(D) 10(D)  Switch# show trunk group 2 FLAGS:    I -&gt; Individual      P -&gt; In channel           D -&gt; Port Down</pre>                                                    |

|  | Trunk Group |          |           |
|--|-------------|----------|-----------|
|  | GroupID     | Protocol | Ports     |
|  | 2           | Static   | 6(D) 7(P) |
|  | Switch#     |          |           |

#### 4.4 Power over Ethernet

Power over Ethernet is one of the key features of *JetNet 6710G* and *JetNet 6810G* series. It is fully IEEE802.3af-2003 compliant, and support IEEE802.3at, including 1-event with IEEE 802.1AB LLDP classification for PoE MDI. The *JetNet 6710G / JetNet 6810G* adopts 8-Port PoE injectors in port 1 to port 8, each port with the ability to deliver 30W power for IEEE 802.3at 1-event plus LLDP function; **the total power output budget for JetNet 6710G is 200W and JetNet 6810G is 120W.**

The following commands are included in this section:

- 4.4.1 PoE Control
- 4.4.2 PoE Scheduling
- 4.4.3 PoE Status
- 4.4.4 Command Line for PoE control

##### 4.4.1 PoE Control

The PoE control panel includes 3 parts:

**Part-1: PoE System:** En/Disable PoE function, setting system power budget and power budget over load warning water level. After those configurations, please click “Apply” to enable PoE system, and then start configure per port PoE function.

**PoE System:** Enable/Disable PoE System

**Power Budget (W):** The *JetNet 6810G* predefined power budget is 120W without any change; **therefor the power source must offer and satisfied the system power inquires- 140W at least, includes system consumption.**

**Warning Water Level (%):** setting the power consumption warning water level. With the event warning enabled, the system will send warning information to NMS if power consumption is over the limit.

#### Power over Ethernet Control

**PoE System** Enable ▾

Power Budget(W)       Warning Water Level(%)

**Port Configuration**

| Port | PoE Mode | Powering Mode | Power Budget Mode | Power Budget(W) |
|------|----------|---------------|-------------------|-----------------|
| 1    | Disable  | 802.3at       | Auto              |                 |
| 2    | Enable   | 802.3af       | Auto              | 16.94           |
| 3    | Disable  | 802.3af       | Auto              |                 |
| 4    | Disable  | 802.3af       | Auto              |                 |
| 5    | Disable  | 802.3af       | Auto              |                 |
| 6    | Disable  | 802.3af       | Auto              |                 |



**Note: In JetNet 6810G, PoE system power Budget only support 120W. Due the internal isolated DC/DC booster output budget is 120W, so the value can't be changed. ( JetNet 6710G supports 200W PoE output ability.)**

**Part-2: Port Configuration:** it includes PoE mode selection, Powering mode, Power Budget mode selection and power budget setting for the Power budget manual mode.

**PoE mode:** includes per port PoE En/disable and control by scheduling.

**Powering mode:** includes 802.3af auto mode, 802.3at plus LLDP mode and forced mode. If forced mode is selected, the port power budget value will need to be filled to activate PoE force mode.

**Power Budget mode:** it supports 2 selections- Auto and Manual. The manual mode is means the power budget is controlled by user defined and not follows PD's declaration.

**Power Budget:** the limit of per port PoE output. Without the value, the PoE forced mode powering will not be activated.

**Note: During the PoE operating, the surface will accumulate heat and caused surface temperature becomes higher than ambient temperature. Do remember don't touch device surface during PoE operating.**



***DO NOT TOUCH DEVICE SURFACE DURING  
PoE PROGRESS HIGH POWER FEEDING***

**Note:** To enable the IEEE 802.3at High Power PoE function, the power input voltage should be over than DC 55V to obtain better performance. Applies DC 48V to PoE Switch and perform 30W high power output may cause the PoE disable automatically, due the output current protect mechanism activated (0.686A current limite). To avoid this issue, we suggest adjust the power supply output to 55V DC by the voltage output adjustment resistor which equipped in the switching power supply by professional engineer.

**For the JetNet 6810G series, the internal DC/DC output voltage is 57V; so the input power voltage does not need change to higher volts, just**

keep DC 24V input will be fine.

**Part-3: PD Status Detection**

JetNet 6710G /JetNet 6810G delivers a useful function – PD Status Detection. This provides automatic detection of a remote device powered by JetNet 6710G or JetNet 6810G. If the remote system crashes or is unstable, JetNet PoE Switch will perform a remote system reboot by turning off and on again to trigger the remote device. The following figure shows the Web configure interface for Power over Ethernet PD Status Detection.

PD Status Detection  ▼

| PD | IP Address     | Cycle Time(s) |
|----|----------------|---------------|
| 1  | 192.168.10.100 | 10            |
| 2  | 192.168.10.200 | 20            |
| 3  | 192.168.10.10  | 30            |
| 4  | 192.168.10.15  | 40            |
| 5  |                |               |
| 6  |                |               |
| 7  |                |               |
| 8  |                |               |
| 9  |                |               |
| 10 |                |               |

You can enable/disable PD Status Detection function and type in the IP address that you want to detect. The **Cycle Time** is the gap per detection. After configuring, please click the **Apply** button to enable and perform the functions.

#### 4.4.2 PoE Scheduling

The PoE Scheduling control is a powerful function to help you save power and money. You need to configure **PoE Scheduling** and select a target port manually to enable this function.

##### Power over Ethernet Schedule

PoE Schedule on  is Enabled

| Time  | Sunday | Monday | Tuesday | Wednesday | Thursday | Friday | Saturday |
|-------|--------|--------|---------|-----------|----------|--------|----------|
| 00:00 | Blue   |        |         |           |          |        | Blue     |
| 01:00 | Blue   |        |         |           |          |        | Blue     |
| 02:00 | Blue   |        |         |           |          |        | Blue     |
| 03:00 | Blue   |        |         |           |          |        | Blue     |
| 04:00 | Blue   |        |         |           |          |        | Blue     |
| 05:00 | Blue   | Blue   |         |           |          | Blue   | Blue     |
| 06:00 | Blue   | Blue   |         |           |          | Blue   | Blue     |
| 07:00 | Blue   | Blue   |         |           |          | Blue   | Blue     |
| 08:00 | Blue   | Blue   |         |           |          | Blue   | Blue     |
| 09:00 | Blue   | Blue   |         |           |          | Blue   | Blue     |
| 10:00 |        | Blue   | Blue    |           | Blue     | Blue   |          |
| 11:00 |        | Blue   | Blue    |           | Blue     | Blue   |          |
| 12:00 |        | Blue   | Blue    |           | Blue     | Blue   |          |
| 13:00 |        | Blue   | Blue    |           | Blue     | Blue   |          |
| 14:00 |        | Blue   | Blue    |           | Blue     | Blue   |          |
| 15:00 |        |        | Blue    | Blue      | Blue     |        |          |
| 16:00 |        |        | Blue    | Blue      | Blue     |        |          |
| 17:00 |        |        | Blue    | Blue      | Blue     |        |          |
| 18:00 |        |        |         | Blue      | Blue     |        |          |
| 19:00 |        |        |         | Blue      | Blue     |        |          |
| 20:00 |        |        |         |           |          |        |          |
| 21:00 |        |        |         | Blue      |          |        |          |
| 22:00 |        |        |         | Blue      |          |        |          |
| 23:00 |        |        |         | Blue      |          |        |          |

The Power over Ethernet schedule supports hourly and weekly base PoE schedule configuration.

Select the target port and marking the time frame, then click **Apply** to activate the PoE scheduling function. The PoE port will working as the predefined behavior and follows the system clock. As this result, be sure the system clock have configured as your local time for the reference of scheduling control.

### 4.4.3 PoE Status

The PoE Status page shows the operating status of each PoE Port. The information includes PoE mode, Operation status, PD class, Power Consumption, Voltage and Current.

#### Power over Ethernet Status

| Port | PoE Mode | Operation Status | PD Class | Consumption(W) | Voltage(V) | Current(mA) |
|------|----------|------------------|----------|----------------|------------|-------------|
| 1    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 2    | Enable   | Powering         | Class0   | 0.8            | 52.6       | 15          |
| 3    | Enable   | Searching        | Class0   | 0.0            | 0.0        | 0           |
| 4    | Schedule | Off              | N/A      | 0.0            | 0.0        | 0           |
| 5    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 6    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 7    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 8    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 9    | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |
| 10   | Disable  | Off              | N/A      | 0.0            | 0.0        | 0           |

Reload

### 4.4.4 Command Line for PoE control

|                     |                                                                                                                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>       | <b>show poe system</b>                                                                                                                                                                                                                                                         |
| <b>Parameters</b>   | --                                                                                                                                                                                                                                                                             |
| <b>Command Mode</b> | Enable mode                                                                                                                                                                                                                                                                    |
| <b>Description</b>  | Display the status of the PoE system.                                                                                                                                                                                                                                          |
| <b>Examples</b>     | Switch> enable<br>Switch# show poe system<br>PoE System<br>PoE Admin : Enable<br>PoE Hardward : Normal<br>PoE Input Voltage : 47.700 V<br>Output power : 0.00 Watts<br>Power Budget :<br>Budget : 80 Watts<br>Warning water level : N/A<br>Utilization : 0 %<br>Event : Normal |
| <b>Syntax</b>       | <b>show poe interface IFNAME</b>                                                                                                                                                                                                                                               |
| <b>Parameters</b>   | IFNAME : interface name                                                                                                                                                                                                                                                        |
| <b>Command Mode</b> | Enable mode                                                                                                                                                                                                                                                                    |
| <b>Description</b>  | Display the PoE status of interface.                                                                                                                                                                                                                                           |
| <b>Examples</b>     | Switch> enable<br>Switch# show poe interface fa1                                                                                                                                                                                                                               |

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | Interface fastethernet1 (POE Port 1)<br>Control Mode : User (Disable)<br>Powering Mode : 802.3af<br>Operation Status : Off<br>Detection Status : Valid<br>Classification : N/A<br>Priority : Highest<br>Output Power : 0.0 Watts, Voltage : 0.0 V, Current : 0 mA<br>Power Budget :<br>Budget : 32.0 Watts, effective 0 Watts<br>Warning water level : N/A<br>Utilization : 0 %<br>Event : Normal                                                                           |
| <b>Syntax</b>       | <b>show poe pd_detect</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Parameters</b>   | --                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Command Mode</b> | Enable mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Display the status of pd status detection.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Examples</b>     | Switch# show poe pd-detect<br>PD Status Detection<br>Status : Enabled<br>Host 1 :<br>Target IP : 192.168.10.100<br>Cycle Time : 10<br>Host 2 :<br>Target IP : 192.168.10.200<br>Cycle Time : 20<br>Host 3 :<br>Target IP : 192.168.10.15<br>Cycle Time : 30<br>Host 4 :<br>Target IP : 192.168.10.20<br>Cycle Time : 40                                                                                                                                                     |
| <b>Syntax</b>       | <b>show poe schedule IFNAME</b>                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Parameters</b>   | IFNAME : interface name                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Command Mode</b> | Enable mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Display the status of schedule of interface.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Examples</b>     | Switch# show poe schedule fa1<br>Interface fastethernet1<br>POE Schedule<br>Status : Disable<br>Weekly Schedule :<br>Sunday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Monday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Tuesday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Wednesday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Thursday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Friday : 0,1,2,3,4,5,6,7,8,19,20,21,22,23<br>Saturday :<br>0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20 |
| <b>Syntax</b>       | <b>poe powering-mode 802.3af/forced</b>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Parameters</b>   | 802.3af: deliver power if and only if the attached PD comply with IEEE 802.3af<br>forced: deliver power no matter what PD attached                                                                                                                                                                                                                                                                                                                                          |

|                     |                                                                                                                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Set the Powring mode of PoE                                                                                                                                                                                                                                                    |
| <b>Examples</b>     | EX 1: <i>Set 802.3af powring mode</i><br>Switch(config)# poe powering-mode 802.3af<br>EX 2: <i>Set forced powering mode</i><br>Switch(config)# poe powering-mode forced                                                                                                        |
| <b>Syntax</b>       | <b>poe powering-mode 802.3at 2-event/lldp</b>                                                                                                                                                                                                                                  |
| <b>Parameters</b>   | 2-event: deliver power if and only if the attached PD comply with IEEE 802.3at physical layer classification<br>lldp: deliver power if and only if the attached PD comply with IEEE 802.3at data link layer classification<br>JetNet 6710G/6810G does not support 2-event/lldp |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Set the Powring mode of PoE                                                                                                                                                                                                                                                    |
| <b>Examples</b>     | EX 1: <i>Set 802.3at 2-event powring mode</i><br>Switch(config)# poe powering-mode 802.3at 2-event<br>EX 2: <i>Set 802.3at lldpforced powering mode</i><br>Switch(config)# poe powering-mode 802.3at lldp                                                                      |
| <b>Syntax</b>       | <b>poe control-mode user/schedule</b>                                                                                                                                                                                                                                          |
| <b>Parameters</b>   | user: user mode<br>schedule: schedule mode                                                                                                                                                                                                                                     |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Set the control mode of port                                                                                                                                                                                                                                                   |
| <b>Examples</b>     | Set PoE port 2 to user mode.<br>EX 1:<br>Switch(config)# interface fa2<br>Switch(config-if)# poe control-mode user<br>Set PoE port 2 to schedule mode.<br>EX 2:<br>Switch(config-if)# poe control-mode schedule                                                                |
| <b>Syntax</b>       | <b>poe user enable/disable</b>                                                                                                                                                                                                                                                 |
| <b>Parameters</b>   | enable: enable port in user mode<br>disable: disable port in user mode                                                                                                                                                                                                         |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Enable/Disable the PoE of the port in user mode.<br>If in schedule mode, it will come into affect when the control mode changes to user mode.                                                                                                                                  |
| <b>Examples</b>     | To enable the PoE function in user mode<br>Switch(config-if)# poe user enable<br>To disable the PoE function in user mode<br>Switch(config-if)# poe user disable                                                                                                               |
| <b>Syntax</b>       | <b>poe type TYPE</b>                                                                                                                                                                                                                                                           |
| <b>Parameters</b>   | TYPE : port type string with max 20 characters                                                                                                                                                                                                                                 |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Set the port type string.                                                                                                                                                                                                                                                      |
| <b>Examples</b>     | Set the type string to "IPCam-1.<br>Switch(config-if)# poe type IPCam-1                                                                                                                                                                                                        |
| <b>Syntax</b>       | <b>poe budget [POWER]</b>                                                                                                                                                                                                                                                      |
| <b>Parameters</b>   | POWER : 0.4 – 30                                                                                                                                                                                                                                                               |

|                     |                                                                                                                                                                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                              |
| <b>Description</b>  | Set the port budget.<br>The max budget is different between 802.3af, 802.3at and forced powering mode.<br>The max budget of 802.3af powering mode is 15.4.<br>The max budget of 802.3at powering mode is 30<br>The max budget of force powering mode is 30. |
| <b>Examples</b>     | Set the max value of power consumption to 12 W with manual mode.<br>Switch(config-if)# poe budget 12                                                                                                                                                        |
| <b>Syntax</b>       | <b>poe budget warning &lt;0-100&gt;</b>                                                                                                                                                                                                                     |
| <b>Parameters</b>   | <0-100> 0 is disable, valid range is 1 to 100 percentage                                                                                                                                                                                                    |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                              |
| <b>Description</b>  | Set the warning water level of port budget.                                                                                                                                                                                                                 |
| <b>Examples</b>     | Set the warning water level to 60%<br>Switch(config-if)# poe budget warning 60                                                                                                                                                                              |
| <b>Syntax</b>       | <b>poe priority critical/high/low ; ( Not available for JetNet 6710G &amp; 6810G)</b>                                                                                                                                                                       |
| <b>Parameters</b>   | Critical : Highest priority level<br>High : High priority level<br>Low : Low priority level                                                                                                                                                                 |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                              |
| <b>Description</b>  | Set the powering priority. The port with higher priority will have the privilege to delivery power under limited power situation.                                                                                                                           |
| <b>Examples</b>     | Set the priority to critical<br>Switch(config-if)# poe priority critical                                                                                                                                                                                    |
| <b>Syntax</b>       | <b>poe schedule weekday hour</b>                                                                                                                                                                                                                            |
| <b>Parameters</b>   | Weekday : Valid range 0-6 (0=Sunday, 1=Monday, ..., 6=Saturday)<br>Hour : Valid range 0-23, Valid format a,b,c-d                                                                                                                                            |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                              |
| <b>Description</b>  | Add a day schedule to an interface.                                                                                                                                                                                                                         |
| <b>Examples</b>     | Add a schedule which enables PoE function at hour 1, 3, 5 and 10 to 23 on Sunday.<br>Switch(config-if)# poe schedule 0 1,3,5,10-23                                                                                                                          |
| <b>Syntax</b>       | <b>no poe schedule weekday</b>                                                                                                                                                                                                                              |
| <b>Parameters</b>   | Weekday : Valid range 0-6 (0=Sunday, 1=Monday, ..., 6=Saturday)                                                                                                                                                                                             |
| <b>Command Mode</b> | Interface mode                                                                                                                                                                                                                                              |
| <b>Description</b>  | Remove a day schedule                                                                                                                                                                                                                                       |
| <b>Examples</b>     | Remove the Sunday schedule.<br>Switch(config-if)# no poe schedule 0                                                                                                                                                                                         |
| <b>Syntax</b>       | <b>poe budget DC1/DC2 [POWER] ; system command for 6710G only, 6810G power budget fixed 120W</b>                                                                                                                                                            |
| <b>Parameters</b>   | POWER : 0~200                                                                                                                                                                                                                                               |
| <b>Command Mode</b> | Configuration mode                                                                                                                                                                                                                                          |
| <b>Description</b>  | Set the power budget of DC1                                                                                                                                                                                                                                 |
| <b>Examples</b>     | Set the power budget of DC1 to 200W<br>Switch(config)# poe budget DC1 200w                                                                                                                                                                                  |

|                     |                                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>       | <b>poe budget warning &lt;0-100&gt;</b>                                                                                                                                                      |
| <b>Parameters</b>   | <0-100> 0 is disable, valid range is 1 to 100 percentage                                                                                                                                     |
| <b>Command Mode</b> | Configuration mode                                                                                                                                                                           |
| <b>Description</b>  | Set the warning water level of total power budget.                                                                                                                                           |
| <b>Examples</b>     | Set the warning water level to 60%<br>Switch(config-if)# poe budget warning 60                                                                                                               |
| <b>Syntax</b>       | <b>poe pd_detect enable/disable</b>                                                                                                                                                          |
| <b>Parameters</b>   | enable: enable PD Status Detection function<br>disable: disable PD Status Detection function                                                                                                 |
| <b>Command Mode</b> | Configuration mode                                                                                                                                                                           |
| <b>Description</b>  | Enable/Disable the PD Status Detection function                                                                                                                                              |
| <b>Examples</b>     | To enable the function of pd status detect function<br>Switch(config)# poe pd_detect enable<br>To disable the function of pd status detect function<br>Switch(config)# poe pd_detect disable |
| <b>Syntax</b>       | <b>poe pd_detect ip_address cycle_time</b>                                                                                                                                                   |
| <b>Parameters</b>   | IP address : A.B.C.D<br>Cycle time : Valid range 10-3600 second and must be multiple of 10                                                                                                   |
| <b>Command Mode</b> | Configuration mode                                                                                                                                                                           |
| <b>Description</b>  | Apply a rule of PD Status Detection.                                                                                                                                                         |
| <b>Examples</b>     | Apply a rule which ping 192.160.1.2 per 20 seconds. And if 192.160.1.2 is timeout, pd status detection will re-enable the PoE.<br>Switch(config)# poe pd_detect 192.160.1.2 20               |



## 4.5 Network Redundancy

It is critical for industrial applications that network remains non-stop. JetNet 6710G /JetNet 6810G supports standard RSTP, Multiple Super Ring, Rapid Dual Homing and backward compatible with Legacy Super Ring Client modes.

Multiple Super Ring (MSR) technology is *Korenix's* 3<sup>rd</sup> generation Ring redundancy technology. This is patented and protected by *Korenix* and is used in countries all over the world. MSR ranks the fastest restore and failover time in the world, 0 ms for restore and about 5 milliseconds for failover for copper.

Advanced Rapid Dual Homing (RDH) technology also facilitates JetNet 6710G /6810G to connect with a core managed switch easily and conveniently. With RDH technology, you can also couple several Rapid Super Rings or RSTP cloud together, which is also known as Auto Ring Coupling.

To become backwards compatible with the Legacy Super Ring technology implemented in *JetNet 4000/4500* switches, *JetNet 6710G* /JetNet 6810G also supports Super Ring Client mode. The Super Ring ports can pass through Super Ring control packets extremely well and works with Super Ring.

Besides Korenix ring technology, *JetNet 6710G/ 6810G* also supports 802.1D-2004 version Rapid Spanning Tree Protocol (RSTP). New version of RSTP standard includes 802.1D-1998 STP, 802.1w RSTP, IEEE 802.1s MSTP (Multiple Spanning Tree). The MSTP function is available from 1.1 version firmwear, if your device does not support it, please download the new firmware from Korenix Web site. Following commands are included in this group:

4.5.1 STP configuration

4.5.2 STP Port configuration

4.5.3 STP information

4.5.4 MSTP configuration

4.5.5 MSTP Port Configuration

4.5.6 MSTP information

4.5.7 Multiple Super Ring

4.5.8 Multiple Super Ring Info

4.5.9 Command Lines for Network Redundancy

**4.5.1 STP Configuration**

This page allows select the STP mode and configuring the global STP/RSTP Bridge Configuraiton.

The STP mode includes the **STP**, **RSTP**, **MSTP** and **Disable**. Please select the STP mode for your system first. The default mode is RSTP enabled.

Afte select the STP or RSTP mode; continue to configure the gloable Bridge parameters for STP and RSTP.

After select the MSTP mode, please go to MSTP Configuration page.

**STP Configuration**

STP Mode

Bridge Configuraiton

|                 |                                   |
|-----------------|-----------------------------------|
| Bridge Address  | <input type="text" value="1212"/> |
| Bridge Priority | <input type="text"/>              |
| Max Age         | <input type="text" value="20"/>   |
| Hello Time      | <input type="text" value="2"/>    |
| Forward Delay   | <input type="text" value="15"/>   |

**RSTP (Refer to the 4.4.1 of previous version manual.)**

RSTP is the abbreviation of Rapid Spanning Tree Protocol. If a switch has more than one path to a destination, it will lead to message loops that can generate broadcast storms and quickly bog down a network. The spanning tree was created to combat the negative effects of message loops in switched networks. A spanning tree uses a spanning tree algorithm (STA) to automatically sense whether a switch has more than one way to communicate with a node. It will then select the best path (primary), and block the other path(s). It will also keep track of the blocked path(s) in case the primary path fails. Spanning Tree Protocol (STP) introduced a standard method to accomplish this. It is specified in IEEE 802.1D-1998. Later, Rapid Spanning Tree Protocol (RSTP) was adopted and represents the evolution of STP, providing much faster spanning tree convergence after a topology change. This is specified in IEEE 802.1w. In 2004, 802.1w is included into 802.1D-2004 version. This switch supports both RSTP and STP (all switches that support RSTP are also backward compatible with switches that support only STP).

### **Bridge Configuration**

**Bridge Address:** This shows the switch's MAC address.

**Priority (0-61440):** RSTP uses bridge ID to determine the root bridge, the bridge with the highest bridge ID becomes the root bridge. The bridge ID is composed of bridge priority and bridge MAC address. So that the bridge with the highest priority becomes the highest bridge ID. If all the bridge ID has the same priority, the bridge with the lowest MAC address will then become the root bridge.

Note: The bridge priority value must be in multiples of 4096. A device with a lower number has a higher bridge priority. Ex: 4096 is higher than 32768.

Note: The Web GUI allows user select the priority number directly. This is the convenient of the GUI design. When you configure the value through the CLI or SNMP, you may need to type the value directly. Please follow the  $n \times 4096$  rules for the Bridge Priority.

**Max Age (6-40):** Enter a value from 6 to 40 seconds here. This value represents the time that a bridge will wait without receiving Spanning Tree Protocol configuration messages before attempting to reconfigure.

If JetNet is not the root bridge, and if it has not received a hello message from the root bridge in an amount of time equal to Max Age, then JetNet will reconfigure itself as a root bridge. Once two or more devices on the network are recognized as a root bridge, the devices will renegotiate to set up a new spanning tree topology.

**Hello Time (1-10):** Enter a value from 1 to 10 seconds here. This is a periodic timer that drives the switch to send out BPDU (Bridge Protocol Data Unit) packet to check current STP status.

The root bridge of the spanning tree topology periodically sends out a "hello" message to other devices on the network to check if the topology is "healthy". The "hello time" is the amount of time the root has waited during sending hello messages.

**Forward Delay Time (4-30):** Enter a value between 4 and 30 seconds. This value is the time that a port waits before changing from Spanning Tree Protocol learning and listening states to forwarding state.

This is the amount of time JetNet will wait before checking to see if it should be changed to a different state.

Once you have completed your configuration, click on **Apply** to apply your settings.

**Note:** You must observe the following rule to configure Hello Time, Forwarding Delay, and Max Age parameters.

**$2 \times (\text{Forward Delay Time} - 1 \text{ sec}) \geq \text{Max Age Time} \geq 2 \times (\text{Hello Time value} + 1 \text{ sec})$**

**4.5.2 STP Port Configuration**

This page allows you to configure the port parameter after enabled STP or RSTP.

**Port Configuration**

Select the port you want to configure and you will be able to view current setting and status of the port.

**STP Port Configuration**

| Port | Path Cost | Priority | Link Type | Edge Port |
|------|-----------|----------|-----------|-----------|
| 1    | 20000     | 128      | Auto      | Enable    |
| 2    | 20000     | 128      | Auto      | Enable    |
| 3    | 20000     | 128      | Auto      | Enable    |
| 4    | 20000     | 128      | Auto      | Enable    |
| 5    | 20000     | 128      | Auto      | Enable    |
| 6    | 20000     | 128      | Auto      | Enable    |
| 7    | 20000     | 128      | Auto      | Enable    |
| 8    | 20000     | 128      | Auto      | Enable    |
| 9    | 20000     | 128      | Auto      | Enable    |

Apply

**Path Cost:** Enter a number between 1 and 200,000,000. This value represents the “cost” of the path to the other bridge from the transmitting bridge at the specified port.

**Priority:** Enter a value between 0 and 240, using multiples of 16. This is the value that decides which port should be blocked by priority in a LAN.

**Link Type:** There are 3 types for you select. **Auto**, **P2P** and **Share**.

Some of the rapid state transitions that are possible within RSTP depend upon whether the port of concern can only be connected to another bridge (i.e. it is served by a point-to-point LAN segment), or if it can be connected to two or more bridges (i.e. it is served by a shared-medium LAN segment). This function allows link status of the link to be manipulated administratively. “**Auto**” means to auto select P2P or Share mode. “**P2P**” means P2P is enabled; the 2 ends work at Full-duplex mode. While “**Share**” is enabled, it means P2P is disabled, the 2 ends may connect through a share media and work in Half duplex mode.

**Edge:** A port directly connected to the end stations cannot create a bridging loop in the network. To configure this port as an edge port, set the port to the **Enable** state. When the non-bridge device connects an admin edge port, this port will be in blocking state and turn to forwarding state in 4 seconds.

Once you finish your configuration, click on **Apply** to save your settings.

### 4.5.3 RSTP Info

This page allows you to see the information of the root switch and port status.

#### RSTP Information

##### Root Information

|                     |                     |
|---------------------|---------------------|
| Bridge ID           | 8000.0012.7760.1455 |
| Root Priority       | 32768               |
| Root Port           | N/A                 |
| Root Path Cost      | 0                   |
| Max Age(6-40)       | 20 sec              |
| Hello Time(1-10)    | 2 sec               |
| Forward Delay(4-30) | 15 sec              |

##### Port Information

| Port | Role       | Port State | Path Cost | Port Priority | Oper P2P | Oper Edge |
|------|------------|------------|-----------|---------------|----------|-----------|
| 1    | --         | Disabled   | 200000    | 128           | P2P      | Edge      |
| 2    | --         | Disabled   | 200000    | 128           | Shared   | Edge      |
| 3    | Designated | Forwarding | 200000    | 128           | P2P      | Non-Edge  |
| 4    | --         | Disabled   | 200000    | 128           | Shared   | Edge      |
| 5    | --         | Disabled   | 200000    | 128           | Shared   | Edge      |
| 6    | --         | Disabled   | 200000    | 128           | Shared   | Edge      |
| 7    | --         | Disabled   | 200000    | 128           | Shared   | Edge      |
| 8    | --         | Disabled   | 20000     | 128           | P2P      | Edge      |
| 9    | Designated | Forwarding | 200000    | 128           | P2P      | Edge      |
| 10   | Designated | Forwarding | 20000     | 128           | P2P      | Edge      |

Reload

**Root Information:** You can see root Bridge ID, Root Priority, Root Port, Root Path Cost and the Max Age, Hello Time and Forward Delay of BPDU sent from the root switch.

**Port Information:** You can see port Role, Port State, Path Cost, Port Priority, Oper P2P mode, Oper edge port mode and Aggregated (ID/Type).


#### 4.5.4 MSTP (Multiple Spanning Tree Protocol) Configuration

MSTP is the abbreviation of Multiple Spanning Tree Protocol. This protocol is a direct extension of RSTP. It can provide an independent spanning tree for different VLANs. It simplifies network management, provides for even faster convergence than RSTP by limiting the size of each region, and prevents VLAN members from being segmented from the rest of the group (as sometimes occurs with IEEE 802.1D STP).

While using MSTP, there are some new concepts of network architecture. A switch may belong to different group, acts as root or designate switch, generate BPDU for the network to maintain the forwarding table of the spanning tree. With MSTP, it can also provide multiple forwarding paths and enable load balancing. Understand the architecture allows you to maintain the correct spanning tree and operate effectively.


One VLAN can be mapped to a Multiple Spanning Tree Instance (MSTI). The maximum Instance of JetNet 6710G / JetNet 681G support is 16, range from 0-15. The MSTP builds a separate Multiple Spanning Tree (MST) for each instance to maintain connectivity among each of the assigned VLAN groups. An Internal Spanning Tree (IST) is used to connect all the MSTP switches within an MST region. An MST Region may contain multiple MSTP Instances.

The figure shows there are 2 VLANs/MSTP Instances and each instance has its Root and forwarding paths.

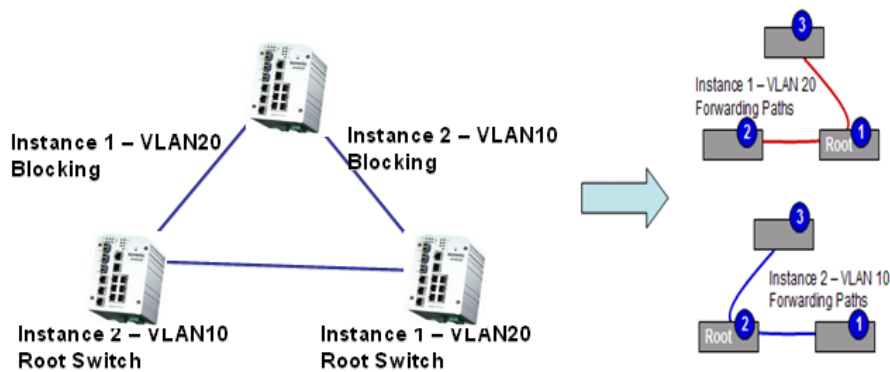

A Common Spanning Tree (CST) interconnects all adjacent MST regions and acts as a virtual bridge node for communications with STP or RSTP nodes in the global network. MSTP connects all bridges and LAN segments with a single Common and Internal Spanning Tree (CIST). The CIST is formed as a result of the running spanning tree algorithm between switches that support the STP, RSTP, MSTP protocols.

The figure shows the CST large network. In this network, a Region may have different instances and its own forwarding path and table; however, it acts as a single Brige of CST.

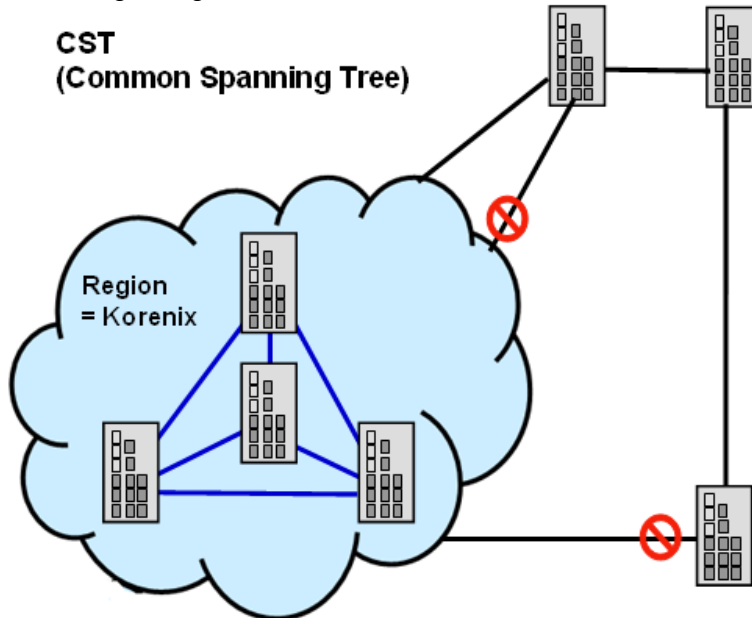

To configure the MSTP setting, the STP Mode of the STP Configuration page should be changed to MSTP mode first.

### STP Configuration

STP Mode

#### Bridge Configuration

|                 |                |
|-----------------|----------------|
| Bridge Address  | 0012.7760.46b6 |
| Bridge Priority | 32768          |
| Max Age         | 20             |
| Hello Time      | 2              |
| Forward Delay   | 15             |

After enabled MSTP mode, then you can go to the MSTP Configuraiton pages.

**MSTP Region Configuration**

This page allows configure the Region Name and its Revision, mapping the VLAN to Instance and check current MST Instance configuration. The network can be divided virtually to different Regions. The switches within the Region should have the same Region and Revision level.

**Region Name:** The name for the Region. Maximum length: 32 characters.

**Revision:** The revision for the Region. Range: 0-65535; Default: 0)

Once you finish your configuration, click on **Apply** to apply your settings.

**New MST Instance**

This page allows mapping the VLAN to Instance and assign priority to the instance. Before mapping VLAN to Instance, you should create VLAN and assign the member ports first. Please refer to the VLAN setting page.

**MSTP Configuration**

**MST Region Configuration**

|             |         |
|-------------|---------|
| Region Name | Korenix |
| Revision    | 0       |

Apply

**New MST Instance**

|                   |       |
|-------------------|-------|
| Instance ID       | 1     |
| VLAN Group        |       |
| Instance Priority | 32768 |

Add

**Instance ID:** Select the Instance ID, the available number is 1-15.

**VLAN Group:** Type the VLAN ID you want mapping to the instance.

**Instance Priority:** Assign the priority to the instance.

**After** finish your configuration, click on **Add** to apply your settings.

**Current MST Instance Configuration**

This page allows you to see the current MST Instance Configuration you added. Click on **Apply** to apply the setting. You can **Remove** the instance or **Reload** the configuration display in this page.



Current MST Instance Configuration

| Instance ID | VLAN Group | Instance Priority |
|-------------|------------|-------------------|
| 1           | 2          | 32768             |
| 2           | 3          | 32768             |

4.5.5 MSTP Port Configuration

This page allows configure the Port settings. Choose the Instance ID you want to configure. The MSTP enabled and linked up ports within the instance will be listed in this table.

Note that the ports not belonged to the Instance, or the ports not MSTP activated will not display. The meaning of the Path Cost, Priority, Link Type and Edge Port is the same as the definition of RSTP.

MSTP Port Configuration

Instance ID

| Port | Path Cost | Priority | Link Type | Edge Port |
|------|-----------|----------|-----------|-----------|
| 1    | 2000000   | 128      | Auto      | Enable    |
| 2    | 200000    | 128      | Auto      | Enable    |

**Path Cost:** Enter a number between 1 and 200,000,000. This value represents the “cost” of the path to the other bridge from the transmitting bridge at the specified port.

**Priority:** Enter a value between 0 and 240, using multiples of 16. This is the value that decides which port should be blocked by priority in a LAN.

**Link Type:** There are 3 types for you select. **Auto**, **P2P** and **Share**.

Some of the rapid state transitions that are possible within RSTP depend upon whether the port of concern can only be connected to another bridge

(i.e. it is served by a point-to-point LAN segment), or if it can be connected to two or more bridges (i.e. it is served by a shared-medium LAN segment). This function allows link status of the link to be manipulated administratively. “Auto” means to auto select P2P or Share mode. “P2P” means P2P is enabled; the 2 ends work in full duplex mode. While “Share” is enabled, it means P2P is disabled; the 2 ends may connect through a share media and work in half duplex mode.

**Edge:** A port directly connected to the end stations cannot create a bridging loop in the network. To configure this port as an edge port, set the port to the **Enable** state. When the non-bridge device connects an admin edge port, this port will be in blocking state and turn to forwarding state in 4 seconds.

Once you finish your configuration, click on **Apply** to save your settings.

#### 4.5.6 MSTP Information

This page allows you to see the current MSTP information.

Choose the **Instance ID** first. If the instance is not added, the information remains blank.

The **Root Information** shows the setting of the Root switch.

The **Port Information** shows the port setting and status of the ports within the instance.

##### MSTP Information

Instance ID

##### Root Information

|                |                |
|----------------|----------------|
| Root Address   | 0012.7760.ad4b |
| Root Priority  | 4096           |
| Root Port      | N/A            |
| Root Path Cost | 0              |
| Max Age        | 20 second(s)   |
| Hello Time     | 2 second(s)    |
| Forward Delay  | 15 second(s)   |

##### Port Information

| Port | Role       | Port State | Path Cost | Port Priority | Link Type          | Edge Port |
|------|------------|------------|-----------|---------------|--------------------|-----------|
| 5    | Designated | Forwarding | 200000    | 128           | P2P Internal(MSTP) | Non-Edge  |
| 6    | Designated | Forwarding | 200000    | 128           | P2P Internal(MSTP) | Non-Edge  |

Click “**Reload**” to reload the MSTP information display.

#### 4.5.7 Multiple Super Ring (MSR)

The most common industrial network redundancy is to form a ring or loop. Typically, the managed switches are connected in series and the last switch is connected back to the first one. In such connection, you can implement Korenix Multiple Super Ring technology to get fastest recovery performance.

**Multiple Super Ring (MSR)** technology is *Korenix's* 3<sup>rd</sup> generation Ring redundancy technology. This is patented and protected by *Korenix* and is used in countries all over the world. MSR ranks the fastest restore and failover time in the world, 0 ms for restore and about milliseconds level for failover for 100Base-TX copper port. The other interface may take longer time due to the media characteristics.

Advanced **Rapid Dual Homing (RDH)** technology also facilitates *JetNet Managed Switch* to connect with a core managed switch easily and conveniently. With RDH technology, you can also couple several Rapid Super Rings or RSTP cloud together, which is also known as Auto Ring Coupling.

**TrunkRing** technology allows integrate MSR with LACP/Port Trunking. The LACP/Trunk aggregated ports is a virtual interface and it can work as the Ring port of the MSR.

**MultiRing** is an outstanding technology Korenix can support. Multiple rings can be aggregated within one switch by using different Ring ID. The maximum Ring number one switch can support is half of total port volume. For example, the JetNet 6710G/6810G is a 10 port Ethernet Switch design, which means maximum 5 Rings (4 100Mbps + 1 Gigabit Rings) can be aggregated in one JetNet 6710G/6810G. The feature saves much effort when constructing complex network architecture.

To become backwards compatible with the Legacy Super Ring technology implemented in *JetNet 6710G/6810G* series switches, *JetNet 4510/4518/5000/6700/6800 Series* also supports Super Ring Client mode. The Super Ring ports can pass through Super Ring control packets extremely well and works with Super Ring.

**New Ring:** To create a Rapid Super Ring. Just fill in the Ring ID which has range from 0 to 31. If the name field is left blank, the name of this ring will be automatically naming with Ring ID.

#### New Ring

| Ring ID | Name |
|---------|------|
| 1       |      |

Add

Ring Configuration

| ID | Name  | Version       | Device Priority | Ring Port1 | Path Cost | Ring Port2 | Path Cost | Dual Homing II | Ring Status |
|----|-------|---------------|-----------------|------------|-----------|------------|-----------|----------------|-------------|
| 1  | Ring1 | Rapid Super R | 128             | Port 1     | 128       | Port 2     | 128       | Disable        | Enable      |

Apply Remove Reload

**Ring Configuration**

**ID:** Once a Ring is created, This appears and can not be changed.

**Name:** This field will show the name of the Ring. If it is not filled in when creating, it will be automatically named by the rule “RingID”.

**Version:** The version of Ring can be changed here. There are three modes to choose: Rapid Super Ring as default; Super ring for compatible with Korenix 1<sup>st</sup> general ring and Any Ring for compatible with other version of rings.

**Device Priority:** The switch with highest priority (highest value) will be automatically selected as Ring Master. Then one of the ring ports in this switch will become forwarding port and the other one will become blocking port. If all of the switches have the same priority, the switch with the biggest MAC address will be selected as Ring Master.

**Ring Port1:** In Rapid Super Ring environment, you should have 2 Ring Ports. No matter this switch is Ring Master or not, when configuring RSR, 2 ports should be selected to be Ring Ports. For Ring Master, one of the ring ports will become the forwarding port and the other one will become the blocking port.

**Path Cost:** Change the Path Cost of Ring Port1. If this switch is the Ring Master of a Ring, then it determines the blocking port. The Port with higher Path Cost in the two ring ports will become the blocking port, If the Path Cost is the same, the port with larger port number will become the blocking port.

**Ring Port2:** Assign another port for ring connection

**Path Cost:** Change the Path Cost of Ring Port2

**Rapid Dual Homing:** Rapid Dual Homing is an important feature of Korenix 3<sup>rd</sup> generation Ring redundancy technology. When you want to connect multiple RSR or form redundant topology with other vendors, RDH could allow you to have maximum 7 multiple links for redundancy without

any problem.

In Dual Homing I released with JetNet 4000/4500 series, you have to configure additional port as Dual Homing port to two uplink switches. In Rapid Dual Homing, you don't need to configure specific port to connect to other protocol. The Rapid Dual Homing will smartly choose the fastest link for primary link and block all the other link to avoid loop. If the primary link failed, Rapid Dual Homing will automatically forward the secondary link for network redundant. Of course, if there are more connections, they will be standby links and recover one of them if both primary and secondary links are broken.

**Ring status:** To enable/disable the Ring. Please remember to enable the ring after you add it.

**MultiRing:** The MultiRing technology is one of the patterns of the MSR technology; it allows you to aggregate multiple rings within one switch. Create multiple ring ID and assign different ring port 1 and port 2 to each ring, thus the switch can have multiple rings in one JetNet Switch.

When implementing MultiRing, remember that the different rings can NOT use the same ring ID. The other settings are the same as above description. Technically, the maximum ring volume the MultiRing supported is up to 16 rings. Due the limited number of ports, the number of ring network is the half of port number.

**TrunkRing:** The MultiRing technology is part of the MSR technology which combines the MSR with the port trunking technology. After multiple ports aggregated, this is so-call port trunking (Staticly or learnt by LACP protocol), the Trunk ID can be one of the port ID of the MSR technology. Configured the port trunking first then you can add the Trunk group as a Ring Port in managed switch.

### 4.5.8 Ring Info

This page shows the RSR information.

**Multiple Super Ring Information**

| ID | Version          | Role  | Status | RM MAC         | Blocking Port | Role Transition Count | Ring State Transition Count |
|----|------------------|-------|--------|----------------|---------------|-----------------------|-----------------------------|
| 1  | Rapid Super Ring | nonRM | Normal | 0012.7760.b15b | Port2         | 13                    | 29                          |

Reload

**ID:** Ring ID.

**Version:** which version of this ring, this field could be Rapid Super Ring, Super Ring, or Any Ring

**Role:** This Switch is RM or nonRM

**Status:** If this field is Normal which means the redundancy is approved. If any one of the link in this Ring is broken, then the status will be Abnormal.

**RM MAC:** The MAC address of Ring Master of this Ring. It helps to find the redundant path.

**Blocking Port:** This field shows which is blocked port of RM.

**Role Transition Count:** This means how many times this switch has changed its Role from nonRM to RM or from RM to nonRM.

**Role state Transition Count:** This number means how many times the Ring status has been transformed between Normal and Abnormal state.

4.5.9 Command Lines:

| Feature                              | Command Line                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Global (STP, RSTP, MSTP)</b>      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Enable                               | Switch(config)# spanning-tree enable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Disable                              | Switch (config)# spanning-tree disable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Mode (Choose the Spanning Tree mode) | Switch(config)# spanning-tree mode<br>rst the rapid spanning-tree protocol (802.1w)<br>stp the spanning-tree prtocol (802.1d)<br>mst the multiple spanning-tree protocol (802.1s)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Bridge Priority                      | Switch(config)# spanning-tree priority<br><0-61440> valid range is 0 to 61440 in multiple of 4096<br>Switch(config)# spanning-tree priority 4096                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Bridge Times                         | Switch(config)# spanning-tree bridge-times (forward Delay)<br>(max-age) (Hello Time)<br>Switch(config)# spanning-tree bridge-times 15 20 2<br><br>This command allows you configure all the timing in one time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Forward Delay                        | Switch(config)# spanning-tree forward-time<br><4-30> Valid range is 4~30 seconds<br>Switch(config)# spanning-tree forward-time 15                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Max Age                              | Switch(config)# spanning-tree max-age<br><6-40> Valid range is 6~40 seconds<br>Switch(config)# spanning-tree max-age 20                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Hello Time                           | Switch(config)# spanning-tree hello-time<br><1-10> Valid range is 1~10 seconds<br>Switch(config)# spanning-tree hello-time 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>MSTP</b>                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Enter the MSTP Configuration Tree    | Switch(config)# spanning-tree mst<br>MSTMAP the mst instance number or range<br>configuration enter mst configuration mode<br>forward-time the forward dleay time<br>hello-time the hello time<br>max-age the message maximum age time<br>max-hops the maximum hops<br>sync sync port state of exist vlan entry<br>Switch(config)# spanning-tree mst configuration<br>Switch(config)# spanning-tree mst configuration<br>Switch(config-mst)#<br>abort exit current mode and discard all changes<br>end exit current mode, change to enable mode and apply all changes<br>exit exit current mode and apply all changes<br>instance the mst instance<br>list Print command list<br>name the name of mst region<br>no Negate a command or set its defaults<br>quit exit current mode and apply all changes<br>revision the revision of mst region<br>show show mst configuration |
| Region Configuration                 | Region Name:<br>Switch(config-mst)# name<br>NAME the name string                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

|                                                                                                                  |                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                  | <pre>Switch(config-mst)# name korenix Region Revision: Switch(config-mst)# revision &lt;0-65535&gt; the value of revision Switch(config-mst)# revision 65535</pre>                                                                                                                                 |
| Mapping Instance to VLAN (Ex: Mapping VLAN 2 to Instance 1)                                                      | <pre>Switch(config-mst)# instance &lt;1-15&gt; target instance number Switch(config-mst)# instance 1 vlan VLANMAP target vlan number(ex.10) or range(ex.1-10) Switch(config-mst)# instance 1 vlan 2</pre>                                                                                          |
| Display Current MST Configuraion                                                                                 | <pre>Switch(config-mst)# show current Current MST configuration Name [korenix] Revision 65535 Instance Vlans Mapped ----- 0 1,4-4094 1 2 2 3 ----- Config HMAC-MD5 Digest: 0xB41829F9030A054FB74EF7A8587FF58D -----</pre>                                                                          |
| Remove Region Name                                                                                               | <pre>Switch(config-mst)# no name name configure revision revision configure instance the mst instance Switch(config-mst)# no name</pre>                                                                                                                                                            |
| Remove Instance example                                                                                          | <pre>Switch(config-mst)# no instance &lt;1-15&gt; target instance number Switch(config-mst)# no instance 2</pre>                                                                                                                                                                                   |
| Show Pending MST Configuration                                                                                   | <pre>Switch(config-mst)# show pending Pending MST configuration Name [] (-&gt;The name is removed by no name) Revision 65535 Instance Vlans Mapped ----- 0 1,3-4094 1 2 (-&gt;Instance 2 is removed by no instance 2) ----- Config HMAC-MD5 Digest: 0x3AB68794D602FDF43B21C0B37AC3BCA8 -----</pre> |
| Apply the setting and go to the configuration mode                                                               | <pre>Switch(config-mst)# quit apply all mst configuration changes Switch(config)#</pre>                                                                                                                                                                                                            |
| Apply the setting and go to the global mode                                                                      | <pre>Switch(config-mst)# end apply all mst configuration changes Switch#</pre>                                                                                                                                                                                                                     |
| Abort the Setting and go to the configuration mode.<br><br>Show Pending to see the new settings are not applied. | <pre>Switch(config-mst)# abort discard all mst configuration changes Switch(config)# spanning-tree mst configuration Switch(config-mst)# show pending Pending MST configuration Name [korenix] (-&gt;The nameis not applied after Abort settings.) Revision 65535 Instance Vlans Mapped</pre>      |



|                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                | <pre> 0      1,4-4094 1      2 2      3 (-&gt; The instance is not applied after Abort settings.) ----- Config HMAC-MD5 Digest: 0xB41829F9030A054FB74EF7A8587FF58D ----- </pre>                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>RSTP</b>                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| System RSTP Setting            | The mode should be rst, the timings can be configured in global settings listed in above.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Port Configuration Mode</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Port Configuraiton             | <pre> Switch(config)# interface fa1 Switch(config-if)# spanning-tree bpdufilter      a secure BPDU process on edge-port interfae bpduguard      a secure response to invalid                  configurations(received BPDU sent by self) cost            change an interafce's spanning-tree port path cost edge-port      interface attached to a LAN segment that is at the                  end of a bridged LAN or to an end node link-type       the link type for the Rapid Spanning Tree mst            the multiple spanning-tree port-priority   the spanning tree port priority </pre> |
| Port Path Cost                 | <pre> Switch(config-if)# spanning-tree cost &lt;1-200000000&gt; 16-bit based value range from 1-65535, 32-bit based value range from 1-200,000,000 Switch(config-if)# spanning-tree cost 200000 </pre>                                                                                                                                                                                                                                                                                                                                                                                           |
| Port Priority                  | <pre> Switch(config-if)# spanning-tree port-priority &lt;0-240&gt; Number from 0 to 240, in multiple of 16 Switch(config-if)# spanning-tree port-priority 128 </pre>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Link Type - Auto               | Switch(config-if)# spanning-tree link-type auto                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Link Type - P2P                | Switch(config-if)# spanning-tree link-type point-to-point                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Link Type – Share              | Switch(config-if)# spanning-tree link-type shared                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Edge Port                      | <pre> Switch(config-if)# spanning-tree edge-port enable Switch(config-if)# spanning-tree edge-port disable </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>MSTP Port Configuration</b> | <pre> Switch(config-if)# spanning-tree mst MSTMAP cost &lt;1-200000000&gt; the value of mst instance port cost Switch(config-if)# spanning-tree mst MSTMAP port-priority &lt;0-240&gt; the value of mst instance port priority in multiple of 16 </pre>                                                                                                                                                                                                                                                                                                                                          |
| <b>Global Information</b>      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Active Information</b>      | <pre> Switch# show spanning-tree active Spanning-Tree : Enabled      Protocol : MSTP Root Address : 0012.77ee.eeee Priority : 32768 Root Path Cost : 0           Root Port : N/A Root Times : max-age 20, hello-time 2, forward-delay 15 Bridge Address : 0012.77ee.eeee Priority : 32768 Bridge Times : max-age 20, hello-time 2, forward-delay 15 BPDU transmission-limit : 3  Port   Role      State   Cost   Prio.Nbr  Type      Aggregated ----- fa1   Designated Forwarding  200000  128.1  P2P(RSTP)  N/A fa2   Designated Forwarding  200000  128.2  P2P(RSTP)  N/A </pre>               |
| RSTP Summary                   | <pre> Switch# show spanning-tree summary Switch is in rapid-stp mode. BPDU skewing detection disabled for the bridge. </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                             | <pre> Backbonefast disabled for bridge. Summary of connected spanning tree ports : #Port-State Summary Blocking  Listening  Learning  Forwarding  Disabled -----           0          0          0          2          8 #Port Link-Type Summary AutoDetected  PointToPoint  SharedLink  EdgePort -----           9          0          1          9 </pre>                                                                                                                                                                                                                                                                                                                                                                                                          |
| Port Info                   | <pre> Switch# show spanning-tree port detail fa7 (Interface_ID) Rapid Spanning-Tree feature      Enabled Port 128.6 as Disabled Role is in Disabled State Port Path Cost 200000, Port Identifier 128.6 RSTP Port Admin Link-Type is Auto, Oper Link-Type is Point-to-Point RSTP Port Admin Edge-Port is Enabled, Oper Edge-Port is Edge Designated root has priority 32768, address 0012.7700.0112 Designated bridge has priority 32768, address 0012.7760.1aec Designated Port ID is 128.6, Root Path Cost is 600000 Timers : message-age 0 sec, forward-delay 0 sec  Link Aggregation Group: N/A, Type: N/A, Aggregated with: N/A  BPDU: sent 43759 , received 4854 TCN : sent 0 , received 0 Forwarding-State Transmit count  12 Message-Age Expired count </pre> |
| <b>MSTP Information</b>     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| MSTP Configuraiton          | <pre> Switch# show spanning-tree mst configuration Current MST configuration (MSTP is Running) Name      [korenix] Revision  65535 Instance  Vlans Mapped ----- 0         1,4-4094 1         2 2         3 -----  Config HMAC-MD5 Digest: 0xB41829F9030A054FB74EF7A8587FF58D ----- </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Display all MST Information | <pre> Switch# show spanning-tree mst ##### MST00  vlans mapped: 1,4-4094 Bridge      address 0012.77ee.eeee  priority 32768 (sysid 0) Root        this switch for CST and IST Configured  max-age 2, hello-time 15, forward-delay 20, max-hops 20  Port  Role      State      Cost    Prio.Nbr  Type ----- fa1  Designated  Forwarding 200000  128.1    P2P Internal(MSTP) fa2  Designated  Forwarding 200000  128.2    P2P Internal(MSTP)  ##### MST01  vlans mapped: 2 Bridge      address 0012.77ee.eeee  priority 32768 (sysid 1) Root        this switch for MST01  Port  Role      State      Cost    Prio.Nbr  Type </pre>                                                                                                                                    |

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                            | <pre> fa1 Designated Forwarding 200000 128.1 P2P Internal(MSTP) fa2 Designated Forwarding 200000 128.2 P2P Internal(MSTP) </pre>                                                                                                                                                                                                                                                                                                                                                                   |
| MSTP Root Information      | <pre> Switch# show spanning-tree mst root MST      Root      Root      Root      Root      Max      Hello  Fwd Instance Address    Priority   Cost      Port      age      dly ----- MST00    0012.77ee.eeee 32768    0         N/A      20      2     15 MST01    0012.77ee.eeee 32768    0         N/A      20      2     15 MST02    0012.77ee.eeee 32768    0         N/A      20      2     15 </pre>                                                                                         |
| MSTP Instance Information  | <pre> Switch# show spanning-tree mst 1 ##### MST01 vlans mapped: 2 Bridge address 0012.77ee.eeee priority 32768 (sysid 1) Root this switch for MST01  Port      Role      State      Cost      Prio.Nbr      Type ----- fa1 Designated Forwarding 200000 128.1 P2P Internal(MSTP) fa2 Designated Forwarding 200000 128.2 P2P Internal(MSTP) </pre>                                                                                                                                                 |
| MSTP Port Information      | <pre> Switch# show spanning-tree mst interface fa1 Interface fastethernet1 of MST00 is Designated Forwarding Edge Port : Edge (Edge)          BPDU Filter : Disabled Link Type : Auto (Point-to-point) BPDU Guard : Disabled Boundary : Internal(MSTP) BPDUs : sent 6352, received 0  Instance  Role      State      Cost      Prio.Nbr      Vlans mapped ----- 0 Designated Forwarding 200000 128.1 1,4-4094 1 Designated Forwarding 200000 128.1 2 2 Designated Forwarding 200000 128.1 3 </pre> |
| <b>Multiple Super Ring</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Create or configure a Ring | <pre> Switch(config)# multiple-super-ring 1 Ring 1 created Switch(config-multiple-super-ring)# <b>Note: 1 is the target Ring ID which is going to be created or configured.</b> </pre>                                                                                                                                                                                                                                                                                                             |
| Super Ring Version         | <pre> Switch(config-multiple-super-ring)# version any-ring          any ring auto detection default           set default to rapid super ring rapid-super-ring rapid super ring super-ring        super ring  Switch(config-multiple-super-ring)# version rapid-super-ring </pre>                                                                                                                                                                                                                  |
| Priority                   | <pre> Switch(config-multiple-super-ring)# priority &lt;0-255&gt; valid range is 0 to 255 default set default Switch(config)# super-ring priority 100 </pre>                                                                                                                                                                                                                                                                                                                                        |
| Ring Port                  | <pre> Switch(config-multiple-super-ring)# port IFLIST Interface list, ex: fa1,fa3-5,gi8-10 cost path cost Switch(config-multiple-super-ring)# port fa1,fa2 </pre>                                                                                                                                                                                                                                                                                                                                  |
| Ring Port Cost             | <pre> Switch(config-multiple-super-ring)# port cost &lt;0-255&gt; valid range is 0 or 255 default set default (128)valid range is 0 or 255 Switch(config-multiple-super-ring)# port cost 100 </pre>                                                                                                                                                                                                                                                                                                |


|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                   | <p>&lt;0-255&gt; valid range is 0 or 255<br/>         default set default (128)valid range is 0 or 255<br/>         Switch(config-super-ring-plus)# port cost 100 200<br/>         Set path cost success.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Rapid Dual Homing | <p>Switch(config-multiple-super-ring)# rapid-dual-homing enable<br/>         Switch(config-multiple-super-ring)# rapid-dual-homing disable<br/>         Switch(config-multiple-super-ring)# rapid-dual-homing port<br/>         IFLIST Interface name, ex: fastethernet1 or gi8<br/>         auto-detect up link auto detection<br/>         IFNAME Interface name, ex: fastethernet1 or gi8<br/>         Switch(config-multiple-super-ring)# rapid-dual-homing port fa3,fa5-6<br/>         set Rapid Dual Homing port success.<br/>         Note: auto-detect is recommended for dual Homing..</p>                                                                                                                                                                                                                                                                                |
| <b>Ring Info</b>  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Ring Info         | <p>Switch# show multiple-super-ring [Ring ID]<br/>         [Ring1] Ring1<br/>         Current Status : Disabled<br/>         Role : Disabled<br/>         Ring Status : Abnormal<br/>         Ring Manager : 0000.0000.0000<br/>         Blocking Port : N/A<br/>         Giga Copper : N/A<br/>         Configuration :<br/>         Version : Rapid Super Ring<br/>         Priority : 128<br/>         Ring Port : fa1, fa2<br/>         Path Cost : 100, 200<br/>         Dual-Homing II : Disabled<br/>         Statistics :<br/>         Watchdog sent 0, received 0, missed 0<br/>         Link Up sent 0, received 0<br/>         Link Down sent 0, received 0<br/>         Role Transition count 0<br/>         Ring State Transition count 1</p> <p>Ring ID is optional. If the ring ID is typed, this command will only display the information of the target Ring.</p> |

## 4.6 VLAN

A Virtual LAN (VLAN) is a “logical” grouping of nodes for the purpose of limiting a broadcast domain to specific members of a group without physically grouping the members together. That means, VLAN allows you to isolate network traffic so that only members of VLAN could receive traffic from the same VLAN members. Basically, creating a VLAN from a switch is the logical equivalent of physically reconnecting a group of network devices to another Layer 2 switch, without actually disconnecting these devices from their original switches.

JetNet 6710G/6810G Series Industrial Ethernet Switch supports 802.1Q VLAN. 802.1Q VLAN is also known as Tag-Based VLAN. This Tag-Based VLAN allows VLAN to be created across different switches (see Figure 1). IEEE 802.1Q tag-based VLAN makes use of VLAN control information stored in a VLAN header attached to IEEE 802.3 packet frames. This tag contains a VLAN Identifier (VID) that indicates which VLAN a frame belongs to. Since each switch only has to check a frame’s tag, without the need to dissect the contents of the frame, this also saves a lot of computing resources within the switch.

Figure 4.6-1 802.1Q VLAN (same as JetNet 6710G/JetNet 6810G)

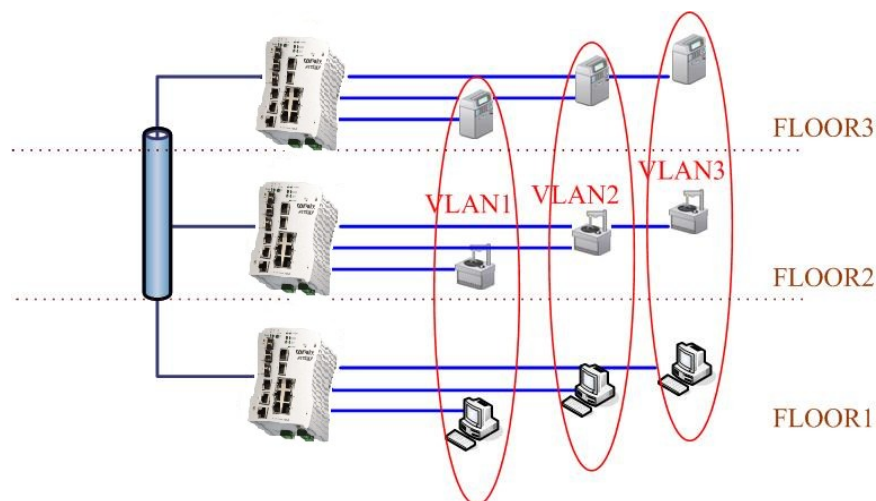

VLAN Configuration group enables you to Add/Remove VLAN, configure port Ingress/Egress parameters and view VLAN table.


Following commands are included in this group:

- 4.6.1 VLAN Port Configuration
- 4.6.2 VLAN Configuration
- 4.6.3 GVRP Configuration
- 4.6.4 VLAN Table
- 4.6.5 CLI Commands of the VLAN

4.6.1 VLAN Port Configuration

VLAN Port Configuration allows you to set up VLAN port parameters to specific port. These parameters include PVID, Accept Frame Type and Ingress Filtering.

Figure 4.6.1-1 Web UI of VLAN configuration.

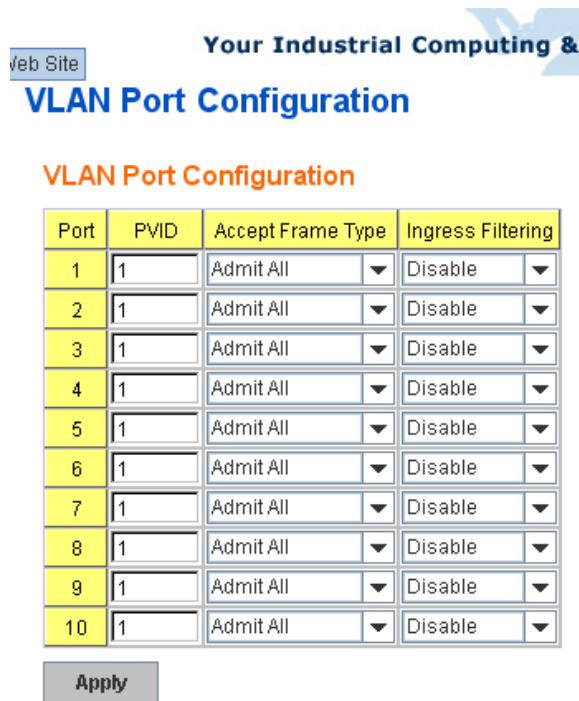

**PVID:** The abbreviation of the **Port VLAN ID**. Enter port VLAN ID here. PVID allows the switches to identify which port belongs to which VLAN. To keep things simple, it is recommended that PVID is equivalent to VLAN IDs.

The values of PVIDs are from 0 to 4095. But, 0 and 4095 are reserved. You can't input these 2 PVIDs. 1 is the default value. 2 to 4094 are valid and available in this column. Type the PVID you'd like to configure here.

**Accept Frame Type:** This column defines the accepted frame type of the port. There are 2 modes you can select, **Admit All** and **Tag Only**. Admit All mode means that the port can accept both tagged and untagged packets. Tag Only mode means that the port can only accept tagged packets.

**Ingress Filtering:** Ingress filtering helps VLAN engine to filter out undesired traffic on a port. When Ingress Filtering is enabled, the port checks whether the incoming frames belong to the VLAN they claimed or not. Then the port determines if the frames can be processed or not. For

example, if a tagged frame from Engineer VLAN is received, and Ingress Filtering is enabled, the switch will determine if the port is on the Engineer VLAN's Egress list. If it is, the frame can be processed. If it's not, the frame would be dropped.

#### 4.6.2 VLAN Configuration

In this page, you can assign Management VLAN, create the static VLAN, and assign the Egress rule for the member ports of the VLAN.

Figure 4.6.2.1 Web UI of the VLAN Configuration.

Your Industrial Computing & Networking Partner

### VLAN Configuration

**Management VLAN ID**

**Static VLAN**

| VLAN ID              | Name                 |
|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> |

**Static VLAN Configuration**

| VLAN ID | Name  | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|---------|-------|---|---|---|---|---|---|---|---|---|----|
| 1       | VLAN1 | U | U | U | U | U | U | U | U | U | U  |

**Management VLAN ID:** The switch supports management VLAN. The management VLAN ID is the VLAN ID of the CPU interface so that only member ports of the management VLAN can ping and access the switch. The default management VLAN ID is 1.

**Static VLAN:** You can assign a VLAN ID and VLAN Name for new VLAN here.

**VLAN ID** is used by the switch to identify different VLANs. Valid VLAN ID is between 1 and 4094. 1 is the default VLAN.

**VLAN Name** is a reference for network administrator to identify different VLANs. The available character is 12 for you to input. If you don't input VLAN name, the system will automatically assign VLAN name for the VLAN. The rule is VLAN (VLAN ID).

Static VLAN

| VLAN ID | NAME |
|---------|------|
| 3       | test |

Figure 4.6.2-2 The steps to create a new VLAN: Type in VLAN ID and NAME, and press **Add** to create a new VLAN. Then you can see the new VLAN in the Static VLAN Configuration table. Refer to Figure 4.6.2-3

After created the VLAN, the status of the VLAN will remain in Unused until you add ports to the VLAN.

**Note:** Before you change the management VLAN ID by Web and Telnet, remember that the port attached by the administrator should be the member port of the management VLAN; otherwise the administrator can't access the switch via the network.

**Note:** Currently JetNet6710G only support max 256 groups VLAN.

Static VLAN Configuration

You can see the created VLANs and specify the egress (outgoing) port rule to be **Untagged or Tagged** here.

Figure 4.6.2-3 Static VLAN Configuration table. You can see that new VLAN 3 is created. VLAN name is test. Egress rules of the ports are not configured now.

Static VLAN Configuration

| VLAN ID | NAME  | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 |
|---------|-------|----|----|----|----|----|----|----|----|----|----|
| 1       | VLAN1 | U  | U  | U  | U  | U  | U  | U  | U  | U  | U  |
| 2       | VLAN2 | -- | -- | -- | -- | -- | -- | -- | -- | -- | -- |
| 3       | test  | -- | -- | -- | -- | -- | -- | -- | -- | -- | -- |



Figure 4.6.2-4 Configure Egress rule of the ports.

Static VLAN Configuration

| VLAN ID | NAME  | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 |
|---------|-------|----|----|----|----|----|----|----|----|----|----|
| 1       | VLAN1 | U  | U  | U  | U  | U  | U  | U  | U  | U  | U  |
| 2       | VLAN2 | U  | U  | U  | U  | -- | -- | -- | -- | -- | -- |
| 3       | test  | -- | -- | -- | -- | U  | T  | ▼  | T  | T  | T  |

Apply Remove Reload

-- : Not available

**U: Untag:** Indicates that egress/outgoing frames are not VLAN tagged.

**T : Tag:** Indicates that egress/outgoing frames are to be VLAN tagged.

Steps to configure Egress rules: Select the VLAN ID. Entry of the selected VLAN turns to light blue. Assign Egress rule of the ports to **U** or **T**. Press **Apply** to apply the setting. If you want to remove one VLAN, select the VLAN entry. Then press **Remove** button.

### 4.6.3 GVRP configuration

GVRP allows users to set-up VLANs automatically rather than manual configuration on every port of every switch in the network.

Your Industrial Computing & Networking Partner

#### GVRP Configuration

GVRP Protocol

| Port | State   | Join Timer | Leave Timer | Leave All Timer |
|------|---------|------------|-------------|-----------------|
| 1    | Disable | 20         | 60          | 1000            |
| 2    | Disable | 20         | 60          | 1000            |
| 3    | Disable | 20         | 60          | 1000            |
| 4    | Disable | 20         | 60          | 1000            |
| 5    | Disable | 20         | 60          | 1000            |
| 6    | Disable | 20         | 60          | 1000            |
| 7    | Disable | 20         | 60          | 1000            |
| 8    | Disable | 20         | 60          | 1000            |
| 9    | Disable | 20         | 60          | 1000            |
| 10   | Disable | 20         | 60          | 1000            |

Note: Timer unit is centiseconds.

**GVRP Protocol:** Allow user to enable/disable GVRP globally.

**State:** After enable GVRP globally, here still can enable/disable GVRP by port.

**Join Timer:** Controls the interval of sending the GVRP Join BPDU. An instance of this timer is required on a per-Port, per-GARP Participant basis

**Leave Timer:** Control the time to release the GVRP reservation after received the GVRP Leave BPDU. An instance of the timer is required for each state machine that is in the LV state

**Leave All Timer:** Controls the period to initiate the garbage collection of registered VLAN. The timer is required on a per-Port, per-GARP Participant basis

### 4.6.4 VLAN Table

This table shows you current settings of your VLAN table, including VLAN ID, Name, Status, and Egress rule of the ports.

Your Industrial Computing & Networking Partner

## VLAN Table

### VLAN Table

| VLAN ID | Name  | Status | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 |
|---------|-------|--------|----|----|----|----|----|----|----|----|----|----|
| 1       | VLAN1 | Static | U  | U  | U  | U  | U  | U  | U  | U  | U  | U  |
| 2       | VLAN2 | Unused | -- | -- | -- | -- | -- | -- | -- | -- | -- | -- |
| 3       | test  | Static | -- | -- | U  | U  | -- | T  | T  | T  | -- | -- |

Reload

**VLAN ID:** ID of the VLAN.

**Name:** Name of the VLAN.

**Status:** **Static** shows this is a manually configured static VLAN. **Unused** means this VLAN is created by UI/CLI and has no member ports. This VLAN is not workable yet. **Dynamic** means this VLAN is learnt by GVRP.

After created the VLAN, the status of this VLAN will remain in unused status until you add ports to the VLAN.

### 4.6.5 CLI Commands of the VLAN

Command Lines of the VLAN port configuration, VLAN configuration and VLAN table display

| Feature                                      | Command Line                                                                                                                                                                                                  |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>VLAN Port Configuration</b>               |                                                                                                                                                                                                               |
| VLAN Port PVID                               | Switch(config-if)# switchport trunk native vlan 2<br>Set port default vlan id to 2 success                                                                                                                    |
| Port Accept Frame Type                       | Switch(config)# inter fa1<br>Switch(config-if)# acceptable frame type all<br>any kind of frame type is accepted!<br>Switch(config-if)# acceptable frame type vntaggedonly<br>only vlan-tag frame is accepted! |
| Ingress Filtering (for fast Ethernet port 1) | Switch(config)# interface fa1<br>Switch(config-if)# ingress filtering enable<br>ingress filtering enable<br>Switch(config-if)# ingress filtering disable<br>ingress filtering disable                         |
| Egress rule – Untagged                       | Switch(config-if)# switchport access vlan 2                                                                                                                                                                   |

|                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (for VLAN 2)                                                                 | switchport access vlan - success                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Egress rule – Tagged (for VLAN 2)                                            | Switch(config-if)# switchport trunk allowed vlan add 2                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Display – Port Ingress Rule (PVID, Ingress Filtering, Acceptable Frame Type) | Switch# show interface fa1<br>Interface fastethernet1<br>Administrative Status : Enable<br>Operating Status : Not Connected<br>Duplex : Auto<br>Speed : Auto<br>Flow Control :off<br>Default Port VLAN ID: 2<br>Ingress Filtering : Disabled<br>Acceptable Frame Type : All<br>Port Security : Disabled<br>Auto Negotiation : Enable<br>Loopback Mode : None<br>STP Status: disabled<br>Default CoS Value for untagged packets is 0.<br>Mdix mode is Auto.<br>Medium mode is Copper. |
| Display – Port Egress Rule (Egress rule, IP address, status)                 | Switch# show running-config<br>.....<br>!<br>interface fastethernet1<br>switchport access vlan 1<br>switchport access vlan 3<br>switchport trunk native vlan 2<br>.....<br>interface vlan1<br>ip address 192.168.10.8/24<br>no shutdown                                                                                                                                                                                                                                              |
| <b>VLAN Configuration</b>                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Create VLAN (2)                                                              | Switch(config)# vlan 2<br>vlan 2 success<br><br>Switch(config)# interface vlan 2<br>Switch(config-if)#<br><br><i>Note: In CLI configuration, you should create a VLAN interface first. Then you can start to add/remove ports. Default status of the created VLAN is unused until you add member ports to it.</i>                                                                                                                                                                    |
| Remove VLAN                                                                  | Switch(config)# no vlan 2<br>no vlan success<br><br><i>Note: You can only remove the VLAN when the VLAN is in unused mode.</i>                                                                                                                                                                                                                                                                                                                                                       |
| VLAN Name                                                                    | Switch(config)# vlan 2<br>vlan 2 has exists<br>Switch(config-vlan)# name v2<br><br>Switch(config-vlan)# no name<br><br><i>Note: Use no name to change the name to default name, VLAN VID.</i>                                                                                                                                                                                                                                                                                        |

| VLAN description                                                   | Switch(config)# interface vlan 2<br>Switch(config-if)#<br>Switch(config-if)# description this is the VLAN 2<br><br>Switch(config-if)# no description ->Delete the description.                                                                                                                                                                                                                                                                                                                                              |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|------------------|-------------|--------------|---------|--------|---|--------------|---------|--------|---|---|--------|--------|--------------|------------------|
| IP address of the VLAN                                             | Switch(config)# interface vlan 2<br>Switch(config-if)#<br>Switch(config-if)# ip address 192.168.10.18/24<br><br>Switch(config-if)# no ip address 192.168.10.8/24 ->Delete the IP address                                                                                                                                                                                                                                                                                                                                    |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Create multiple VLANs (VLAN 5-10)                                  | Switch(config)# interface vlan 5-10                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Shut down VLAN                                                     | Switch(config)# interface vlan 2<br>Switch(config-if)# shutdown<br><br>Switch(config-if)# no shutdown ->Turn on the VLAN                                                                                                                                                                                                                                                                                                                                                                                                    |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Display – VLAN table                                               | Switch# sh vlan<br><table border="1"> <thead> <tr> <th>VLAN Name</th> <th>Status</th> <th>Trunk Ports</th> <th>Access Ports</th> </tr> </thead> <tbody> <tr> <td>1 VLAN1</td> <td>Static</td> <td>-</td> <td>fa1-7,gi8-10</td> </tr> <tr> <td>2 VLAN2</td> <td>Unused</td> <td>-</td> <td>-</td> </tr> <tr> <td>3 test</td> <td>Static</td> <td>fa4-7,gi8-10</td> <td>fa1-3,fa7,gi8-10</td> </tr> </tbody> </table>                                                                                                         | VLAN Name    | Status           | Trunk Ports | Access Ports | 1 VLAN1 | Static | - | fa1-7,gi8-10 | 2 VLAN2 | Unused | - | - | 3 test | Static | fa4-7,gi8-10 | fa1-3,fa7,gi8-10 |
| VLAN Name                                                          | Status                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Trunk Ports  | Access Ports     |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| 1 VLAN1                                                            | Static                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | -            | fa1-7,gi8-10     |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| 2 VLAN2                                                            | Unused                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | -            | -                |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| 3 test                                                             | Static                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | fa4-7,gi8-10 | fa1-3,fa7,gi8-10 |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Display – VLAN interface information                               | Switch# show interface vlan1<br>interface vlan1 is up, line protocol detection is disabled<br>index 14 metric 1 mtu 1500 <UP,BROADCAST,RUNNING,MULTICAST><br>HWaddr: 00:12:77:ff:01:b0<br>inet 192.168.10.100/24 broadcast 192.168.10.255<br>input packets 639, bytes 38248, dropped 0, multicast packets 0<br>input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 0, missed 0<br>output packets 959, bytes 829280, dropped 0<br>output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0<br>collisions 0 |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| <b>GVRP configuration</b>                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| GVRP enable/disable                                                | Switch(config)# gvrp mode<br>disable Disable GVRP feature globally on the switch<br>enable Enable GVRP feature globally on the switch<br>Switch(config)# gvrp mode enable<br>Gvrp is enabled on the switch!                                                                                                                                                                                                                                                                                                                 |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Configure GVRP timer<br>Join timer /Leave timer/<br>LeaveAll timer | Switch(config)# inter fa1<br>Switch(config-if)# garp timer<br><10-10000><br>Switch(config-if)# garp timer 20 60 1000<br>Note: The unit of these timer is centisecond                                                                                                                                                                                                                                                                                                                                                        |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| <b>Management VLAN</b>                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Management VLAN                                                    | Switch(config)# int vlan 1 (Go to management VLAN)<br>Switch(config-if)# no shutdown                                                                                                                                                                                                                                                                                                                                                                                                                                        |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |
| Display                                                            | Switch# show running-config<br>....<br>!<br>interface vlan1<br>ip address 192.168.10.17/24<br>ip igmp<br>no shutdown<br>!<br>....                                                                                                                                                                                                                                                                                                                                                                                           |              |                  |             |              |         |        |   |              |         |        |   |   |        |        |              |                  |

### 4.7 Private VLAN

The private VLAN helps to resolve the primary VLAN ID shortage, client ports' isolation and network security issues. The Private VLAN provides primary and secondary VLAN within a single switch.

格式化: 縮排: 左 2.25 字元, 間距 套用後: 0.5 行, 行距: 固定行高 12 點

**Primary VLAN:** The uplink port is usually the primary VLAN. A primary VLAN contains promiscuous ports that can communicate with lower Secondary VLANs.


格式化: 字型: 12 點, 粗體

**Secondary VLAN:** The client ports are usually defined within secondary VLAN. The secondary VLAN includes Isolated VLAN and Community VLAN. The client ports can be isolated VLANs or can be grouped in the same Community VLAN. The ports within the same community VLAN can communicate with each other. However, the isolated VLAN ports can Not.

格式化: 字型: Arial, 12 點, 字型色彩: 自動

格式化: 字型: Arial, 12 點

The figure shows the typical Private VLAN network. The SCADA/Public Server or NMS workstation is usually located in primary VLAN. The clients PCs or Rings are located within Secondary.

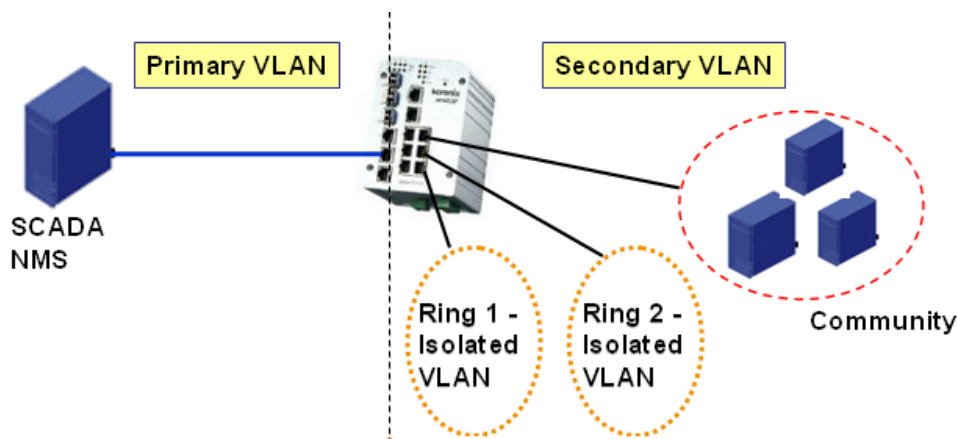

Private VLAN (PVLAN) Configuration group enables you to Configure PVLAN, PVLAN Port and see the PVLAN Information.

格式化: 內文, 行距: 單行間距, 取消項目符號與編號

Following commands are included in this group:

[4.7.1 PVLAN Configuration](#)

[4.7.2 PVLAN Port Configuration](#)

[4.7.3 CLI Commands of the PVLAN](#)

#### 4.7.1 PVLAN Configuration

格式化: 項目符號及編號

PVLAN Configuration allows you to assign Private VLAN type. After created VLAN in VLAN Configuraiton page, the available VLAN ID will display here. Choose the Private VLAN types for each VLAN you want configure.

格式化: 內文縮排1, 縮排: 左 2.24 字元, 間距 套用後: 6 點, 行距: 固定行高 12 點, 取消項目符號與編號

**None:** The VLAN is Not included in Private VLAN.

格式化: 字型: Arial, 12 點, 粗體

**Primary:** The VLAN is the Primary VLAN. The member ports can communicate with secondary ports.

格式化: 字型: Arial, 12 點, 粗體


格式化: 字型: Arial, 12 點

**Isolated:** The VLAN is the Isolated VLAN. The member ports of the VLAN are isolated.

格式化: 字型: Arial, 12 點, 粗體

**Community:** The VLAN is the Community VLAN. The member ports of the VLAN can communicate with each other.

格式化: 字型: Arial, 12 點, 粗體

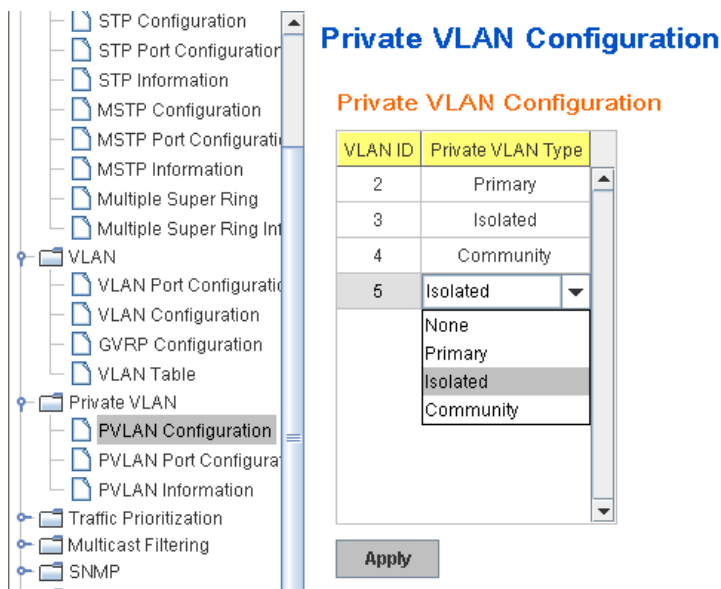

格式化: 項目符號及編號

格式化: 字型: 12 點, 法文 (法國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 粗體, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 粗體, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 英文 (美國)

格式化: 字型: 12 點, 字型色彩: 藍色

格式化: 字型色彩: 藍色, 英文 (美國)

格式化: 字型: 12 點, 粗體, 底線

格式化: 字型: 12 點, 粗體, 底線, 法文 (法國)

格式化: 字型: Arial, 12 點, 粗體, 英文 (美國)

格式化: 內文縮排1, 縮排: 左 2.24 字元, 間距 套用後: 6 點, 行距: 固定行高 12 點, 取消項目符號與編號

格式化: 字型: Arial, 12 點, 英文 (美國)

格式化: 字型: Arial, 12 點, 英文 (美國)

格式化: 字型: Arial, 12 點, 粗體, 英文 (美國)

格式化: 字型: Arial, 12 點, 英文 (美國)

格式化: 字型: Arial, 12 點, 英文 (美國)

格式化: 字型: Arial, 12 點, 粗體, 英文 (美國)

格式化: 字型: Arial, 12 點, 英文 (美國)

格式化: 字型: Arial, 12 點, 英文 (美國)

#### 4.7.2 PVLAN Port Configuration

PVLAN Port Configuration page allows configure Port Configuration and Private VLAN Association.

##### Private VLAN Association (PVLAN)

**Secondary VLAN:** After the Isolated and Community VLAN Type is assigned in Private VLAN Configuration page, the VLANs are belonged to the Secondary VLAN and displayed here.

**Primary VLAN:** After the Primary VLAN Type is assigned in Private VLAN Configuration page, the secondary VLAN can associate to the Primary VLAN ID. Select the Primary VLAN ID here.

**Note:** Before configuring PVLAN port type, the Private VLAN Association should be done first.

##### Port Configuration

###### PVLAN Port Type :

**Normal:** The Normal port is None PVLAN ports, it remains its original VLAN setting.

**Host:** The Host type ports can be mapped to the Secondary VLAN.

**Promiscuous:** The promiscuous port can be associated to the Primary VLAN.

VLAN ID: After assigned the port type, the web UI display the available VLAN ID the port can associate to.

\_\_\_\_\_  
\_\_\_\_\_

For example:

1. VLAN Create: VLAN 2-5 are created in VLAN Configuration page.

2. Private VLAN Type: VLAN 2-5 has its Private VLAN Type configured in Private VLAN Configuration page.

VLAN 2 is belonged to Primary VLAN.

VLAN 3-5 are belonged to secondary VLAN (Isolated or Community).

3. Private VLAN Association: Associate VLAN 3-5 to VLAN 2 in Private VLAN Association first.

4. Private VLAN Port Configuraition

VLAN 2 – Primary -> The member port of VLAN 2 is promiscuous port.

VLAN 3 – Isolated -> The Host port can be mapped to VLAN 3.

VLAN 4 – Community -> The Host port can be mapped to VLAN 3.

VLAN 5 – Community -> The Host port can be mapped to VLAN 3.

5. Result:

VLAN 2 -> VLAN 3, 4, 5; member ports can communicate with ports in secondary VLAN.

VLAN 3 -> VLAN 2, member ports are isolated, but it can communicate with member port of VLAN 2..

VLAN 4 -> VLAN 2, member ports within the community can communicate with each other and communicate with member port of VLAN 2.

VLAN 5 -> VLAN 2, member ports within the community can communicate with each other and communicate with member port of VLAN 2.

**Private VLAN Port Configuration**

Port Configuration

| Port | PVLAN Port Type | VLAN ID |
|------|-----------------|---------|
| 1    | Normal          | None    |
| 2    | Normal          | None    |
| 3    | Normal          | None    |
| 4    | Normal          | None    |
| 5    | Normal          | None    |
| 6    | Normal          | None    |
| 7    | Host            | 5       |
| 8    | Host            | 4       |
| 9    | Host            | 3       |
| 10   | Promiscuous     | 2       |

Apply

Private VLAN Association

| Secondary VLAN | Primary VLAN |
|----------------|--------------|
| 3              | 2            |
| 4              | 2            |
| 5              | 2            |

格式化: 字型: Arial, 12 點, 粗體, 英文(美國)

格式化: 字型: Arial, 12 點, 英文(美國)

格式化: 字型: Arial, 12 點, 英文(美國)

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 英文(美國)

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體, 英文(美國)

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點

格式化: 字型: Arial, 12 點, 英文(美國)

格式化: 字型: Arial, 12 點, 粗體

格式化: 字型: Arial

格式化: 內文縮排1, 縮排: 左 2.24 字元, 間距 套用後: 6 點, 行距: 固定行高 12 點, 取消項目符號與編號



**4.7.3 Private VLAN Information**

This page allows you to see the Private VLAN information.

**Private VLAN Information**

Private VLAN Information

| Primary VLAN | Secondary VLAN | Secondary VLAN Type | Ports |
|--------------|----------------|---------------------|-------|
| 2            | 3              | Isolated            | 10,9  |
| 2            | 4              | Community           | 10,8  |
| 2            | 5              | Community           | 10,7  |

Reload

格式化: 字型: Arial

格式化: 項目符號及編號

**4.7.4 CLI Command of the PVLAN**

Command Lines of the Private VLAN configuration

| Feature                           | Command Line                                                                                                                                                                                                                                                                      |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Private VLAN Configuration</b> |                                                                                                                                                                                                                                                                                   |
| Create VLAN                       | Switch(config)# vlan 2<br>vlan 2 success<br>Switch(config-vlan)#<br>end End current mode and change to enable mode<br>exit Exit current mode and down to previous mode<br>list Print command list<br>name Assign a name to vlan<br>no no<br>private-vlan Configure a private VLAN |
| Private VLAN Type                 | <b>Go to the VLAN you want configure first.</b><br>Switch(config)# vlan (VID)                                                                                                                                                                                                     |
| Choose the Types                  | Switch(config-vlan)# private-vlan<br>community Configure the VLAN as an community private<br>VLAN<br>isolated Configure the VLAN as an isolated private VLAN                                                                                                                      |

格式化: 內文, 行距: 單行間距, 取消項目符號與編號

格式化: 項目符號及編號

|                                                                                                              |                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <u>Primary Type</u>                                                                                          | <u>primary</u> Configure the VLAN as a <u>primary private VLAN</u><br>Switch(config-vlan)# private-vlan primary<br><cr>                                                                                                                                                                                                                               |
| <u>Isolated Type</u>                                                                                         | Switch(config-vlan)# private-vlan isolated<br><cr>                                                                                                                                                                                                                                                                                                    |
| <u>Community Type</u>                                                                                        | Switch(config-vlan)# private-vlan community<br><cr>                                                                                                                                                                                                                                                                                                   |
| <b>Private VLAN Port Configuraiton</b>                                                                       |                                                                                                                                                                                                                                                                                                                                                       |
| <u>Go to the port configuraiton</u>                                                                          | Switch(config)# interface (port number, ex: gi9)<br>Switch(config-if)# switchport private-vlan<br>host-association Set the private VLAN host association<br>mapping map primary VLAN to secondary VLAN                                                                                                                                                |
| <u>Private VLAN Port Type</u>                                                                                | Switch(config-if)# switchport mode<br>private-vlan Set private-vlan mode<br>Switch(config-if)# switchport mode private-vlan<br>host Set the mode to private-vlan host<br>promiscuous Set the mode to private-vlan promiscuous                                                                                                                         |
| <u>Promiscuous Port Type</u>                                                                                 | Switch(config-if)# switchport mode private-vlan promiscuous<br><cr>                                                                                                                                                                                                                                                                                   |
| <u>Host Port Type</u>                                                                                        | Switch(config-if)# switchport mode private-vlan host<br><cr>                                                                                                                                                                                                                                                                                          |
| <u>Private VLAN Port Configuration</u><br><u>PVLAN Port Type</u>                                             | Switch(config)# interface gi9<br>Switch(config-if)# switchport mode private-vlan host                                                                                                                                                                                                                                                                 |
| <u>Host Association</u><br><u>primary to secondary</u><br><br>(The command is only available for host port.) | Switch(config-if)# switchport private-vlan host-association<br><2-4094> Primary range VLAN ID of the private VLAN port<br>association<br>Switch(config-if)# switchport private-vlan host-association 2<br><2-4094> Secondary range VLAN ID of the private VLAN port<br>association<br>Switch(config-if)# switchport private-vlan host-association 2 3 |
| <u>Mapping primary to secondary VLANs</u><br><br>(This command is only available for promiscuous port)       | Switch(config)# interface gi10<br><br>Switch(config-if)# switchport mode private-vlan promiscuous<br><br>Switch(config-if)# switchport private-vlan mapping 2 add 3<br>Switch(config-if)# switchport private-vlan mapping 2 add 4<br>Switch(config-if)# switchport private-vlan mapping 2 add 5                                                       |
| <b>Private VLAN Information</b>                                                                              |                                                                                                                                                                                                                                                                                                                                                       |
| <u>Private VLAN Information</u>                                                                              | Switch# show vlan private-vlan<br>FLAGS: I -> Isolated P -> Promiscuous<br>C -> Community<br>Primary Secondary Type Ports<br>-----<br>2 3 Isolated gi10(P),gi9(I)<br>2 4 Community gi10(P),gi8(C)<br>2 5 Community gi10(P),fa7(C),gi9(I)<br>10 - - -                                                                                                  |

|                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><u>PVLAN Type</u></p>                                                                                             | <pre>Switch# show vlan private-vlan type Vlan Type          Ports ----- 2    primary        gi10 3    isolated       gi9 4    community      gi8 5    community      fa7,gi9 10   primary        -</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <p><u>Host List</u></p>                                                                                              | <pre>Switch# show vlan private-vlan port-list Ports Mode          Vlan ----- 1    normal         - 2    normal         - 3    normal         - 4    normal         - 5    normal         - 6    normal         - 7    host           5 8    host           4 9    host           3 10   promiscuous  2</pre>                                                                                                                                                                                                                                                                                                                             |
| <p><u>Running Config Information</u></p> <p><u>Private VLAN Type</u></p> <p><u>Private VLAN Port Information</u></p> | <pre>Switch# show run Building configuration...  Current configuration: hostname Switch vlan learning independent ! vlan 1 ! vlan 2  private-vlan primary ! vlan 3  private-vlan isolated ! vlan 4  private-vlan community ! vlan 5  private-vlan community ! ..... ..... interface fastethernet7  switchport access vlan add 2,5  switchport trunk native vlan 5  switchport mode private-vlan host  switchport private-vlan host-association 2 5 ! interface gigabitethernet8  switchport access vlan add 2,4  switchport trunk native vlan 4  switchport mode private-vlan host  switchport private-vlan host-association 2 4 !</pre> |

|  |                                                                                                                                                                                                                                                                                                                                                                                                 |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <pre> interface gigabitethernet9   switchport access vlan add 2,5   switchport trunk native vlan 5   switchport mode private-vlan host   switchport private-vlan host-association 2 3 ! interface gigabitethernet10   switchport access vlan add 2,5   switchport trunk native vlan 2   switchport mode private-vlan promiscuous   switchport private-vlan mapping 2 add 3-5 ..... ..... </pre> |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

#### 4.8 Traffic Prioritization

Quality of Service (QoS) provides traffic prioritization mechanism which allows users to deliver better service to certain flows. QoS can also help to alleviate congestion problems and ensure high-priority traffic is delivered first. This section allows you to configure Traffic Prioritization settings for each port with regard to setting priorities.

JetNet QoS supports 4 physical queues, weighted fair queuing (WRR) and Strict Priority scheme, which follows 802.1p COS tag and IPv4 TOS/DiffServ information to prioritize the traffic of your industrial network.

Following commands are included in this group:

- 4.8.1 QoS Setting
- 4.8.2 CoS-Queue Mapping
- 4.8.3 DSCP-Queue Mapping
- 4.8.4 CLI Commands of the Traffic Prioritization

4.8.1 QoS Setting

QoS Setting

Queue Scheduling

- Use an 8,4,2,1 weighted fair queuing scheme
- Use a strict priority scheme

Port Setting

| Port | CoS | Trust Mode |
|------|-----|------------|
| 1    | 0   | COS Only   |
| 2    | 0   | COS Only   |
| 3    | 0   | COS Only   |
| 4    | 0   | COS Only   |
| 5    | 0   | COS Only   |
| 6    | 0   | COS Only   |
| 7    | 0   | COS Only   |
| 8    | 0   | COS Only   |
| 9    | 0   | COS Only   |
| 10   | 0   | COS Only   |

Apply

- COS Only
- DSCP Only
- COS First
- DSCP First

**Queue Scheduling**

You can select the Queue Scheduling rule as follows:

**Use an 8,4,2,1 weighted fair queuing scheme.** This is also known as **WRR** (Weight Round Robin). JetNet will follow 8:4:2:1 rate to process the packets in a queue from the highest priority to the lowest. For example, the system will process 8 packets with the highest priority in the queue, 4 with middle priority, 2 with low priority, and 1 with the lowest priority at the same time.

**Use a strict priority scheme.** Packets with higher priority in the queue will always be processed first, except that there is no packet with higher priority.

**Port Setting**

**CoS** column is to indicate default port priority value for untagged or priority-tagged frames. When JetNet receives the frames, JetNet will attach the value to the CoS field of the incoming VLAN-tagged packets. You can

enable 0,1,2,3,4,5,6 or 7 to the port.

**Trust Mode** is to indicate Queue Mapping types for you to select.

**COS Only:** Port priority will only follow COS-Queue Mapping you have assigned.

**DSCP Only:** Port priority will only follow DSCP-Queue Mapping you have assigned.

**COS first:** Port priority will follow COS-Queue Mapping first, and then DSCP-Queue Mapping rule.

**DSCP first:** Port priority will follow DSCP-Queue Mapping first, and then COS-Queue Mapping rule.

Default priority type is **COS Only**. The system will provide default COS-Queue table to which you can refer for the next command.

After configuration, press **Apply** to enable the settings.

#### 4.8.2 CoS-Queue Mapping

This page is to change CoS values to Physical Queue mapping table. Since the switch fabric of JetNet only supports 4 physical queues, Lowest, Low, Middle and High. Users should therefore assign how to map CoS value to the level of the physical queue.

In JetNet, users can freely assign the mapping table or follow the suggestion of the 802.1p standard. Korenix uses 802.p suggestion as default values. You can find CoS values 1 and 2 are mapped to physical Queue 0, the lowest queue. CoS values 0 and 3 are mapped to physical Queue 1, the low/normal physical queue. CoS values 4 and 5 are mapped to physical Queue 2, the middle physical queue. CoS values 6 and 7 are mapped to physical Queue 3, the high physical queue.

### CoS-Queue Mapping

#### CoS-Queue Mapping

| CoS   | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|-------|---|---|---|---|---|---|---|---|
| Queue | 1 | 0 | 0 | 1 | 2 | 2 | 3 | 3 |

Note: Queue 3 is the highest priority queue in using Strict Priority scheme

Apply

After configuration, press **Apply** to enable the settings.

#### 4.8.3 DSCP-Queue Mapping

This page is to change DSCP values to Physical Queue mapping table. Since the switch fabric of JetNet only supports 4 physical queues, Lowest, Low, Middle and High. Users should therefore assign how to map DSCP value to the level of the physical queue. In JetNet, users can freely change the mapping table to follow the upper layer 3 switch or routers' DSCP setting.

#### Traffic Prioritization

##### DSCP-Queue Mapping

|       |    |    |    |    |    |    |    |    |
|-------|----|----|----|----|----|----|----|----|
| DSCP  | 0  | 1  | 2  | 3  | 4  | 5  | 6  | 7  |
| Queue | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  |
| DSCP  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 |
| Queue | 0  | 0  | 0  | 0  | 0  | 0  | 0  | 0  |
| DSCP  | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
| Queue | 0  | 0  | 0  | 0  | 0  | 0  | 0  | 0  |
| DSCP  | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| Queue | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  |
| DSCP  | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 |
| Queue | 2  | 2  | 2  | 2  | 2  | 2  | 2  | 2  |
| DSCP  | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 |
| Queue | 2  | 2  | 2  | 2  | 2  | 2  | 2  | 2  |
| DSCP  | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 |
| Queue | 3  | 3  | 3  | 3  | 3  | 3  | 3  | 3  |
| DSCP  | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 |
| Queue | 3  | 3  | 3  | 3  | 3  | 3  | 3  | 3  |

Note: Queue 3 is the highest priority queue.

Apply

After configuration, press **Apply** to enable the settings.

#### 4.8.4 CLI Commands of the Traffic Prioritization

Command Lines of the Traffic Prioritization configuration

| Feature                                    | Command Line                                                                                                                                            |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>QoS Setting</b>                         |                                                                                                                                                         |
| Queue Scheduling – Strict Priority         | Switch(config)# qos queue-sched<br>sp Strict Priority<br>wrr Weighted Round Robin (Use an 8,4,2,1 weight)<br>Switch(config)# qos queue-sched sp<br><cr> |
| Queue Scheduling - WRR                     | Switch(config)# qos queue-sched wrr                                                                                                                     |
| Port Setting – CoS (Default Port Priority) | Switch(config)# interface <b>fa1</b><br>Switch(config-if)# qos cos<br>DEFAULT-COS Assign an priority (7 highest)                                        |

|                                                      |                                                                                                                                                                                                                                    |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                      | <pre>Switch(config-if)# qos cos 7</pre> <p>The default port CoS value is set 7 ok.</p> <p><b>Note: When change the port setting, you should Select the specific port first. Ex: fa1 means fast Ethernet port 1.</b></p>            |
| Port Setting – Trust Mode- CoS Only                  | <pre>Switch(config)# interface fa1 Switch(config-if)# qos trust cos</pre> <p>The port trust is set CoS only ok.</p>                                                                                                                |
| Port Setting – Trust Mode- CoS First                 | <pre>Switch(config)# interface fa1 Switch(config-if)# qos trust cos-first</pre> <p>The port trust is set CoS first ok.</p>                                                                                                         |
| Port Setting – Trust Mode- DSCP Only                 | <pre>Switch(config)# interface fa1 Switch(config-if)# qos trust dscp</pre> <p>The port trust is set DSCP only ok.</p>                                                                                                              |
| Port Setting – Trust Mode- DSCP First                | <pre>Switch(config)# interface fa1 Switch(config-if)# qos trust dscp-first</pre> <p>The port trust is set DSCP first ok.</p>                                                                                                       |
| Display – Queue Scheduling                           | <pre>Switch# show qos queue-sched</pre> <p>QoS queue scheduling scheme : Weighted Round Robin (Use an 8,4,2,1 weight)</p>                                                                                                          |
| Display – Port Setting - Trust Mode                  | <pre>Switch# show qos trust QoS Port Trust Mode : Port  Trust Mode -----+-----  1   DSCP first  2   COS only  3   COS only  4   COS only  5   COS only  6   COS only  7   COS only  8   COS only  9   COS only 10   COS only</pre> |
| Display – Port Setting – CoS (Port Default Priority) | <pre>Switch# show qos port-cos Port Default Cos : Port  CoS -----+----  1   7  2   0  3   0  4   0  5   0  6   0  7   0  8   0  9   0 10   0</pre>                                                                                 |
| <b>CoS-Queue Mapping</b>                             |                                                                                                                                                                                                                                    |
| Format                                               | <pre>Switch(config)# qos cos-map PRIORITY Assign an priority (7 highest) Switch(config)# qos cos-map 1 QUEUE Assign an queue (0-3)</pre> <p><b>Note: Format: qos cos-map priority_value queue_value</b></p>                        |



|                              |                                                                                                                                                                                                                                                                                                            |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Map CoS 0 to Queue 1         | Switch(config)# qos cos-map 0 1<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 1 to Queue 0         | Switch(config)# qos cos-map 1 0<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 2 to Queue 0         | Switch(config)# qos cos-map 2 0<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 3 to Queue 1         | Switch(config)# qos cos-map 3 1<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 4 to Queue 2         | Switch(config)# qos cos-map 4 2<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 5 to Queue 2         | Switch(config)# qos cos-map 5 2<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 6 to Queue 3         | Switch(config)# qos cos-map 6 3<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Map CoS 7 to Queue 3         | Switch(config)# qos cos-map 7 3<br>The CoS to queue mapping is set ok.                                                                                                                                                                                                                                     |
| Display – CoS-Queue mapping  | Switch# sh qos cos-map<br>CoS to Queue Mapping :<br>CoS Queue<br>--- + ----<br>0 1<br>1 0<br>2 0<br>3 1<br>4 2<br>5 2<br>6 3<br>7 3                                                                                                                                                                        |
| <b>DSCP-Queue Mapping</b>    |                                                                                                                                                                                                                                                                                                            |
| Format                       | Switch(config)# qos dscp-map<br>PRIORITY Assign an priority (63 highest)<br>Switch(config)# qos dscp-map 0<br>QUEUE Assign an queue (0-3)<br><br><b>Format: qos dscp-map priority_value queue_value</b>                                                                                                    |
| Map DSCP 0 to Queue 1        | Switch(config)# qos dscp-map 0 1<br>The TOS/DSCP to queue mapping is set ok.                                                                                                                                                                                                                               |
| Display – DSCO-Queue mapping | Switch# show qos dscp-map<br>DSCP to Queue Mapping : (dscp = d1 d2)<br><br>d2  0 1 2 3 4 5 6 7 8 9<br>d1  <br>-----+-----<br>0   1 1 1 1 1 1 1 1 0 0<br>1   0 0 0 0 0 0 0 0 0 0<br>2   0 0 0 0 1 1 1 1 1 1<br>3   1 1 2 2 2 2 2 2 2 2<br>4   2 2 2 2 2 2 2 2 3 3<br>5   3 3 3 3 3 3 3 3 3 3<br>6   3 3 3 3 |

#### 4.9 Multicast Filtering

For multicast filtering, JetNet 6710G/6810G uses IGMP Snooping technology. IGMP (Internet Group Management Protocol) is an Internet Protocol that provides a way for internet device to report its multicast group membership to adjacent routers. Multicasting allows one computer on the internet to send data to a multitude of other computers that have identified themselves as being interested in receiving the originating computers data.

Multicasting is useful for such applications as updating the address books of mobile computer users in the field, sending out newsletters to a distribution list, and broadcasting streaming media to an audience that has tuned into the event by setting up multicast group membership.

In effect, IGMP Snooping manages multicast traffic by making use of switches, routers, and hosts that support IGMP. Enabling IGMP Snooping allows the ports to detect IGMP queries, report packets, and manage multicast traffic through the switch. IGMP has three fundamental types of messages, as shown below:

| Message            | Description                                                                                                                                    |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Query</b>       | A message sent from the querier (an IGMP router or a switch) which asks for a response from each host that belongs to the multicast group.     |
| <b>Report</b>      | A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message. |
| <b>Leave Group</b> | A message sent by a host to the querier to indicate that the host has quit as a member of a specific multicast group.                          |

You can enable **IGMP Snooping** and **IGMP Query** functions here. You will see the information of the IGMP Snooping function in this section, including different multicast groups' VID and member ports, and IP multicast addresses that range from 224.0.0.0 to 239.255.255.255.

In this section, Force filtering can determined whether the switch flooding unknown multicast or not.

Following commands are included in this group:

4.9.1 IGMP Snooping

4.9.2 IGMP Query

4.9.3 Force Filtering

4.9.4 CLI Commands of the Multicast Filtering

### 4.9.1 IGMP Snooping

This page is to enable IGMP Snooping feature, assign IGMP Snooping for specific VLAN, and view IGMP Snooping table from dynamic learnt or static manual key-in. JetNet 6710G/JetNet 6810G support IGMP snooping V1/V2/V3 automatically and IGMP query V1/V2.

**IGMP Snooping**, you can select **Enable** or **Disable** here. After enabling IGMP Snooping, you can then enable IGMP Snooping for specific VLAN. You can enable IGMP Snooping for some VLANs so that some of the VLANs will support IGMP Snooping and others won't.

To assign IGMP Snooping to VLAN, please select the **checkbox** of VLAN ID or select **Select All** checkbox for all VLANs. Then press **Enable**. In the same way, you can also **Disable** IGMP Snooping for certain VLANs.

### IGMP Snooping

**IGMP Snooping** Disable ▾

Disable  
Enable

|                                     | VID | IGMP Snooping |
|-------------------------------------|-----|---------------|
| <input checked="" type="checkbox"/> | 1   | Disabled      |

Select All

### IGMP Snooping Table

| IP Address | VID | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|------------|-----|---|---|---|---|---|---|---|---|---|----|
|            |     |   |   |   |   |   |   |   |   |   |    |

**IGMP Snooping Table:** In the table, you can see multicast group IP address, VLAN ID it belongs to, and member ports of the multicast group. JetNet 6710G/6810G series supports 256 multicast groups. Click on **Reload** to refresh the table.

**IGMP Snooping Table**

| IP Address      | VID | 1                        | 2                        | 3                        | 4                        | 5                        | 6                                   | 7                        | 8                        | 9                        | 10                       |
|-----------------|-----|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 239.255.255.250 | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 239.192.8.0     | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

**4.9.2 IGMP Query**

**Reload**

**IGMP Query**

**IGMP Query on the Management VLAN**

|                                |                      |
|--------------------------------|----------------------|
| Version                        | Disable              |
| Query Interval(s)              | <input type="text"/> |
| Query Maximum Response Time(s) | <input type="text"/> |

**Apply**

This page allows users to configure **IGMP Query** feature. Since JetNet 6710G/JetNet 6810G can only be configured by member ports of the management VLAN, IGMP Query can only be enabled on the management VLAN. If you want to run IGMP Snooping feature in several VLANs, you should notice that whether each VLAN has its own IGMP Querier first.

The IGMP querier periodically sends query packets to all end-stations on the LANs or VLANs that are connected to it. For networks with more than one IGMP querier, a switch with the lowest IP address becomes the IGMP querier.

In IGMP Query selection, you can select V1, V2 or Disable. **V1** means IGMP V1 General Query and **V2** means IGMP V2 General Query. The query will be forwarded to all multicast groups in the VLAN. **Disable** allows you to disable IGMP Query.

**Query Interval(s):** The period of query sent by querier.

**Query Maximum Response Time:** The span querier detect to confirm there are no more directly connected group members on a LAN.

Once you finish configuring the settings, click on **Apply** to apply your configuration.

### 4.9.3 Force Filtering

#### Force Filtering

Force Filtering  ▼

The Force filtering function allows the switch to filter the unknown-multicast data flow. If Force filtering is enabled, all the unknown multicast data will be discarded.

### 4.9.4 CLI Commands of the Multicast Filtering

Command Lines of the multicast filtering configuration


| Feature                         | Command Line                                                                                                                                                                                                                                                                                                    |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IGMP Snooping</b>            |                                                                                                                                                                                                                                                                                                                 |
| IGMP Snooping - Global          | Switch(config)# ip igmp snooping<br>IGMP snooping is enabled globally. Please specify on which vlans IGMP snooping enables                                                                                                                                                                                      |
| IGMP Snooping - VLAN            | Switch(config)# ip igmp snooping vlan<br>VLANLIST allowed vlan list<br>all all existed vlan<br>Switch(config)# ip igmp snooping vlan 1-2<br>IGMP snooping is enabled on VLAN 1-2.                                                                                                                               |
| Disable IGMP Snooping - Global  | Switch(config)# no ip igmp snooping<br>IGMP snooping is disabled globally ok.                                                                                                                                                                                                                                   |
| Disable IGMP Snooping - VLAN    | Switch(config)# no ip igmp snooping vlan 3<br>IGMP snooping is disabled on VLAN 3.                                                                                                                                                                                                                              |
| Display – IGMP Snooping Setting | Switch# sh ip igmp<br>interface vlan1<br>enabled: Yes<br>version: IGMPv1<br>query-interval; 125s<br>query-max-response-time: 10s<br><br>Switch# sh ip igmp snooping<br>IGMP snooping is globally enabled<br>Vlan1 is IGMP snooping enabled<br>Vlan2 is IGMP snooping enabled<br>Vlan3 is IGMP snooping disabled |
| Display – IGMP Table            | Switch# sh ip igmp snooping multicast all<br>VLAN IP Address Type Ports<br>-----<br>1 239.192.8.0 IGMP fa6,<br>1 239.255.255.250 IGMP fa6,                                                                                                                                                                      |
| <b>IGMP Query</b>               |                                                                                                                                                                                                                                                                                                                 |
| IGMP Query V1                   | Switch(config)# int vlan 1 (Go to management VLAN)<br>Switch(config-if)# ip igmp v1                                                                                                                                                                                                                             |

|                         |                                                                                                                                                                                                                                                                             |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IGMP Query V2           | Switch(config)# int vlan 1 (Go to management VLAN)<br>Switch(config-if)# ip igmp                                                                                                                                                                                            |
| IGMP Query version      | Switch(config-if)# ip igmp version 1<br>Switch(config-if)# ip igmp version 2                                                                                                                                                                                                |
| Disable                 | Switch(config)# int vlan 1<br>Switch(config-if)# no ip igmp                                                                                                                                                                                                                 |
| Display                 | Switch# sh ip igmp<br>interface vlan1<br>enabled: Yes<br>version: IGMPv2<br>query-interval: 125s<br>query-max-response-time: 10s<br><br>Switch# show running-config<br>.....<br>!<br>interface vlan1<br>ip address 192.168.10.17/24<br>ip igmp<br>no shutdown<br>!<br>..... |
| <b>Force filtering</b>  |                                                                                                                                                                                                                                                                             |
| Enable Force filtering  | Switch(config)# mac-address-table multicast filtering<br>Filtering unknown multicast addresses ok!                                                                                                                                                                          |
| Disable Force filtering | Switch(config)# no mac-address-table multicast filtering<br>Flooding unknown multicast addresses ok!                                                                                                                                                                        |

## 4.10 SNMP

Simple Network Management Protocol (SNMP) is a protocol used for exchanging management information between network devices. SNMP is a member of the TCP/IP protocol suite. JetNet 6710G/6810G series support SNMP v1 and v2c and V3.

An SNMP managed network consists of two main components: agents and a manager. An agent is a management software module that resides in a managed switch. An agent translates the local management information from the managed device into a SNMP compatible format. The manager is the console through the network.

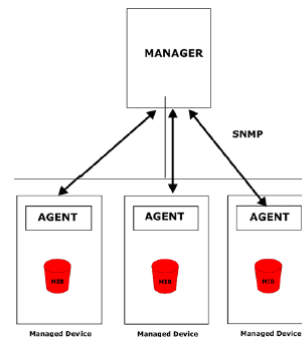

Following commands are included in this group:

### 4.10.1 SNMP Configuration

#### 4.10.2 SNMPv3 Profile

#### 4.10.3 SNMP Traps

#### 4.10.4 SNMP CLI Commands for SNMP

### 4.10.1 SNMP Configuration

This page allows users to configure SNMP V1/V2c Community. The community string can be viewed as the password because SNMP V1/V2c doesn't request you to enter password before you try to access SNMP agent.

The community includes 2 privileges, Read Only and Read and Write.

With **Read Only** privilege, you only have the ability to read the values of MIB tables. Default community string is Public.

With **Read and Write** privilege, you have the ability to read and set the values of MIB tables. Default community string is Private.

JetNet 6710G allows users to assign 4 community strings. Type the community string and select the privilege. Then press **Apply**.

**Note:** When you first install the device in your network, we highly recommend you to change the community string. Since most SNMP management application uses Public and Private as their default community name, this might be the leakage of the network security.

## SNMP

### SNMP V1/V2c Community

| Community String | Privilege        |
|------------------|------------------|
| public           | Read Only ▼      |
| private          | Read and Write ▼ |
|                  | Read Only ▼      |
|                  | Read Only ▼      |

#### 4.10.2 SNMP V3 Profile

SNMP v3 can provide more security functions when the user performs remote management through SNMP protocol. It delivers SNMP information to the administrator with user authentication; all of data between *JetNet Switch* and the administrator are encrypted to ensure secure communication.

### SNMP V3 Profile

#### SNMP V3

|                         |                      |
|-------------------------|----------------------|
| User Name               | <input type="text"/> |
| Security Level          | Authentication ▼     |
| Authentication Portocol | SHA ▼                |
| Authentication Password | <input type="text"/> |
| DES Encryption Password | <input type="text"/> |

**Security Level:** Here the user can select the following levels of security: None, User Authentication, and Authentication with privacy.

**Authentication Protocol:** Here the user can select either MD5 (Message-Digest algorithm 5) or SHA (Secure Hash Algorithm). MD5 is a widely used cryptographic hash function with a 128-bit hash value. SHA (Secure Hash Algorithm) hash functions refer to five Federal Information Processing Standard-approved algorithms for computing a condensed digital representation. *JetNet 6710G/6810G* provides 2 user authentication protocols in MD5 and SHA. You will need to configure SNMP v3 parameters for your SNMP tool with the same authentication method.



**Authentication Password:** Here the user enters the SNMP v3 user authentication password.

**DES Encryption Password:** Here the user enters the password for SNMP v3 user DES Encryption.

### 4.10.3 SNMP Traps

SNMP Trap is the notification feature defined by SNMP protocol. All the SNMP management applications can understand such trap information. So you don't need to install new application to read the notification information.

This page allows users to **Enable SNMP Trap**, configure the **SNMP Trap server IP, Community** name, and trap **Version V1 or V2**. After configuration, you can see the change of the SNMP pre-defined standard traps and Korenix pre-defined traps. The pre-defined traps can be found in Korenix private MIB, that included in the CD-manual or download from Korenix Web-site.

## SNMP Trap

**SNMP Trap**  Enable   
Disable   
Enable

### SNMP Trap Server

|           |                                                               |
|-----------|---------------------------------------------------------------|
| Server IP | <input type="text"/>                                          |
| Community | <input type="text"/>                                          |
| Version   | <input checked="" type="radio"/> V1 <input type="radio"/> V2c |

### Trap Server Profile

| Server IP      | Community | Version |
|----------------|-----------|---------|
| 192.168.10.105 | Trap-v2c  | V2c     |
| 192.168.10.103 | Trap-V1   | V1      |
|                |           |         |

#### 4.10.4 CLI Commands of the SNMP

Command Lines of the SNMP configuration

| Feature                                             | Command Line                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SNMP Community</b>                               |                                                                                                                                                                                                                                                                                                                                             |
| Read Only Community                                 | Switch(config)# snmp-server community public ro<br>community string add ok                                                                                                                                                                                                                                                                  |
| Read Write Community                                | Switch(config)# snmp-server community private rw<br>community string add ok                                                                                                                                                                                                                                                                 |
| <b>SNMP Trap</b>                                    |                                                                                                                                                                                                                                                                                                                                             |
| Enable Trap                                         | Switch(config)# snmp-server enable trap<br>Set SNMP trap enable ok.                                                                                                                                                                                                                                                                         |
| SNMP Trap Server IP without specific community name | Switch(config)# snmp-server host 192.168.10.33<br>SNMP trap host add OK.                                                                                                                                                                                                                                                                    |
| SNMP Trap Server IP with version 1 and community    | Switch(config)# snmp-server host 192.168.10.33 version 1 private<br>SNMP trap host add OK.<br><b>Note: private is the community name, version 1 is the SNMP version</b>                                                                                                                                                                     |
| SNMP Trap Server IP with version 2 and community    | Switch(config)# snmp-server host 192.168.10.33 version 2 private<br>SNMP trap host add OK.                                                                                                                                                                                                                                                  |
| Disable SNMP Trap                                   | Switch(config)# no snmp-server enable trap<br>Set SNMP trap disable ok.                                                                                                                                                                                                                                                                     |
| Display                                             | Switch# sh snmp-server trap<br>SNMP trap: Enabled<br>SNMP trap community: public<br><br>Switch# show running-config<br>.....<br>snmp-server community public ro<br>snmp-server community private rw<br>snmp-server enable trap<br>snmp-server host 192.168.10.33 version 2 admin<br>snmp-server host 192.168.10.33 version 1 admin<br>..... |

## 4.11 Security

JetNet 6710G/JetNet 6810G provides several security features for you to secure your connection. The features include Port Security and IP Security.

Following commands are included in this group:

4.11.1 Port Security

4.11.2 IP Security

4.11.3 IEEE 802.1x

4.11.4 CLI Commands of the Security

### 4.11.1 Port Security

Port Security feature allows you to stop the MAC address learning for specific port. After stopping MAC learning, only the MAC address listed in Port Security List can access the switch and transmit/receive traffic. This is a simple way to secure your network environment and not to be accessed by hackers.

This page allows you to enable Port Security and configure Port Security entry.

**Port Security State:** Change Port Security State of the port to Enable first.

**Add Port Security Entry:** Select the port, and type VID and MAC address. Format of the MAC address is xxxx.xxxx.xxxx. Ex: 0012.7701.0101. Max volume of one port is 10. So the system can accept 100 Port Security MAC addresses in total.

**Port Security List:** This table shows you those enabled port security entries. You can click on **Remove** to delete the entry.

### Port Security

#### Port Security State

| Port | State   |
|------|---------|
| 1    | Disable |
| 2    | Disable |
| 3    | Disable |
| 4    | Disable |
| 5    | Disable |
| 6    | Disable |
| 7    | Disable |
| 8    | Disable |
| 9    | Disable |
| 10   | Disable |

Apply

#### Add Port Security Entry

| Port   | VID | MAC Address    |
|--------|-----|----------------|
| Port 7 | 1   | 0012.7710.0102 |

Add

#### Port Security List

All

| Port | VID | MAC Address    |
|------|-----|----------------|
| 7    | 1   | 0012.7710.0101 |
| 7    | 1   | 0012.7710.0102 |

Remove

Once you finish configuring the settings, click on **Apply / Add** to apply your configuration.

#### 4.11.2 IP Security

In IP Security section, you can set up specific IP addresses to grant authorization for management access to this JetNet via a web browser or Telnet.

**IP Security:** Select Enable and **Apply** to enable IP security function.

**Add Security IP:** You can assign specific IP addresses, and then press **Add**. Only these IP addresses can access and manage JetNet via a web browser or Telnet. Max security IP is 10.

**Security IP List:** This table shows you added security IP addresses. You can press **Remove** to delete, **Reload** to reload the table.

#### IP Security

IP Security

**Apply**

#### Add Security IP

Security IP

**Add**

#### Security IP List

| Index | Security IP   |
|-------|---------------|
| 1     | 192.168.10.33 |

**Remove**

**Reload**

Once you finish configuring the settings, click on **Apply** to apply your configuration.

4.11.3 IEEE 802.1x

4.11.3.1 802.1X configuration

IEEE 802.1X is the protocol that performing authentication to obtain access to IEEE 802 LANs. It is port-base network access control. With the function, JetNet Switch could control which connection is available or not.

Your Industrial Computing & Networking Partner

### 802.1x Port-Based Network Access Control Configuration

**System Auth Control**

**Authentication Method**

**Radius Server**

|                  |                |
|------------------|----------------|
| RADIUS Server IP | 192.168.10.100 |
| Shared Key       | radius-key     |
| Server Port      | 1812           |
| Accounting Port  | 1813           |

**Local Radius User**

| Username | Password | VID |
|----------|----------|-----|
|          |          |     |

**Secondary Radius Server**

|                  |  |
|------------------|--|
| RADIUS Server IP |  |
| Shared Key       |  |
| Server Port      |  |
| Accounting Port  |  |

**Local Radius User List**

| Username | Password | VID |
|----------|----------|-----|
|          |          |     |

- System AuthControl:** To enable or disable the 802.1x authentication.
- Authentication Method:** Radius is a authentication server that provide key for authentication, with this method, user must connect switch to server. If user select Local for the authentication method, switch use the local user data base which can be create in this page for authentication.
- Radius Server IP:** The IP address of Radius server
- Shared Key:** it is the password for communicate between switch and Radius Server.
- Server Port:** UDP port of Radius server.
- Accounting Port:** Port for packets that contain the information of account login or logout.
- Secondary Radius Server IP:** Secondary Radius Server could be set in case of the primary radius server down.
- 802.1X Local User:** Here User can add Account/Password for local authentication.
- 802.1X Local user List:** This is a list shows the account information, User also can remove selected account Here.

**4.11.3.2 802.1x Port Configuration**

After the configuration of Radius Server or Local user list, user also need configure the authentication mode, authentication behavior, applied VLAN for each port and permitted communication. The following information will explain the port configuration.



**802.1x Port-Based Network Access Control Port Configuration**

**802.1x Port Configuration**

| Port | Port Control     | Reauthencation | Max Request | Guest VLAN | Host Mode | Admin Control Direction |
|------|------------------|----------------|-------------|------------|-----------|-------------------------|
| 1    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |
| 2    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |
| 3    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |
| 4    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |
| 5    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |
| 6    | Force Authorized | Disable        | 2           | 0          | Single    | Both                    |

**802.1x Timeout Configuration**

| Port | Re-Auth Period(s) | Quiet Period(s) | Tx Period(s) | Supplicant Timeout(s) | Server Timeout(s) |
|------|-------------------|-----------------|--------------|-----------------------|-------------------|
| 1    | 3600              | 60              | 30           | 30                    | 30                |
| 2    | 3600              | 60              | 30           | 30                    | 30                |
| 3    | 3600              | 60              | 30           | 30                    | 30                |
| 4    | 3600              | 60              | 30           | 30                    | 30                |
| 5    | 3600              | 60              | 30           | 30                    | 30                |
| 6    | 3600              | 60              | 30           | 30                    | 30                |

**Port control:** Force Authorized means this port is authorized; the data is free to in/out. Force unauthorized just opposite, the port is blocked. If users want to control this port with Radius Server, please select Auto for port control.

**Reauthentication:** If enable this field, switch will ask client to re-authenticate. The default time interval is 3600 seconds.

**Max Request:** the maximum times that the switch allow client request.

**Guest VLAN:** 0 to 4094 is available for this field. If this field is set to 0, that means the port is blocked after authentication fail. Otherwise, the port will be set to Guest VLAN.

**Host Mode:** if there are more than one device connected to this port, set the Host Mode to single means only the first PC authenticate success can access this port. If this port is set to multi, all the device can access this port once any one of them pass the authentication.

**Control Direction:** determined devices can send data out only or both send and receive.

**Re-Auth Period:** control the Re-authentication time interval, 1~65535 is available.

**Quiet Period:** When authentication failed, Switch will wait for a period and try to communicate with radius server again.

**Tx period:** the time interval of authentication request.

**Supplicant Timeout:** the timeout for the client authenticating

**Sever Timeout:** The timeout for server response for authenticating.

Once you finish configuring the settings, click on **Apply** to apply your configuration.

Click **Initialize Selected** to set the authorize state of selected port to initialize status.

Click **Reauthenticate Selected** to send EAP Request to supplicant to request reauthentication.

Click **Default Selected** to reset the configurable 802.1x parameters of selected port to the default values.

#### 4.11.3.3 802.1X Port Status

Here user can observe the port status for Port control status, Authorize Status, Authorized Supplicant and Oper Control Direction each port.

Your Industrial Computing & Networking Partner

### 802.1x Port-Based Network Access Control Port Status

| Port | Port Control     | Authorize Status | Authorized Supplicant | Oper Control Direction |
|------|------------------|------------------|-----------------------|------------------------|
| 1    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 2    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 3    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 4    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 5    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 6    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |
| 7    | Force Authorized | AUTHORIZED       | NONE                  | Both                   |

Reload

#### 4.11.4 CLI Commands of the Security

Command Lines of the Security configuration

| Feature               | Command Line                                                                                                                                                                                                                                                                                                                                           |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Port Security</b>  |                                                                                                                                                                                                                                                                                                                                                        |
| Add MAC               | Switch(config)# mac-address-table static 0012.7701.0101 vlan 1<br>interface fa1<br>mac-address-table unicast static set ok!                                                                                                                                                                                                                            |
| Port Security         | Switch(config)# interface fa1<br>Switch(config-if)# switchport port-security<br>Disables new MAC addresses learning and aging activities!<br><br><b>Note: Rule: Add the static MAC, VLAN and Port binding first, then enable the port security to stop new MAC learning.</b>                                                                           |
| Disable Port Security | Switch(config-if)# no switchport port-security<br>Enable new MAC addresses learning and aging activities!                                                                                                                                                                                                                                              |
| Display               | Switch# show mac-address-table static<br>Destination Address   Address Type    Vlan<br>Destination Port<br>-----<br>0012.7701.0101        Static            1        fa1                                                                                                                                                                               |
| <b>IP Security</b>    |                                                                                                                                                                                                                                                                                                                                                        |
| IP Security           | Switch(config)# ip security<br>Set ip security enable ok.<br>Switch(config)# ip security host 192.168.10.33<br>Add ip security host 192.168.10.33 ok.                                                                                                                                                                                                  |
| Display               | Switch# show ip security<br>ip security is enabled<br>ip security host:<br>192.168.10.33                                                                                                                                                                                                                                                               |
| <b>802.1x</b>         |                                                                                                                                                                                                                                                                                                                                                        |
| enable                | Switch(config)# dot1x system-auth-control                                                                                                                                                                                                                                                                                                              |
| disable               | Switch(config)#<br>Switch(config)# no dot1x system-auth-control<br>Switch(config)#                                                                                                                                                                                                                                                                     |
| authentic-method      | Switch(config)# dot1x authentic-method<br>local   Use the local username database for authentication<br>radius  Use the Remote Authentication Dial-In User Service (RADIUS) servers for authentication<br>Switch(config)# dot1x authentic-method radius<br>Switch(config)#                                                                             |
| radius server-ip      | Switch(config)# dot1x radius<br>Switch(config)# dot1x radius server-ip 192.168.10.120 key 1234<br><br>RADIUS Server Port number NOT given. (default=1812)<br>RADIUS Accounting Port number NOT given. (default=1813)<br>RADIUS Server IP   : 192.168.10.120<br>RADIUS Server Key  : 1234<br>RADIUS Server Port : 1812<br>RADIUS Accounting Port : 1813 |



|                                       |                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                       | Switch(config)#                                                                                                                                                                                                                                                                                                                                                        |
| radius server-ip                      | Switch(config)# dot1x radius<br>Switch(config)# dot1x radius server-ip 192.168.10.120 key 1234<br><br>RADIUS Server Port number NOT given. (default=1812)<br>RADIUS Accounting Port number NOT given. (default=1813)<br>RADIUS Server IP : 192.168.10.120<br>RADIUS Server Key : 1234<br>RADIUS Server Port : 1812<br>RADIUS Accounting Port : 1813<br>Switch(config)# |
| radius secondary-server-ip            | Switch(config)# dot1x radius secondary-server-ip 192.168.10.250 key 5678<br><br>Port number NOT given. (default=1812)<br>RADIUS Accounting Port number NOT given. (default=1813)<br>Secondary RADIUS Server IP : 192.168.10.250<br>Secondary RADIUS Server Key : 5678<br>Secondary RADIUS Server Port : 1812<br>Secondary RADIUS Accounting Port : 1813                |
| User name/password for authentication | Switch(config)# dot1x username korenix passwd korenix vlan 1                                                                                                                                                                                                                                                                                                           |

### 4.12 Warning

JetNet 6710G/JetNet 6810G provides several types of Warning features for you to remote monitor the status of end devices or the change of your network. The features include Fault Relay, System Log and SMTP E-mail Alert.

Following commands are included in this group:

- 4.12.1 Fault Relay
- 4.12.2 Event Selection
- 4.12.3 Syslog Configuration
- 4.12.4 SMTP Configuration
- 4.12.5 CLI Commands

#### 4.12.1 Fault Relay

JetNet 6710G /6810G provides 1 dry output, also known as Relay Output. The relay contacts are energized (open) for normal operation and will close under fault conditions. Fault conditions include, Ethernet port Link Failure, Ping Failure and Super Ring Topology Change. You can configure these settings in this Fault Relay Setting. The relay output is binded in M12 5-pin R-232 serial connector. There are 2 open wires at the M12-DB9 serial cable attached in Korenix original packing. You can re-wiring these 2 wires and connect to your alarm system. If the cable is loss, please contact your device supplier.

**Relay 1:** Click on checkbox of the Relay 1, then select the Event Type and its parameters.

**Event Type:** DI State, Dry Output, Power Failure, Link Failure, Ping Failure and Super Ring Failure. Each event type has its own parameters. You should also configure them. Currently, each Relay can has one event type.

#### Fault Relay Setting

|                                             |                    |
|---------------------------------------------|--------------------|
| <input checked="" type="checkbox"/> Relay 1 |                    |
| Event Type                                  | Dry Output         |
| On Period(Sec)                              | Dry Output         |
| Off Period(Sec)                             | Link Failure       |
|                                             | Ping Failure       |
|                                             | Super Ring Failure |

Apply

**Event Type:** Dry Output

**On Period (Sec):** Type the period time to turn on Relay Output. Available range of a period is 0-4294967295 seconds.

**Off Period (Sec):** Type the period time to turn off Relay Output. Available range of a period is 0-4294967295 seconds.

**How to configure:** Type turn-on period and turn-off period when the time is reached, the system will turn on or off the Relay Output. If you connect DO to DI of the other terminal unit, the setting can help you to change DI state. If you connect DO to the power set of other terminal units, this setting can help you to turn on or off the unit.

|                                             |            |
|---------------------------------------------|------------|
| <input checked="" type="checkbox"/> Relay 1 |            |
| Event Type                                  | Dry Output |
| On Period(Sec)                              | 5          |
| Off Period(Sec)                             | 10         |

Relay turn on for 5 seconds then off for 10 seconds 格式化: 字型: 粗體

**How to turn On/Off the other device:** Type “1” into the “On period” field and “0” into “Off Period” field and apply the setting, then it will be trigger to form as a close circuit.

To turn off the relay, just type “0” into the “On period” field and “1” into “Off Period” field and apply the setting, the relay will be trigger to form as a open circuit.

This function is also available in CLI, SNMP management interface. See the following setting.

|                                             |            |
|---------------------------------------------|------------|
| <input checked="" type="checkbox"/> Relay 1 |            |
| Event Type                                  | Dry Output |
| On Period(Sec)                              | 1          |
| Off Period(Sec)                             | 0          |

Turn on the relay output

|                                             |            |
|---------------------------------------------|------------|
| <input checked="" type="checkbox"/> Relay 1 |            |
| Event Type                                  | Dry Output |
| On Period(Sec)                              | 0          |
| Off Period(Sec)                             | 1          |

Turn off the relay output

**Event Type:** Like Failure

**Link:** Select the port ID you want to monitor.

**How to configure:** Select the checkbox of the Ethernet ports you want to monitor. You can select one or multiple ports. When the selected ports are linked down or broken, the system will short Relay Output and light the DO LED.

|                                             |                          |                                     |                                     |                                     |                          |                                     |                          |                          |                          |                          |
|---------------------------------------------|--------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <input checked="" type="checkbox"/> Relay 1 |                          |                                     |                                     |                                     |                          |                                     |                          |                          |                          |                          |
| Event Type                                  | Link Failure             |                                     |                                     |                                     |                          |                                     |                          |                          |                          |                          |
| Link                                        | 1                        | 2                                   | 3                                   | 4                                   | 5                        | 6                                   | 7                        | 8                        | 9                        | 10                       |
|                                             | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Apply

Event Type: **Ping Failure**

**IP Address:** IP address of the target device you want to ping.

**Reset Time (Sec):** Waiting time to short the relay output.

**Hold Time (Sec):** Waiting time to ping the target device for the duration of remote device boot

|                                             |              |
|---------------------------------------------|--------------|
| <input checked="" type="checkbox"/> Relay 1 |              |
| Event Type                                  | Ping Failure |
| IP Address                                  | 192.168.10.2 |
| Reset Time(Sec)                             | 5            |
| Hold Time(Sec)                              | 50           |

How to configure: After selecting Ping Failure event type, the system will turn Relay Output to short state and continuously ping the target device. When the ping failure occurred, the switch will turn the Relay Output to open state for a period of Reset Time.

After the Reset Time timeout, the system will turn the Relay Output to close state. After the Hold Time timer is timeout, the switch system will start ping the target device.

Ex: Reset Time is 5 sec, Hold Time is 50 sec.

If the ping failure occurred, the switch system will turn Relay output to open state to emulate power switch off for 5 sec periods. After Reset Time timeout, the Switch system will start ping target device after 50 sec periods. The period time is for target device system booting. During the period, the switch system will not ping target device until Hold Time is timeout.

**Event Type:** Super Ring Failure

Select Super Ring Failure. When the Rapid Super Ring topology is

changed, the system will short Relay Out and lengthen DO LED.

|                                             |                      |
|---------------------------------------------|----------------------|
| <input checked="" type="checkbox"/> Relay 1 |                      |
| Event Type                                  | Super Ring Failure ▼ |
|                                             |                      |

Once you finish configuring the settings, click on **Apply** to apply your configuration.

#### 4.12.2 Event Selection

Event Types can be divided into two basic groups: System Events and Port Events. System Events are related to the overall function of the switch, whereas Port Events related to the activity of specific ports

| System Event                | Warning Event is sent when.....                                                                  |
|-----------------------------|--------------------------------------------------------------------------------------------------|
| Device Cold Start           | Power is cut off and then reconnected.                                                           |
| Device Warm Start           | Reboot the device by CLI or Web UI.                                                              |
| Authentication failure      | An incorrect password, SNMP Community String is entered.                                         |
| Time Synchronize Failure    | Accessing to NTP Server is failure.                                                              |
| Fault Relay                 | The DO/Fault Relay is on.                                                                        |
| Super Ring Topology Changes | Master of Super Ring has changed or backup path is activated.                                    |
| DI1 Change                  | The Digital Input#1 status is changed. ( <b>JetNet 6710G/6810G do nt support this function</b> ) |
| Port Event                  | Warning Event is sent when.....                                                                  |
| Link-Up                     | The port is connected to another device                                                          |
| Link-Down                   | The port is disconnected (e.g. the cable is pulled out, or the opposing devices turns down)      |
| Both                        | The link status changed.                                                                         |

## Warning - Event Selection

### System Event Selection

- Device Cold Start
- Device Warm Start
- Authentication Failure
- Time Synchronize Failure
- Fault Relay
- Super Ring Topology Change

### Port Event Selection

| Port | Link State |
|------|------------|
| 1    | Disable    |
| 2    | Disable    |
| 3    | Disable    |
| 4    | Disable    |
| 5    | Disable    |
| 6    | Disable    |
| 7    | Disable    |
| 8    | Disable    |
| 9    | Disable    |
| 10   | Disable    |

### PoE Event Selection

| Port | PoE Powering Event |
|------|--------------------|
| 1    | Disable            |
| 2    | Disable            |
| 3    | Disable            |
| 4    | Disable            |
| 5    | Disable            |
| 6    | Disable            |
| 7    | Disable            |
| 8    | Disable            |

**Apply**

Once you finish configuring the settings, click on **Apply** to apply your configuration.

### 4.12.3 SysLog Configuration

System Log is useful to provide system administrator locally or remotely monitor switch events history. There are 2 System Log modes provided by JetNet 6710G/JetNet 6810G, local mode and remote mode.

**Local Mode:** In this mode, JetNet 6710G/JetNet 6810G will print the occurred events selected in the Event Selection page to System Log table of JetNet 6710G/JetNet 6810G. You can monitor the system logs in [Monitor and Diag] / [Event Log] page.

**Remote Mode:** The remote mode is also known as Server mode in JetNet managed switch series. In this mode, you should assign the IP address of the System Log server. JetNet Switch will send the occurred events selected in Event Selection page to System Log server you assigned.

**Both:** Above 2 modes can be enabled at the same time.

### Warning - SysLog configuration

|                   |         |
|-------------------|---------|
| Syslog Mode       | Disable |
| Remote IP Address | Disable |

Note: When enabled Local or Remote modes, you can monitor the system logs in the [Monitor and Diag]/[Event Log] page.

Apply

Once you finish configuring the settings, click on **Apply** to apply your configuration.

**Note:** When enabling Local or Both modes, you can monitor the system logs in [Monitor and Diag] / [Event Log] page.

#### 4.12.4 SMTP Configuration

JetNet 6710G/ JetNet 6810G supports E-mail Warning feature. The switch will send the occurred events to remote E-mail server. The receiver can then receive notification by E-mail. The E-mail warning is conformed to SMTP standard.

This page allows you to enable E-mail Alert, assign the SMTP Server IP, Sender E-mail, and Receiver E-mail. If SMTP server requests you to authorize first, you can also set up the username and password in this page.



### Warning - SMTP Configuration

E-mail Alert  ▼

#### SMTP Configuration

|                                                    |                                                |
|----------------------------------------------------|------------------------------------------------|
| SMTP Server IP                                     | <input type="text" value="192.168.10.1"/>      |
| Mail Account                                       | <input type="text" value="admin@korenix.com"/> |
| <input checked="" type="checkbox"/> Authentication |                                                |
| User Name                                          | <input type="text"/>                           |
| Password                                           | <input type="text"/>                           |
| Confirm Password                                   | <input type="text"/>                           |
| Rcpt E-mail Address 1                              | <input type="text"/>                           |
| Rcpt E-mail Address 2                              | <input type="text"/>                           |
| Rcpt E-mail Address 3                              | <input type="text"/>                           |
| Rcpt E-mail Address 4                              | <input type="text"/>                           |

| Field                                                                  | Description                                                                      |
|------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| SMTP Server IP Address                                                 | Enter the IP address of the email Server                                         |
| Authentication                                                         | Click on check box to enable password                                            |
| User Name                                                              | Enter email Account name (Max.40 characters)                                     |
| Password                                                               | Enter the password of the email account                                          |
| Confirm Password                                                       | Re-type the password of the email account                                        |
| You can set up to 4 email addresses to receive email alarm from JetNet |                                                                                  |
| Rcpt E-mail Address 1                                                  | The first email address to receive email alert from JetNet (Max. 40 characters)  |
| Rcpt E-mail Address 2                                                  | The second email address to receive email alert from JetNet (Max. 40 characters) |
| Rcpt E-mail Address 3                                                  | The third email address to receive email alert from JetNet (Max. 40 characters)  |
| Rcpt E-mail Address 4                                                  | The fourth email address to receive email alert from JetNet (Max. 40 characters) |

Once you finish configuring the settings, click on **Apply** to apply your configuration.

### 4.12.5 CLI Commands

Command Lines of the Warning configuration

| Feature                | Command Line                                                                                                                                                                                                                                                                                                       |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Relay Output</b>    |                                                                                                                                                                                                                                                                                                                    |
| Relay Output           | <pre>Switch(config)# relay 1 di      DI state dry     dry output ping    ping failure port    port link failure power   power failure ring    super ring failure</pre> <p><b>Note: Select Relay 1 or 2 first, then select the event types.</b></p>                                                                 |
| DI State               | <pre>Switch(config)# relay 1 di &lt;1-2&gt;  DI number Switch(config)# relay 1 di 1 high   high is abnormal low    low is abnormal Switch(config)# relay 1 di 1 high</pre>                                                                                                                                         |
| Dry Output             | <pre>Switch(config)# relay 1 dry &lt;0-4294967295&gt;  turn on period in second Switch(config)# relay 1 dry 5 &lt;0-4294967295&gt;  turn off period in second Switch(config)# relay 1 dry 5 5</pre>                                                                                                                |
| Ping Failure           | <pre>Switch(config)# relay 1 ping 192.168.10.33 &lt;cr&gt; reset  reset a device Switch(config)# relay 1 ping 192.168.10.33 reset &lt;1-65535&gt;  reset time Switch(config)# relay 1 ping 192.168.10.33 reset 60 &lt;0-65535&gt;  hold time to retry Switch(config)# relay 1 ping 192.168.10.33 reset 60 60</pre> |
| Port Link Failure      | <pre>Switch(config)# relay 1 port PORTLIST  port list Switch(config)# relay 1 port fa1-5</pre>                                                                                                                                                                                                                     |
| Power Failure          | <pre>Switch(config)# relay 1 power &lt;1-2&gt;  power id Switch(config)# relay 1 power 1 Switch(config)# relay 1 power 2</pre>                                                                                                                                                                                     |
| Super Ring Failure     | <pre>Switch(config)# relay 1 ring</pre>                                                                                                                                                                                                                                                                            |
| Disable Relay          | <pre>Switch(config)# no relay &lt;1-2&gt;  relay id Switch(config)# no relay 1 (Relay_ID: 1 or 2) &lt;cr&gt;</pre>                                                                                                                                                                                                 |
| Display                | <pre>Switch# show relay 1 Relay Output Type : Port Link Port : 1, 2, 3, 4, Switch# show relay 2 Relay Output Type : Super Ring</pre>                                                                                                                                                                               |
| <b>Event Selection</b> |                                                                                                                                                                                                                                                                                                                    |
| Event Selection        | <pre>Switch(config)# warning-event coldstart      Switch cold start event</pre>                                                                                                                                                                                                                                    |

|                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                           | warmstart      Switch warm start event<br>linkdown        Switch link down event<br>linkup          Switch link up event<br>all              Switch all event<br>authentication   Authentication failure event<br>di                Switch di event<br>fault-relay      Switch fault relay event<br>power            Switch power failure event<br>sfp-ddm         Switch SFP DDM abnormal event<br>super-ring      Switch super ring topology change event<br>time-sync        Switch time synchronize event |
| Ex: Cold Start event                      | Switch(config)# warning-event coldstart<br>Set cold start event enable ok.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Ex: Link Up event                         | Switch(config)# warning-event linkup<br>[IFNAME]    Interface name, ex: fastethernet1 or gi8<br>Switch(config)# warning-event linkup fa5<br>Set fa5 link up event enable ok.                                                                                                                                                                                                                                                                                                                                  |
| Display                                   | Switch# show warning-event<br>Warning Event:<br>Cold Start: Enabled<br>Warm Start: Disabled<br>Authentication Failure: Disabled<br>Link Down: fa4-5<br>Link Up: fa4-5<br>Power Failure:<br>Super Ring Topology Change: Disabled<br>Fault Relay: Disabled<br>Time synchronize Failure: Disable<br>SFP DDM: Enabled<br>DI:DI1                                                                                                                                                                                   |
| <b>Syslog Configuration</b>               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Local Mode                                | Switch(config)# log syslog local                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Server Mode                               | Switch(config)# log syslog remote 192.168.10.33                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Both                                      | Switch(config)# log syslog local<br>Switch(config)# log syslog remote 192.168.10.33                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Disable                                   | Switch(config)# no log syslog local                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>SMTP Configuration</b>                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| SMTP Enable                               | Switch(config)# smtp-server enable email-alert<br>SMTP Email Alert set enable ok.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Sender mail                               | Switch(config)# smtp-server server 192.168.10.100<br>ACCOUNT    SMTP server mail account, ex: admin@korenix.com<br>Switch(config)# smtp-server server 192.168.10.100<br>admin@korenix.com<br>SMTP Email Alert set Server: 192.168.10.100, Account:<br>admin@korenix.com ok.                                                                                                                                                                                                                                   |
| Receiver mail                             | Switch(config)# smtp-server receipt 1 korecare@korenix.com<br>SMTP Email Alert set receipt 1: korecare@korenix.com ok.                                                                                                                                                                                                                                                                                                                                                                                        |
| Authentication with username and password | Switch(config)# smtp-server authentication username admin<br>password admin<br>SMTP Email Alert set authentication Username: admin, Password:<br>admin<br><br><b>Note: You can assign string to username and password.</b>                                                                                                                                                                                                                                                                                    |
| Disable SMTP                              | Switch(config)# no smtp-server enable email-alert<br>SMTP Email Alert set disable ok.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Disable Authentication                    | Switch(config)# no smtp-server authentication                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

|         |                                                                                                                                                                                                                                                                                      |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | SMTP Email Alert set Authentication disable ok.                                                                                                                                                                                                                                      |
| Dispaly | Switch# sh smtp-server<br>SMTP Email Alert is Enabled<br>Server: 192.168.10.100, Account: admin@korenix.com<br>Authentication: Enabled<br>Username: admin, Password: admin<br>SMTP Email Alert Receipt:<br>Receipt 1: korecare@korenix.com<br>Receipt 2:<br>Receipt 3:<br>Receipt 4: |

## 4.13 Monitor and Diag

JetNet 6710G/6810G provides several types of features for you to monitor the status of the switch or diagnostic for you to check the problem when encountering problems related to the switch. The features include MAC Address Table, Port Statistics, Port Mirror, Event Log and Ping.

Following commands are included in this group:

4.13.1 MAC Address Table

4.13.2 Port Statistics

4.13.3 Port Mirror

4.13.4 Event Log

4.13.5 Topology Discovery

4.13.6 Ping

4.13.7 CLI Commands of the Monitor and Diag

### 4.13.1 MAC Address Table

JetNet 6710G/6810G provides 8K entries in MAC Address Table. In this page, users can change the Aging time, add Static Unicast MAC Address, monitor the MAC address or sort them by different packet types and ports. Click on **Apply** to change the value.

#### Aging Time (Sec)

Each switch fabric has limit size to write the learnt MAC address. To save more entries for new MAC address, the switch fabric will age out non-used MAC address entry per Aging Time timeout. The default Aging Time is 300 seconds. The Aging Time can be modified in this page.

#### Static Unicast MAC Address

In some applications, users may need to type in the static Unicast MAC address to its MAC address table. In this page, you can type MAC Address (format: xxxx.xxxx.xxxx), select its VID and Port ID, and then click on **Add** to add it to MAC Address table.

#### MAC Address Table

In this MAC Address Table, you can see all the MAC Addresses learnt by the switch fabric. The packet types include Management Unicast, Static Unicast, Dynamic Unicast, Static Multicast and Dynamic Multicast. The table allows users to sort the address by the packet types and port.

**Packet Types: Management Unicast** means MAC address of the switch. It belongs to CPU port only. **Static Unicast** MAC address can be added and deleted. **Dynamic Unicast** MAC is MAC address learnt by the switch Fabric. **Static Multicast** can be added by CLI and can be deleted by Web and CLI. **Dynamic Multicast** will appear after you enabled IGMP and the switch learnt IGMP report.

Click on **Remove** to remove the static Unicast/Multicast MAC address. Click on **Reload** to refresh the table. New learnt Unicast/Multicast MAC

address will be updated to MAC address table.

### MAC Address Table

Aging Time (Sec)

**Apply**

#### Static Unicast MAC Address

| MAC Address          | VID                  | Port                                    |
|----------------------|----------------------|-----------------------------------------|
| <input type="text"/> | <input type="text"/> | Port 1 <input type="button" value="v"/> |

**Add**

MAC Address Table

| MAC Address    | Address Type       | VID | 1                        | 2                        | 3                        | 4                                   | 5                        | 6                        | 7                                   | 8                        | 9                        | 10                       |
|----------------|--------------------|-----|--------------------------|--------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|
| 000f.b079.ca3b | Dynamic Unicast    | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0012.7701.0386 | Dynamic Unicast    | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0012.7710.0101 | Static Unicast     | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0012.7710.0102 | Static Unicast     | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0012.77ff.0100 | Management Unicast | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0100.5e40.0800 | fa6 Multicast      | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 0100.5e7f.ffa  | fa4,fa6 Multicast  | 1   | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

**Remove**

**Reload**

#### 4.13.2 Port Statistics

In this page, you can view operation statistics for each port. The statistics that can be viewed include Link Type, Link State, Rx Good, Rx Bad, Rx Abort, Tx Good, Tx Bad and Collision. Rx means the received packet while Tx means the transmitted packets.

*Note: If you see many Bad, Abort or Collision counts increased, that may mean your network cable is not connected well, the network performance of the port is poor...etc. Please check your network cable, Network Interface Card of the connected device, the network application, or reallocate the network traffic...etc.*

Click on **Clear Selected** to reinitialize the counts of the selected ports, and **Clear All** to reinitialize the counts of all ports. Click on **Reload** to refresh the counts.

Port Statistics

| Port | Type     | Link | State  | Rx Good | Rx Bad | Rx Abort | Tx Good | Tx Bad | Collision |
|------|----------|------|--------|---------|--------|----------|---------|--------|-----------|
| 1    | 100BASE  | Up   | Enable | 2435    | 0      | 2        | 12508   | 0      | 0         |
| 2    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 3    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 4    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 5    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 6    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 7    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 8    | 100BASE  | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 9    | 1000BASE | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |
| 10   | 1000BASE | Down | Enable | 0       | 0      | 0        | 0       | 0      | 0         |

4.13.3 Port Mirroring

Port mirroring (also called port spanning) is a tool that allows you to mirror the traffic from one or more ports onto another port, without disrupting the flow of traffic on the original port. Any traffic that goes into or out of the Source Port(s) will be duplicated at the Destination Port. This traffic can then be analyzed at the Destination port using a monitoring device or application. A network administrator will typically utilize this tool for diagnostics, debugging, or fending off attacks.

**Port Mirror Mode:** Select Enable/Disable to enable/disable Port Mirror.

**Source Port:** This is also known as Monitor Port. These are the ports you want to monitor. The traffic of all source/monitor ports will be copied to destination/analysis ports. You can choose a single port, or any combination of ports, but you can only monitor them in Rx or TX only. Click on checkbox of the Port ID, RX, Tx or Both to select the source ports.

**Destination Port:** This is also known as Analysis Port. You can analyze the traffic of all the monitored ports at this port without affecting the flow of traffic on the port(s) being monitored. Only one RX/TX of the destination port can be selected. A network administrator would typically connect a LAN analyzer or Netxray device to this port.

Once you finish configuring the settings, click on **Apply** to apply the settings.

### Port Mirroring

Port Mirror Mode

#### Port Selection

| Port | Source Port                         |                                     | Destination Port                 |                                  |
|------|-------------------------------------|-------------------------------------|----------------------------------|----------------------------------|
|      | Rx                                  | Tx                                  | Rx                               | Tx                               |
| 1    | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="radio"/>            | <input type="radio"/>            |
| 2    | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="radio"/>            | <input type="radio"/>            |
| 3    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input checked="" type="radio"/> | <input type="radio"/>            |
| 4    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input checked="" type="radio"/> |
| 5    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |
| 6    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |
| 7    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |
| 8    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |
| 9    | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |
| 10   | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="radio"/>            | <input type="radio"/>            |

#### 4.13.4 Event Log

In the 4.11.3, we have introduced System Log feature. When System Log Local mode is selected, JetNet 6710G/JetNet 6810G will record occurred events in local log table. This page shows this log table. The entry includes the index, occurred data and time and content of the events.

Click on **Clear** to clear the entries. Click on **Reload** to refresh the table.

#### System Event Logs

| Index | Date  | Time     | Event Log           |
|-------|-------|----------|---------------------|
| 1     | Jan 1 | 02:50:53 | Event: Link 4 Up.   |
| 2     | Jan 1 | 02:50:51 | Event: Link 5 Down. |
| 3     | Jan 1 | 02:50:50 | Event: Link 5 Up.   |
| 4     | Jan 1 | 02:50:47 | Event: Link 4 Down. |

#### 4.13.5 Topology Discovery

JetNet 6710G /JetNet 6810G support network topology discovery or LLDP (IEEE 802.1AB Link Layer Discovery Protocol) function that can help user to discovery multi-vendor's network device on same segment by NMS



system which supports LLDP function; With LLDP function, NMS can easier maintain the topology map, display port ID, port description, system description, VLAN ID... Once the link failure, the topology change events can be updated to the NMS as well. The LLDP Port State can display the neighbor ID and IP learnt from the connected devices. You can purchase Korenix JetView Pro iNMS as your network management platform.

Once configured the Management Switch's LLDP setting, it will be auto discover by the NMS platform, like as JetView Pro.

The configuration and settings explain as following.

**LLDP:** Select Enable/Disable to enable/disable LLDP function.

**LLDP Configuration:** To configure the related timer of LLDP.

**LLDP Timer:** the interval time of each LLDP and counts in second; the valid number is from 5 to 254, default is 30 seconds.

**LLDP Hold time:** The TTL (Time To Live) timer. The LLDP state will be expired once the LLDP is not received by the hold time. The default is 120 seconds.

**Local port:** the current port number that linked with neighbor network device.

**Neighbor ID:** the MAC address of neighbor device on the same network segment.

**Neighbor IP:** the IP address of neighbor device on the same network segment.

**Neighbor VID:** the VLAN ID of neighbor device on the same network segment.

#### 4.13.6 Ping Utility

This page provides **Ping Utility** for users to ping remote device and check whether the device is alive or not. Type **Target IP** address of the target device and click on **Start** to start the ping. After few seconds, you can see the result in the **Result** field.

## Ping Utility

### Ping

Target IP

### Result

```
PING 192.168.10.33 (192.168.10.33): 56 data bytes
64 bytes from 192.168.10.33: icmp_seq=0 ttl=128 time=0.0 ms
64 bytes from 192.168.10.33: icmp_seq=1 ttl=128 time=0.0 ms
64 bytes from 192.168.10.33: icmp_seq=2 ttl=128 time=0.0 ms
64 bytes from 192.168.10.33: icmp_seq=3 ttl=128 time=0.0 ms
64 bytes from 192.168.10.33: icmp_seq=4 ttl=128 time=0.0 ms

--- 192.168.10.33 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.0/0.0/0.0 ms
```

#### 4.13.7 CLI Commands of the Monitor and Diag

Command Lines of the Monitor and Diag configuration

| Feature                            | Command Line                                                                                                                                                                                                                                    |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>MAC Address Table</b>           |                                                                                                                                                                                                                                                 |
| Ageing Time                        | Switch(config)# mac-address-table aging-time 350<br>mac-address-table aging-time set ok!<br><br><i>Note: 350 is the new ageing timeout value.</i>                                                                                               |
| Add Static Unicast MAC address     | Switch(config)# mac-address-table static 0012.7701.0101<br>vlan 1 interface fastethernet7<br>mac-address-table ucast static set ok!<br><br><b>Note: rule: mac-address-table static MAC_address VLAN VID interface interface_name</b>            |
| Add Multicast MAC address          | Switch(config)# mac-address-table multicast 0100.5e01.0101<br>vlan 1 interface fa6-7<br>Adds an entry in the multicast table ok!<br><br><b>Note: rule: mac-address-table multicast MAC_address VLAN VID interface_list interface_name/range</b> |
| Show MAC Address Table – All types | Switch# show mac-address-table<br><br>***** UNICAST MAC ADDRESS *****<br>Destination Address    Address Type    Vlan    Destination Port<br>-----<br>000f.b079.ca3b        Dynamic        1        fa4                                          |

|                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | <pre> 0012.7701.0386      Dynamic      1      fa7 0012.7710.0101      Static       1      fa7 0012.7710.0102      Static       1      fa7 0012.77ff.0100      Management   1 ***** MULTICAST MAC ADDRESS ***** Vlan  Mac Address      COS      Status  Ports -----  1   0100.5e40.0800    0      fa6  1   0100.5e7f.ffa    0      fa4,fa6 </pre>                                                                                                                                                                                                                                                                                                                                                                                   |
| Show MAC Address Table – Dynamic Learnt MAC addresses | <pre> Switch# show mac-address-table dynamic Destination Address  Address Type  Vlan  Destination Port ----- 000f.b079.ca3b      Dynamic      1      fa4 0012.7701.0386      Dynamic      1      fa7 </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Show MAC Address Table – Multicast MAC addresses      | <pre> Switch# show mac-address-table multicast Vlan  Mac Address      COS      Status  Ports -----  1   0100.5e40.0800    0      fa6-7  1   0100.5e7f.ffa    0      fa4,fa6-7 </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Show MAC Address Table – Static MAC addresses         | <pre> Switch# show mac-address-table static Destination Address  Address Type  Vlan  Destination Port ----- 0012.7710.0101      Static       1      fa7 0012.7710.0102      Static       1      fa7 </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Show Aging timeout time                               | <pre> Switch# show mac-address-table aging-time the mac-address-table aging-time is 300 sec. </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Port Statistics</b>                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Port Statistics                                       | <pre> Switch# show rmon statistics fa4 (select interface) Interface fastethernet4 is enable connected, which has Inbound:   Good Octets: 178792, Bad Octets: 0   Unicast: 598, Broadcast: 1764, Multicast: 160   Pause: 0, Undersize: 0, Fragments: 0   Oversize: 0, Jabbers: 0, Disacrd: 0   Filtered: 0, RxError: 0, FCSError: 0 Outbound:   Good Octets: 330500   Unicast: 602, Broadcast: 1, Multicast: 2261   Pause: 0, Deferred: 0, Collisions: 0   SingleCollision: 0, MultipleCollision: 0   ExcessiveCollision: 0, LateCollision: 0   Filtered: 0, FCSError: 0 Number of frames received and transmitted with a length of:   64: 2388, 65to127: 142, 128to255: 11   256to511: 64, 512to1023: 10, 1024toMaxSize: 42 </pre> |
| <b>Port Mirroring</b>                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Enable Port Mirror                                    | <pre> Switch(config)# mirror en Mirror set enable ok. </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Disable Port Mirror                                   | <pre> Switch(config)# mirror disable Mirror set disable ok. </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Select Source Port                                    | <pre> Switch(config)# mirror source fa1-2   both  Received and transmitted traffic   rx    Received traffic   tx    Transmitted traffic Switch(config)# mirror source fa1-2 both Mirror source fa1-2 both set ok. </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |


|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                         | <b>Note: Select source port list and TX/RX/Both mode.</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Select Destination Port | Switch(config)# mirror destination fa6 both<br>Mirror destination fa6 both set ok                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Display                 | Switch# show mirror<br>Mirror Status : Enabled<br>Ingress Monitor Destination Port : fa6<br>Egress Monitor Destination Port : fa6<br>Ingress Source Ports :fa1,fa2,<br>Egress Source Ports :fa1,fa2,                                                                                                                                                                                                                                                                                                                                                            |
| <b>Event Log</b>        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Display                 | Switch# show event-log<br><1>Jan 1 02:50:47 snmpd[101]: Event: Link 4 Down.<br><2>Jan 1 02:50:50 snmpd[101]: Event: Link 5 Up.<br><3>Jan 1 02:50:51 snmpd[101]: Event: Link 5 Down.<br><4>Jan 1 02:50:53 snmpd[101]: Event: Link 4 Up.                                                                                                                                                                                                                                                                                                                          |
| <b>Ping</b>             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Ping IP                 | Switch# ping 192.168.10.33<br>PING 192.168.10.33 (192.168.10.33): 56 data bytes<br>64 bytes from 192.168.10.33: icmp_seq=0 ttl=128 time=0.0 ms<br>64 bytes from 192.168.10.33: icmp_seq=1 ttl=128 time=0.0 ms<br>64 bytes from 192.168.10.33: icmp_seq=2 ttl=128 time=0.0 ms<br>64 bytes from 192.168.10.33: icmp_seq=3 ttl=128 time=0.0 ms<br>64 bytes from 192.168.10.33: icmp_seq=4 ttl=128 time=0.0 ms<br><br>--- 192.168.10.33 ping statistics ---<br>5 packets transmitted, 5 packets received, 0% packet loss<br>round-trip min/avg/max = 0.0/0.0/0.0 ms |

### 4.14 Device Front Panel

Device Front Panel commands allows you to see LED status of the switch. You can see LED and link status of the Power, DO, R.M. and Ports. (the reference figure is JetNet 6710G).

| Feature | LED On                                     | LED Blinking                                           | LED off                                  |
|---------|--------------------------------------------|--------------------------------------------------------|------------------------------------------|
| Power   | Power is on applying                       | Not available                                          | No power                                 |
| Sys     | System ready                               | System is on progress<br>firmware upgrade or not ready | System not ready                         |
| R.S.    | Green on: switch is working as ring master | Red blinking: Ring failed                              | Switch is working at slave mode.         |
| Alarm   | Green on: alarm relay activated.           | Not available                                          | Green off:                               |
| LNK/ACT | Port is linked                             | Port is on transmitting                                | Port is link down                        |
| PoE     | Green on: IEEE 802.3af forwarding          | On detecting                                           | Power output over current or cable short |
|         | Blue on:IEEE 802.3at forwarding            | On detecting                                           | Power output over current or cable short |

### Device Front Panel

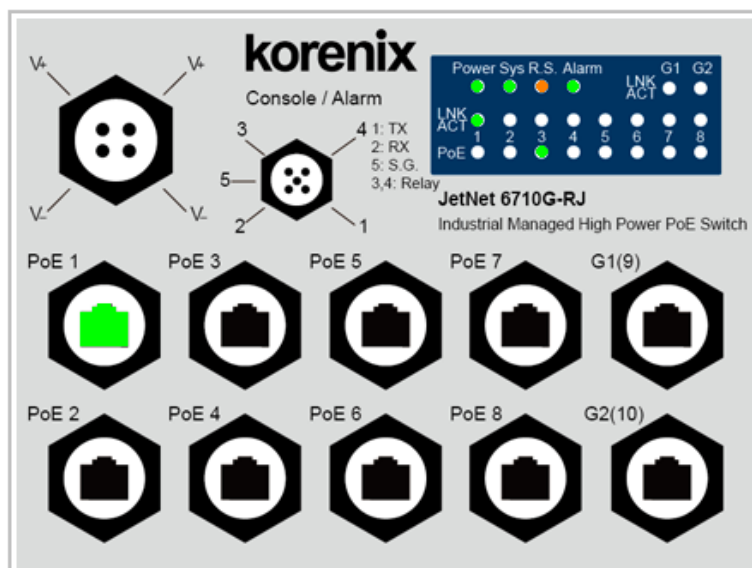


**Note:** No CLI command for this feature.

### 4.15 Save to Flash

**Save Configuration** allows you to save any configuration you just made to the Flash. Powering off the switch without clicking on **Save Configuration** will cause loss of new settings. After selecting **Save Configuration**, click on **Save to Flash** to save your new configuration.



Note: This command will permanently save the current configuration to flash.




**Command Lines:**

| Feature | Command Line                                                                                                                              |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Save    | SWITCH# write<br>Building Configuration...<br>[OK]<br><br>Switch# copy running-config startup-config<br>Building Configuration...<br>[OK] |

### 4.16 Logout

The switch provides 2 logout methods. The web connection will be logged out if you don't input any command after 30 seconds. The Logout command allows you to manually logout the web connection. Click on **Yes** to logout, **No** to go back the configuration page.

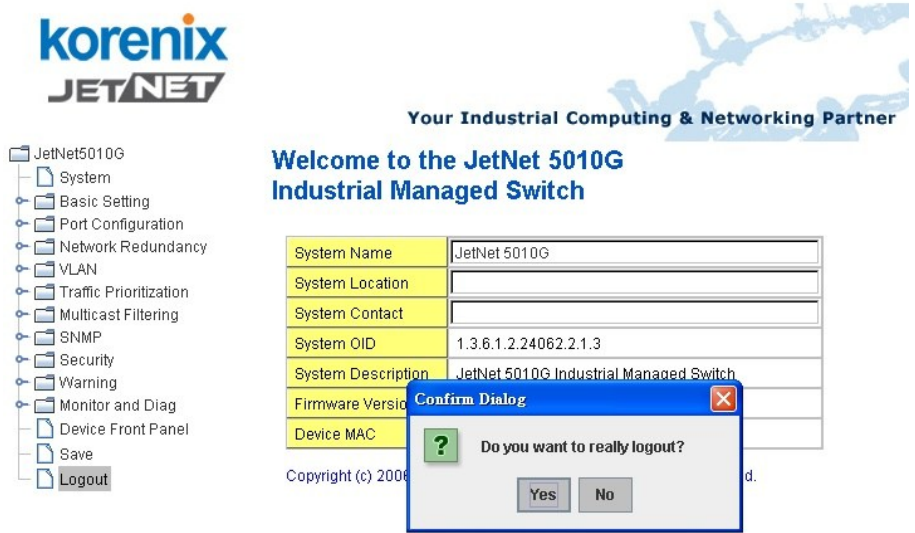

**Command Lines:**

| Feature | Command Line |
|---------|--------------|
| Logout  | SWITCH> exit |
|         | SWITCH# exit |

## 5 Appendix

### 5.1 JetNet 6710G Product Specifications

#### Technology

|                 |                                                      |
|-----------------|------------------------------------------------------|
| <b>Standard</b> | IEEE 802.3 10 Base-T Ethernet                        |
|                 | IEEE 802.3u 100 Base-TX Fast Ethernet                |
|                 | IEEE 802.3ab 1000 Base-T                             |
|                 | IEEE 802.3x Flow Control and Back-pressure           |
|                 | IEEE 802.3af Power over Ethernet                     |
|                 | IEEE 802.3at Power over Ethernet Plus (LLDP PoE)     |
|                 | IEEE 802.1AB Link Layer Discovery Protocol (LLDP)    |
|                 | IEEE 802.1p Class of Service (CoS)                   |
|                 | IEEE 802.1Q VLAN and GVRP                            |
|                 | IEEE 802.1D-2004 Rapid Spanning Tree Protocol (RSTP) |
|                 | IEEE 802.1s Multiple Spanning Tree (MSTP)            |
|                 | IEEE802.3ad Link Aggregation Protocol (LACP)         |
|                 | IEEE802.1x Port Based Network Access Protocol        |

#### System Performance

|                             |                                                                                                           |
|-----------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Switch Technology</b>    | Store and Forward Technology with 32Gbps Switch Fabric.                                                   |
| <b>System Throughput</b>    | 8.3Mpps / 64 bytes packet size                                                                            |
| <b>CPU performance</b>      | 32 bits ARM-9E running at 180 Mhz and performance up to 200MIPS; Embedded hardware based watch-dog timer. |
| <b>System Memory</b>        | 8M bytes flash ROM, 64M bytes SDRAM.                                                                      |
| <b>Transfer packet size</b> | 64 bytes to 1522 bytes (includes VLAN Tag).                                                               |
| <b>MAC Address</b>          | 8K MAC address table.                                                                                     |
| <b>Packet Buffer</b>        | 1Mega bits shared memory for packet buffer.                                                               |
| <b>Transfer performance</b> | 14,880pps for Ethernet and 148,800 for Fast Ethernet, 1488,100 for Gigabit Ethernet                       |
| <b>Environment</b>          | Embedded board-level thermal detector for system                                                          |
| <b>Monitoring</b>           | temperature monitoring.                                                                                   |
| <b>Relay Alarm</b>          | Dry Relay output with 1A /24V DC ability.                                                                 |

#### System Management

|                          |                                                       |
|--------------------------|-------------------------------------------------------|
| <b>Configuration and</b> | Telnet, local RS-232 console, Web- browser interface, |
|--------------------------|-------------------------------------------------------|



|                                           |                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>monitoring interface</b>               | SNMP, Trap and SMTP interface.<br>Cisco-Like CLI, Telnet, Web, TFTP/Web Update for firmware and configuration backup and restore, DHCP Client, warm reboot, reset to default, Admin password, Port Speed/Duplex Control, status, statistic, MAC address table display, static MAC, Aging time, SNMP v1, v2c, v3, Traps and RMON groups 1,2,3,9. |
| <b>Telnet &amp; Local Console</b>         | Supports command line interface with Cisco like commands with maximum 4 sessions and also supports SSH.                                                                                                                                                                                                                                         |
| <b>SNMP</b>                               | v1, v2c, V3 with SNMP trap function, trap station up to 4 and can be manually configured the trap server IP address.                                                                                                                                                                                                                            |
| <b>SNMP MIB</b>                           | MIBII, Bridge MIB, Ethernet-like MIB, VLAN MIB, IGMP MIB, Korenix Private MIB.                                                                                                                                                                                                                                                                  |
| <b>Korenix Utility</b>                    | Supports JetView and JetView Pro with IEEE 802.1AB Link Layer Discovery Protocol for device finding and link topology discovery                                                                                                                                                                                                                 |
| <b>Network Time Protocol</b>              | Supports NTP protocol with daylight saving and localize time sync function.                                                                                                                                                                                                                                                                     |
| <b>Management IP Security</b>             | IP address security to prevent unauthorized access                                                                                                                                                                                                                                                                                              |
| <b>E-mail Warning System Log</b>          | 4 receipt E-mail accounts with server authentication<br>Supports both of Local or remote Server with authentication                                                                                                                                                                                                                             |
| <b>Network Performance</b>                |                                                                                                                                                                                                                                                                                                                                                 |
| <b>Port Configuration</b>                 | Port link Speed, Link mode, current status and enable/disable.                                                                                                                                                                                                                                                                                  |
| <b>Port Trunk</b>                         | IEEE 802.3ad port aggregation and static port trunk; trunk member up to 8 ports and maximum 5 trunk groups include Gigabit Ethernet port.                                                                                                                                                                                                       |
| <b>VLAN</b>                               | IEEE 802.1Q VLAN with GVRP. 256 VLAN groups, VLAN ID from 1 to 4094.<br>Supports Trunk, Hybrid and Link access modes.                                                                                                                                                                                                                           |
| <b>Private VLAN</b>                       | Direct client ports in isolated/community VLAN to promiscuous port in primary VLAN                                                                                                                                                                                                                                                              |
| <b>IEEE 802.1 Q-in-Q Class of Service</b> | Double VLAN Tag in an Ethernet frame for private VLAN.<br>IEEE 802.1p class of service; per port 4 priority queues.                                                                                                                                                                                                                             |

|                                               |                                                                                                                                                                                                                                       |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Traffic Prioritize</b>                     | Supports 4 physical queues, weighted fair queuing (WRR) and Strict Priority scheme, which follows 802.1p CoS tag and IPv4 ToS/ Diffserv information to prioritize the traffic of your industrial network.                             |
| <b>IGMP Snooping</b>                          | IGMP Snooping v1/v2c /v3 for multicast filtering and IGMP Query mode; also support unknown multicasting process forwarding policies- drop, flooding and forward to router port.                                                       |
| <b>Rate Control</b>                           | Ingress/Egress filtering for Broadcast, Multicast, Unknown DA or All packets.                                                                                                                                                         |
| <b>Port Mirroring</b>                         | Online traffic monitoring on multiple selected ports                                                                                                                                                                                  |
| <b>Port Security</b>                          | Port security to assign authorized MAC to specific port                                                                                                                                                                               |
| <b>DHCP</b>                                   | DHCP Client, DHCP Server with IP & MAC Address binding and DHCP agent (option 82).                                                                                                                                                    |
| <b>IEEE 802.1x</b>                            | Port based network access control.                                                                                                                                                                                                    |
| <b>Power over Ethernet</b>                    | IEEE 802.3af / IEEE 802.3at; End-span wiring architecture                                                                                                                                                                             |
| <b>PoE Operating Mode</b>                     | <b>Auto mode:</b> Auto detects and powering by IEEE 802.3af behaviors and IEEE 802.3at 1 Event plus LLDP protocol for high power powering.<br><b>Forced mode:</b> User configured power consumption without detection, classification |
| <b>PoE forwarding conductor</b>               | <b>JetNet 6710G-RJ /JetNet 6810G-RJ</b><br>RJ-45: V+ (3,6), V- (1,2)<br><b>JetNet 6710G-m12 /JetNet 6810G-m12</b><br>M12 D-code: V+ (3,4), V- (1,2)                                                                                   |
| <b>Power forwarding ability</b>               | IEEE 802.3af: 15.4w x8 ports<br>IEEE 802.3at: 200W in total at 60°C temperature                                                                                                                                                       |
| <b>Power Budget Control</b>                   | Port Based budget control with priority control, system will auto calculate total power and shut down low priority port when drawing current is over the power supply                                                                 |
| <b>Network Redundancy</b>                     |                                                                                                                                                                                                                                       |
| <b>Multiple Super Ring (MSR)<sup>TM</sup></b> | New generation Korenix Ring Redundancy Technology, Includes Rapid Super Ring, Rapid Dual Homing, TrunkRing <sup>TM</sup> , MultiRing <sup>TM</sup> and backward compatible with legacy Super Ring <sup>TM</sup> .                     |
| <b>Rapid Dual Homing (RDH)<sup>TM</sup></b>   | Multiple uplink paths to one or multiple upper switch                                                                                                                                                                                 |

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TrunkRing™</b>                | Integrate port aggregate function in ring path to get higher throughput ring architecture                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>MultiRing™</b>                | Coupling with multiple rings; JetNet 6710G supports up to 4 100M rings and 1 Gigabit ring in single switch.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Rapid Spanning Tree</b>       | IEEE802.1D-2004 Rapid Spanning Tree Protocol. Compatible with Legacy Spanning Tree and IEEE 802.1w.                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Interface</b>                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Enclosure Port</b>            | <p><b>10/100 Base-TX port</b><br/>           JetNet 6710G-RJ: 8 x rugged RJ-45<br/>           JetNet 6710G-M12: 8 x M12-D-Code 4-pin Female</p> <p><b>1000 Base-T port</b><br/>           JetNet 6710G-RJ: 2 x rugged IP-67 RJ-45<br/>           JetNet 6710G-M12: 2 x M12-A-Code 8-pin Female</p> <p><b>Console port &amp; Alarm Relay Output</b><br/>           M12 A-code Male for RS-232 and relay alarm output.</p> <p><b>Power port:</b> CTG-4F 4-pin Rugged IP-67 Connector</p>                        |
| <b>Cables</b>                    | <p>100 Base-TX: 2-pair UTP/STP/FTP Cat. 5 cable, EIA/TIA-568B 100-ohm (100m);<br/>           1000 Base-T: 4-pair UTP/STP/FTP Cat. 5e cable, EIA/TIA-568B 100-ohm (100m)</p> <p>It is recommended uses STP/FTP for environment with severe Electromagnetic interference.</p>                                                                                                                                                                                                                                   |
| <b>RS-232 &amp; Alarm Output</b> | <p>RS232: M12 A-code female 5-pin connector, TxD (Pin 1), RxD(Pin 2), Signal Ground (Pin 5)</p> <p>Alarm Output :M12 A-code female 5-pin connector 3, 4</p>                                                                                                                                                                                                                                                                                                                                                   |
| <b>LED Indicators</b>            | <p>10/100 Ethernet: Link (Green On)/Activity(Green Blinking)</p> <p>Gigabit Ethernet: Link(Green on)/Activity(Green Blinking)</p> <p>PoE: IEEE 802.3af (Green on: Power forwarding; Blinking: PoE detection )</p> <p style="padding-left: 40px;">IEEE 802.3at(Blue on: Power forwarding; Blinking: PoE detection)</p> <p>Power: System Power ready (Green on)</p> <p>Sys: System Ready (Green On)</p> <p>Alm: Alarm Relay Active (Green On)</p> <p>R.S.(Ring Status): Normal (Green on), Abnormal (Amber)</p> |

on), wrong ring port is connected (Green blinking), one of device's ring path is broken (Amber blinking)  
 Sys: System Ready (Green on)

**Power Requirements**

**System Power** Input Voltage: DC 48~57V, redundant input with reverse protection.

**Mechanical**

**Installation** Wall Mount

**Case** Steel metal.

**Dimension (mm)** JetNet 6710G-m12/ 6710G-RJ : 198 (W) x 145.2 (H) x 74 (D) w/o mounting kit

**Weight** JetNet 6710G-m12:1.92Kg  
 JetNet 6710G-RJ:1.855Kg

**Environmental**

**Operating Temperature** -40°C ~70°C: 15.4w x 8 ports

**Operating Humidity** -40°C ~60°C: 200w in total

**Storage Temperature** 0% ~ 90%, non-condensing

**Hi-Pot** -40°C ~ 85 °C

**Hi-Pot** AC 1.5KV for port to case, power to case.

**Regulatory Approvals**

**EMC** **EMI:** FCC Part 15B Class A, CE /EN61000-6-4, CISPR 16-1-2 / 16-2-1 /16-2-3, CISPR 22

**EMS:** CE/EN61000-6-2, EN61000-4-2,EN61000-4-3, EN61000-4-4, EN61000-4-5, EN61000-4-6, EN61000-4-8, EN61000-4-9

Compliance with the EMC standard of Railway application - **EN50121-4** and **EN50121-1**

**Vibration & Shock** **IEC 61373** for Railway and Rolling stock.

**Warranty** Global 5 years

*Note: Please refer to the latest datasheet. You can download from the web site.*

## 5.2 JetNet 6810G Product Specifications

### Technology

|                 |                                                      |
|-----------------|------------------------------------------------------|
| <b>Standard</b> | IEEE 802.3 10 Base-T Ethernet                        |
|                 | IEEE 802.3u 100 Base-TX Fast Ethernet                |
|                 | IEEE 802.3ab 1000 Base-T                             |
|                 | IEEE 802.3x Flow Control and Back-pressure           |
|                 | IEEE 802.3af Power over Ethernet                     |
|                 | IEEE 802.3at Power over Ethernet Plus (LLDP PoE)     |
|                 | IEEE 802.1AB Link Layer Discovery Protocol (LLDP)    |
|                 | IEEE 802.1p Class of Service (CoS)                   |
|                 | IEEE 802.1Q VLAN and GVRP                            |
|                 | IEEE 802.1D-2004 Rapid Spanning Tree Protocol (RSTP) |
|                 | IEEE 802.1s Multiple Spanning Tree (MSTP)            |
|                 | IEEE802.3ad Link Aggregation Protocol (LACP)         |
|                 | IEEE802.1x Port Based Network Access Protocol        |

### System Performance

|                             |                                                                                                           |
|-----------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Switch Technology</b>    | Store and Forward Technology with 32Gbps Switch Fabric.                                                   |
| <b>System Throughput</b>    | 8.3Mpps / 64 bytes packet size                                                                            |
| <b>CPU performance</b>      | 32 bits ARM-9E running at 180 Mhz and performance up to 200MIPS; Embedded hardware based watch-dog timer. |
| <b>System Memory</b>        | 8M bytes flash ROM, 64M bytes SDRAM.                                                                      |
| <b>Transfer packet size</b> | 64 bytes to 1522 bytes (includes VLAN Tag).                                                               |
| <b>MAC Address</b>          | 8K MAC address table.                                                                                     |
| <b>Packet Buffer</b>        | 1Mega bits shared memory for packet buffer.                                                               |
| <b>Transfer performance</b> | 14,880pps for Ethernet and 148,800 for Fast Ethernet, 1488,100 for Gigabit Ethernet                       |
| <b>Environment</b>          | Embedded board-level thermal detector for system                                                          |
| <b>Monitoring</b>           | temperature monitoring.                                                                                   |
| <b>Relay Alarm</b>          | Dry Relay output with 1A /24V DC ability.                                                                 |

### System Management

|                                               |                                                                                                                                                                                                                                                     |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Configuration and monitoring interface</b> | Telnet, local RS-232 console, Web- browser interface, SNMP, Trap and SMTP interface.<br>Cisco-Like CLI, Telnet, Web, TFTP/Web Update for firmware and configuration backup and restore, DHCP Client, warm reboot, reset to default, Admin password, |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                              |                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                              | Port Speed/Duplex Control, status, statistic, MAC address table display, static MAC, Aging time, SNMP v1, v2c, v3, Traps and RMON groups 1,2,3,9.                                                                                                                                                                                |
| <b>Telnet &amp; Local Console</b>                            | Supports command line interface with Cisco like commands with maximum 4 sessions and also supports SSH.                                                                                                                                                                                                                          |
| <b>SNMP</b>                                                  | v1, v2c, V3 with SNMP trap function, trap station up to 4 and can be manually configured the trap server IP address.                                                                                                                                                                                                             |
| <b>SNMP MIB</b>                                              | MIBII, Bridge MIB, Ethernet-like MIB, VLAN MIB, IGMP MIB, Korenix Private MIB.                                                                                                                                                                                                                                                   |
| <b>Korenix Utility</b>                                       | Supports JetView and JetView Pro with IEEE 802.1AB Link Layer Discovery Protocol for device finding and link topology discovery                                                                                                                                                                                                  |
| <b>Network Time Protocol</b>                                 | Supports NTP protocol with daylight saving and localize time sync function.                                                                                                                                                                                                                                                      |
| <b>Management IP Security</b>                                | IP address security to prevent unauthorized access                                                                                                                                                                                                                                                                               |
| <b>E-mail Warning System Log</b>                             | 4 receipt E-mail accounts with server authentication<br>Supports both of Local or remote Server with authentication                                                                                                                                                                                                              |
| <b>Network Performance</b>                                   |                                                                                                                                                                                                                                                                                                                                  |
| <b>Port Configuration</b>                                    | Port link Speed, Link mode, current status and enable/disable.                                                                                                                                                                                                                                                                   |
| <b>Port Trunk</b>                                            | IEEE 802.3ad port aggregation and static port trunk; trunk member up to 8 ports and maximum 5 trunk groups include Gigabit Ethernet port.                                                                                                                                                                                        |
| <b>VLAN</b>                                                  | IEEE 802.1Q VLAN with GVRP. 256 VLAN groups, VLAN ID from 1 to 4094.<br>Supports Trunk, Hybrid and Link access modes.                                                                                                                                                                                                            |
| <b>Private VLAN</b>                                          | Direct client ports in isolated/community VLAN to promiscuous port in primary VLAN                                                                                                                                                                                                                                               |
| <b>IEEE 802.1 Q-in-Q Class of Service Traffic Prioritize</b> | Double VLAN Tag in an Ethernet frame for private VLAN.<br>IEEE 802.1p class of service; per port 4 priority queues.<br>Supports 4 physical queues, weighted fair queuing (WRR) and Strict Priority scheme, which follows 802.1p CoS tag and IPv4 ToS/ Diffserv information to prioritize the traffic of your industrial network. |

|                                               |                                                                                                                                                                                                                                       |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IGMP Snooping</b>                          | IGMP Snooping v1/v2c /v3 for multicast filtering and IGMP Query mode; also support unknown multicasting process forwarding policies- drop, flooding and forward to router port.                                                       |
| <b>Rate Control</b>                           | Ingress/Egress filtering for Broadcast, Multicast, Unknown DA or All packets.                                                                                                                                                         |
| <b>Port Mirroring</b>                         | Online traffic monitoring on multiple selected ports                                                                                                                                                                                  |
| <b>Port Security</b>                          | Port security to assign authorized MAC to specific port                                                                                                                                                                               |
| <b>DHCP</b>                                   | DHCP Client, DHCP Server with IP & MAC Address binding and DHCP agent (option 82).                                                                                                                                                    |
| <b>IEEE 802.1x</b>                            | Port based network access control.                                                                                                                                                                                                    |
| <b>Power over Ethernet</b>                    | IEEE 802.3af / IEEE 802.3at; End-span wiring architecture                                                                                                                                                                             |
| <b>PoE Operating Mode</b>                     | <b>Auto mode:</b> Auto detects and powering by IEEE 802.3af behaviors and IEEE 802.3at 1 Event plus LLDP protocol for high power powering.<br><b>Forced mode:</b> User configured power consumption without detection, classification |
| <b>PoE forwarding conductor</b>               | <b>JetNet 6710G-RJ /JetNet 6810G-RJ</b><br>RJ-45: V+ (3,6), V- (1,2)<br><b>JetNet 6710G-m12 /JetNet 6810G-m12</b><br>M12 D-code: V+ (3,4), V- (1,2)                                                                                   |
| <b>Power forwarding ability</b>               | IEEE 802.3af: 15.4w<br>IEEE 802.3at: 30w<br>120W total PoE power budget at 60°C operating temperature environment.                                                                                                                    |
| <b>Power Budget Control</b>                   | Port Based budget control with priority control, system will auto calculate total power and shut down low priority port when drawing current is over the power supply                                                                 |
| <b>Network Redundancy</b>                     |                                                                                                                                                                                                                                       |
| <b>Multiple Super Ring (MSR)<sup>TM</sup></b> | New generation Korenix Ring Redundancy Technology, Includes Rapid Super Ring, Rapid Dual Homing, TrunkRing <sup>TM</sup> , MultiRing <sup>TM</sup> and backward compatible with legacy Super Ring <sup>TM</sup> .                     |
| <b>Rapid Dual Homing (RDH)<sup>TM</sup></b>   | Multiple uplink paths to one or multiple upper switch                                                                                                                                                                                 |
| <b>TrunkRing<sup>TM</sup></b>                 | Integrate port aggregate function in ring path to get higher throughput ring architecture                                                                                                                                             |

**MultiRing™**

Coupling with multiple rings; JetNet 6710G/6810G supports up to 4 100M rings and 1 Gigabit ring in single switch.

**Rapid Spanning Tree**

IEEE802.1D-2004 Rapid Spanning Tree Protocol. Compatible with Legacy Spanning Tree and IEEE 802.1w.

**Interface**

**Enclosure Port**

**10/100 Base-TX port**

JetNet 6810G-RJ: 8 x rugged RJ-45

JetNet 6810G-M12: 8 x M12-D-Code 4-pin Female

**1000 Base-T port**

JetNet 6810G-RJ: 2 x rugged IP-67 RJ-45

JetNet 6810G-M12: 2 x M12-A-Code 8-pin Female

**Console port & Alarm Relay Output**

M12 A-code Male for RS-232 and relay alarm output.

**Power port:** CTG-4F 4-pin Rugged IP-67 Connector

**Cables**

100 Base-TX: 2-pair UTP/STP/FTP Cat. 5 cable, EIA/TIA-568B 100-ohm (100m);

1000 Base-T: 4-pair UTP/STP/FTP Cat. 5e cable, EIA/TIA-568B 100-ohm (100m)

It is recommended uses STP/FTP for environment with severe Electromagnetic interference.

**RS-232 & Alarm Output**

RS232: M12 A-code female 5-pin connector, TxD (Pin 1), RxD(Pin 2), Signal Ground (Pin 5)

Alarm Output :M12 A-code female 5-pin connector 3, 4

**LED Indicators**

10/100 Ethernet: Link (Green On)/Activity(Green Blinking)

Gigabit Ethernet: Link(Green on)/Activity(Green Blinking)

PoE: IEEE 802.3af (Green on: Power forwarding; Blinking: PoE detection )

IEEE 802.3at(Blue on: Power forwarding; Blinking: PoE detection)

Power: System Power ready (Green on)

Sys: System Ready (Green On)

Alm: Alarm Relay Active (Green On)

R.S.(Ring Status): Normal (Green on), Abnormal (Amber on), wrong ring port is connected (Green blinking), one



of device's ring path is broken (Amber blinking)

**Power Requirements**

**System Power** Input Voltage: DC 24V (22~49V), with reverse protection. 2 conductors aggregated as one pole.

**Mechanical**

**Installation** Wall Mount

**Case** Steel metal

**Dimension (mm)** **JetNet 6810G-m12/ 6810G-RJ:**  
 198 (W) x 145.2 (H) x 120 (D) w/o mounting kit  
 230.6 (W) x 145.2 (H) x 120 (D) w/mounting kit

**Weight** JetNet 6810G-m12: 3.14Kg  
 JetNet 6810G-RJ: 3.065Kg

**Environmental**

**Operating Temperature** -40°C ~60°C: 120W in total PoE output power budget

**Operating Humidity** 0% ~ 90%, non-condensing

**Storage Temperature** -40°C ~ 85°C

**Hi-Pot** AC 1.5KV for port to case, power to case.

**Regulatory Approvals**

**EMC** **EMI:** FCC Part 15B Class A, CE /EN61000-6-4, CISPR 16-1-2 / 16-2-1 /16-2-3, CISPR 22  
**EMS:**CE/EN61000-6-2, EN61000-4-2,EN61000-4-3, EN61000-4-4, EN61000-4-5, EN61000-4-6, EN61000-4-8, EN61000-4-9

Compliance with the EMC standard of Railway application - **EN50121-4** and **EN50121-1**

**Vibration & Shock** **IEC 61373** for Railway and Rolling stock.

**Warranty** Global 5 years

**5.3 Korenix Private MIB for JetNet 6710G and JetNet 6810G**

Korenix provides many standard MIBs for users to configure or monitor the switch's configuration by SNMP. But, since some commands can't be found in standard MIB, Korenix provides Private MIB to meet up the need. Compile the private MIB file by your SNMP tool. You can then use it. Private

Private MIB tree is the same as the web tree. This is easier to understand and use. If you are not familiar with standard MIB, you can directly use private MIB to manage /monitor the switch, no need to learn or find where the OIDs of the commands are MIB can be found in product CD or downloaded from Korenix Web site.


The path of the **JetNet 6710G** is **1.3.6.1.4.1.24062.2.3.3** and **JetNet 6810G** is **1.3.6.1.4.1.24062.2.3.8**. The MIB shown as below:

|               |                                                                                                                          |
|---------------|--------------------------------------------------------------------------------------------------------------------------|
| Name:         | jetnet6710G                                                                                                              |
| Type:         | OBJECT-IDENTIFIER                                                                                                        |
| OID:          | 1.3.6.1.4.1.24062.2.3.3                                                                                                  |
| Full path:    | iso(1).org(3).dod(6).internet(1).private(4).enterprises(1).korenix(24062).products(2).managedPOESwitch(3).jetnet6710G(3) |
| Module:       | Jetnet6710G                                                                                                              |
| Parent:       | managedPOESwitch                                                                                                         |
| First child:  | systemInfo                                                                                                               |
| Next sibling: | jetnet5710G                                                                                                              |

The JetNet 6710G and 6810G private MIB supports various of MIB entries, which are system basic setting, port configuration, PoE configuration, network redundancy, VLAN, traffic priority, multicasting, snmp, security, system warning, monitoring and configuration saving. User can monitoring and configures JetNet 6710G by SNMP MIB browser tools and through those MIB entries to achieve remote management.

The Private MIB includes thirteen major entries a below for system configuration and monitoring.

**System information: read only**

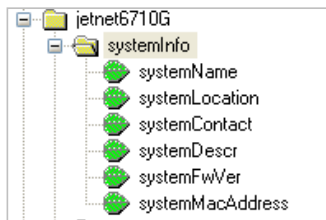

**Response bindings:**

|     |                                                                                                                                    |
|-----|------------------------------------------------------------------------------------------------------------------------------------|
| 1:  | systemName.0 [octet string] Korenix -PoE Switch JN 6710G-m12 [4B.6F.72.65.6E.69.78.20.2D.50.6F.45.20.53.77.69.74.63.68.20.4A.4     |
| 2:  | systemLocation.0 [octet string] Richard's seat [52.69.63.68.61.72.64.27.73.20.73.65.61.74.20 [hex]]                                |
| 3:  | systemContact.0 [octet string] I-Testing Team - Kenny [49.2D.54.65.73.74.69.6E.67.20.54.65.61.6D.20.2D.20.4B.65.6E.6E.79.20 [hex]] |
| 4:  | systemDescr.0 [octet string] Industrial Managed Ethernet Switch JetNet6710G [49.6E.64.75.73.74.72.69.61.6C.20.4D.61.6E.61.67.65.   |
| 5:  | systemFwVer.0 [octet string] JetNet6710G-0.1.32-20100830-16:10:40 [4A.65.74.4E.65.74.36.37.31.30.47.2D.30.2E.31.2E.33.32.2D.3      |
| 6:  | systemMacAddress.0 [octet string] 00:12:77:FF:15:33 [00.12.77.FF.15.33 [hex]]                                                      |
| 7:  | switchSettingSystemName.0 [octet string] Korenix -PoE Switch JN 6710G-m12 [4B.6F.72.65.6E.69.78.20.2D.50.6F.45.20.53.77.69.74.     |
| 8:  | switchSettingSystemLocation.0 [octet string] Richard's seat [52.69.63.68.61.72.64.27.73.20.73.65.61.74.20 [hex]]                   |
| 9:  | switchSettingSystemContact.0 [octet string] I-Testing Team - Kenny [49.2D.54.65.73.74.69.6E.67.20.54.65.61.6D.20.2D.20.4B.65.6E.   |
| 10: | adminPasswordUserName.0 [octet string] admin [61.64.6D.69.6E [hex]]                                                                |

**Basic Setting MIB entry: read and write**

**Port Configuration MIB entry: Read and Write**

**PoE MIB entry: Read and Write**

**Network redundancy MIB entry: Read and Write**

**Vlan MIB entry:** Read and Write

**Traffic prioritization MIB entry:** Read and Write

**Multicast Filtering MIB entry:** Read and Write


**SNMP MIB entry:** Read and write

**Security MIB entry:** Read and write

**Warning MIB entry:** Read and write

**Monitor and Diag:** Read and write

**Save MIB entry:** write only

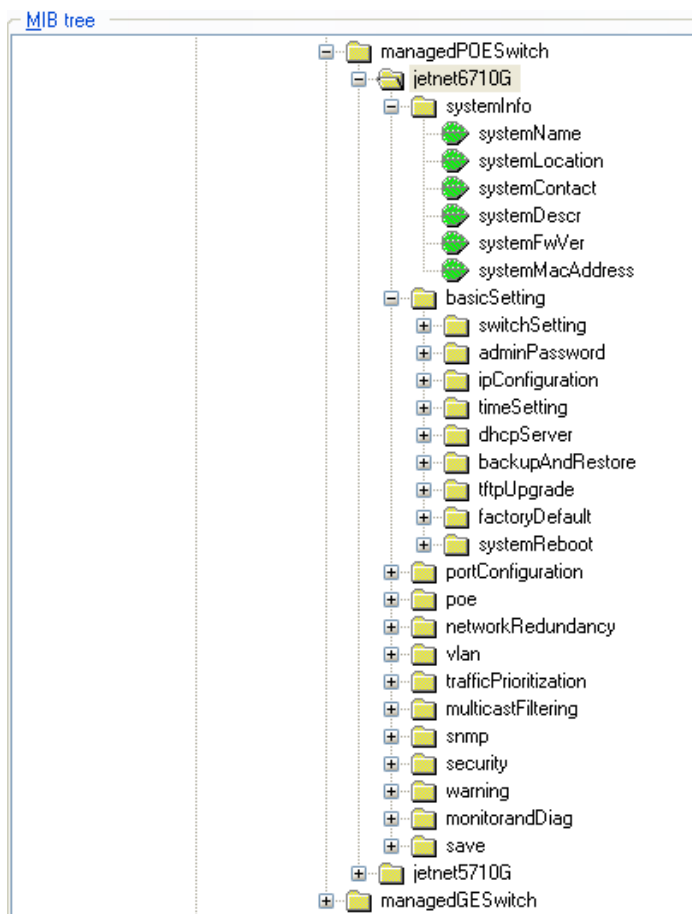

## 5.4 Revision History

| <b>Edition</b> | <b>Date</b> | <b>Modifications</b>                                                                                                                                                                                                                                                                                                                                        |
|----------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| V01            | 7-Nov,2011  | Modify from JetNet 6710G user manual.                                                                                                                                                                                                                                                                                                                       |
| V02            | 15-Nov,2011 | Modify 6810G product specification:<br>Support IEEE 802.3at function.                                                                                                                                                                                                                                                                                       |
| V03            | 16-Nov,2011 | Modify model description in user manual – JetNet 6710G/JetNet 6810G<br>Modify PoE LED – blinking ( Detection)<br>Modify CLI command for system Power budget – JetNet 6810G power budget fixed (120W), JetNet 6710G supports 200W maximum.                                                                                                                   |
| V04            | 17-Nov,2011 | Modify some operating temperature with power budget.<br>Integrated JetNet 6710G / JetNet 6810G in one:<br>Add 6710G dimension drawing, appearance, modify feature with model information, and modify preface information.<br>Add current limit number for PoE. (0.686A)<br>Modify IEEE 802.3ab 1000Base-T and apply cable change to Cat5e for Gigabit port. |
| V1.0           | 26-Mar,2012 | JN 6810G input high vltage change to DC49V, based on Integration Testing report.                                                                                                                                                                                                                                                                            |
| V1.0b          | 30-May-2012 | Add JetNet 6710G-HVDC model with information – feature, dimension, packing list, RJ-45/M12 pin assignment modification, new earth-GNDing / surge grounding update forHVDC model, DHCP Serve (port based fixed IP, DHCP relay with circuit ID, DHCP server with option 82 -circuit ID)                                                                       |
| V1.1           | 17-Feb-2014 | Add M12 A-Code to M12 A-code wiring pin assignment.                                                                                                                                                                                                                                                                                                         |

## 5.5 About Korenix

### Less Time At Work! Fewer Budget on applications!

The Korenix business idea is to let you spend less time at work and fewer budget on your applications. Do you really want to go through all the troubles but still end up with low quality products and lousy services? Definitely not! This is why you need Korenix. Korenix offers complete product selection that fulfills all your needs for applications. We provide easier, faster, tailor-made services, and more reliable solutions. In Korenix, there is no need to compromise. Korenix takes care of everything for you!

### Fusion of Outstandings

**You can end** your searching here. Korenix Technology is your one-stop supply center for industrial communications and networking products. Korenix Technology is established by a group of professionals with more than 10 year experience in the arenas of industrial control, data communications and industrial networking applications. Korenix Technology is well-positioned to fulfill your needs and demands by providing a great variety of tailor-made products and services. Korenix's industrial-grade products also come with quality services. No more searching, and no more worries. Korenix Technology stands by you all the way through.

### Core Strength---Competitive Price and Quality

With our work experience and in-depth know-how of industrial communications and networking, Korenix Technology is able to combine Asia's research / development ability with competitive production cost and with quality service and support.

### Global Sales Strategy

Korenix's global sales strategy focuses on establishing and developing trustworthy relationships with value added distributors and channel partners, and assisting OEM distributors to promote their own brands. Korenix supplies products to match local market requirements of design, quality, sales, marketing and customer services, allowing Korenix and distributors to create and enjoy profits together.

### Quality Services

**KoreCARE---** KoreCARE is Korenix Technology's global service center, where our professional staffs are ready to solve your problems at any time and in real-time. All of Korenix's products have passed ISO-9000/EMI/CE/FCC/UL certifications, fully satisfying your demands for product quality under critical industrial environments. Korenix global service center's e-mail is [koreCARE@korenix.com](mailto:koreCARE@korenix.com)

### 5 Years Warranty

Each of Korenix's product line is designed, produced, and tested with high industrial standard. Korenix warrants that the Product(s) shall be free from defects in materials and workmanship for a period of five (5) years from the date of delivery provided that the Product was properly installed and used. This warranty is voided if defects, malfunctions or failures of the warranted Product are caused by damage resulting from force measure (such as floods, fire, etc.), environmental and atmospheric disturbances, other external forces such as power line disturbances, host computer malfunction, plugging the board in under power, or incorrect cabling; or the warranted Product is misused, abused, or operated, altered and repaired in an unauthorized or improper way

**Business service :** [sales@korenix.com](mailto:sales@korenix.com)

**Customer service:** [koreCARE@korenix.com](mailto:koreCARE@korenix.com)